


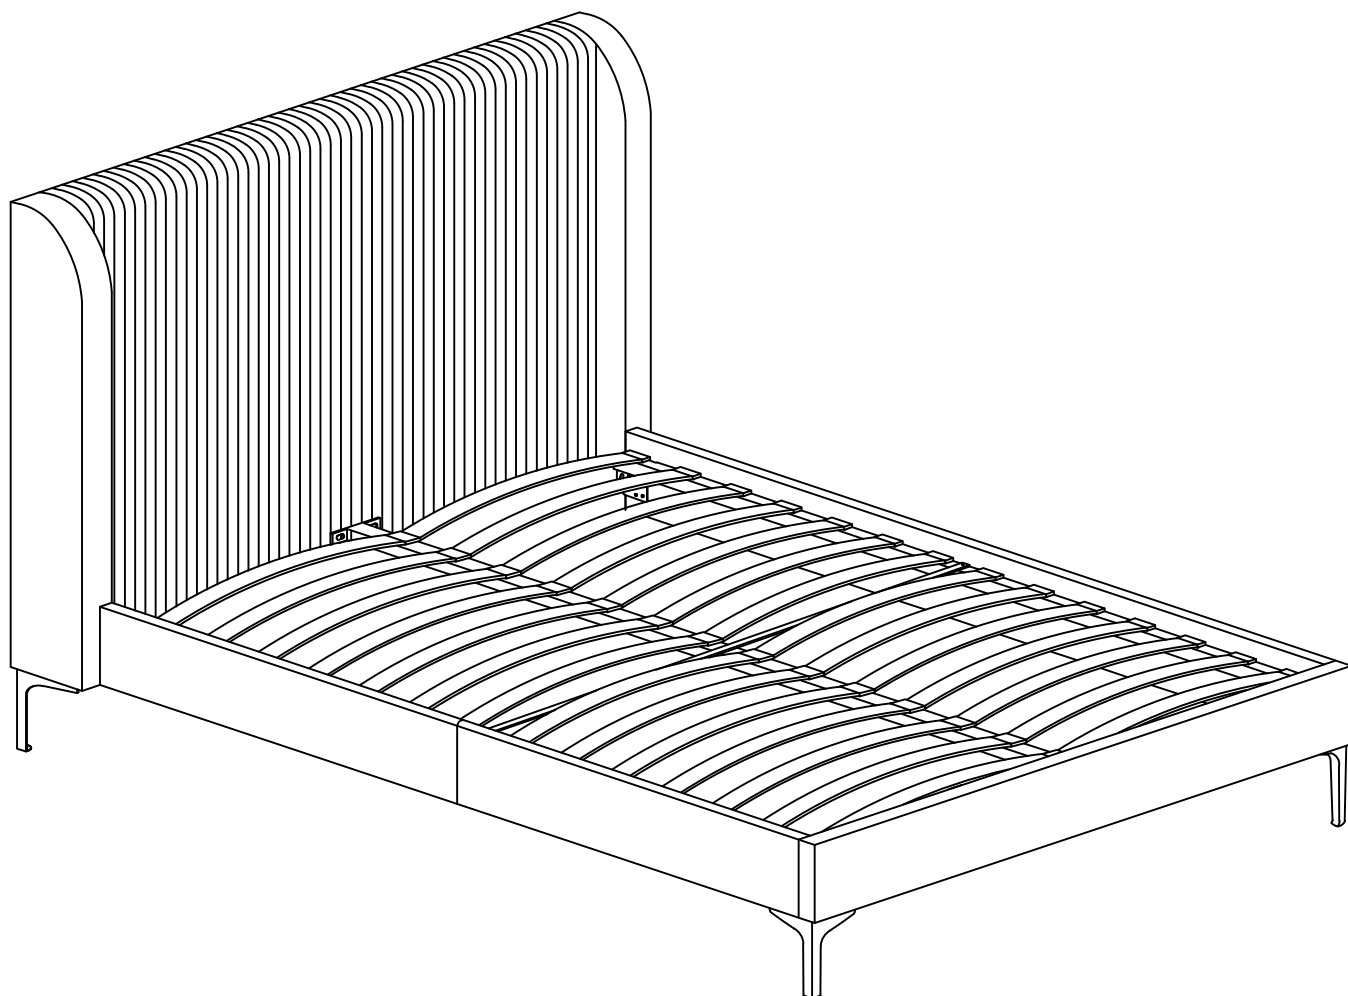

**Fantastic
Furniture**

Version 1.0



Two People



Required

Clarissa

Bed Queen

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

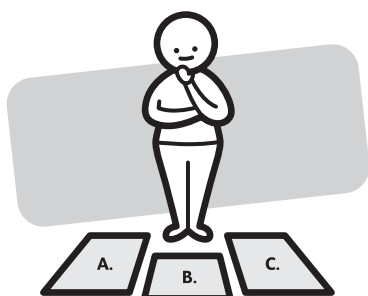

Identify and lay out all of the components before you begin assembly.

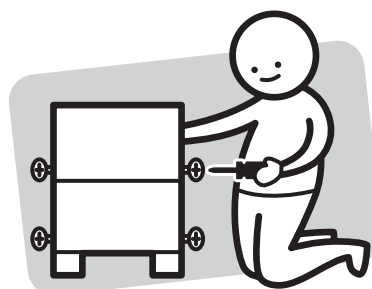

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need


to assemble the product



DO NOT USE

Other tools you need:

Phillips head screwdriver

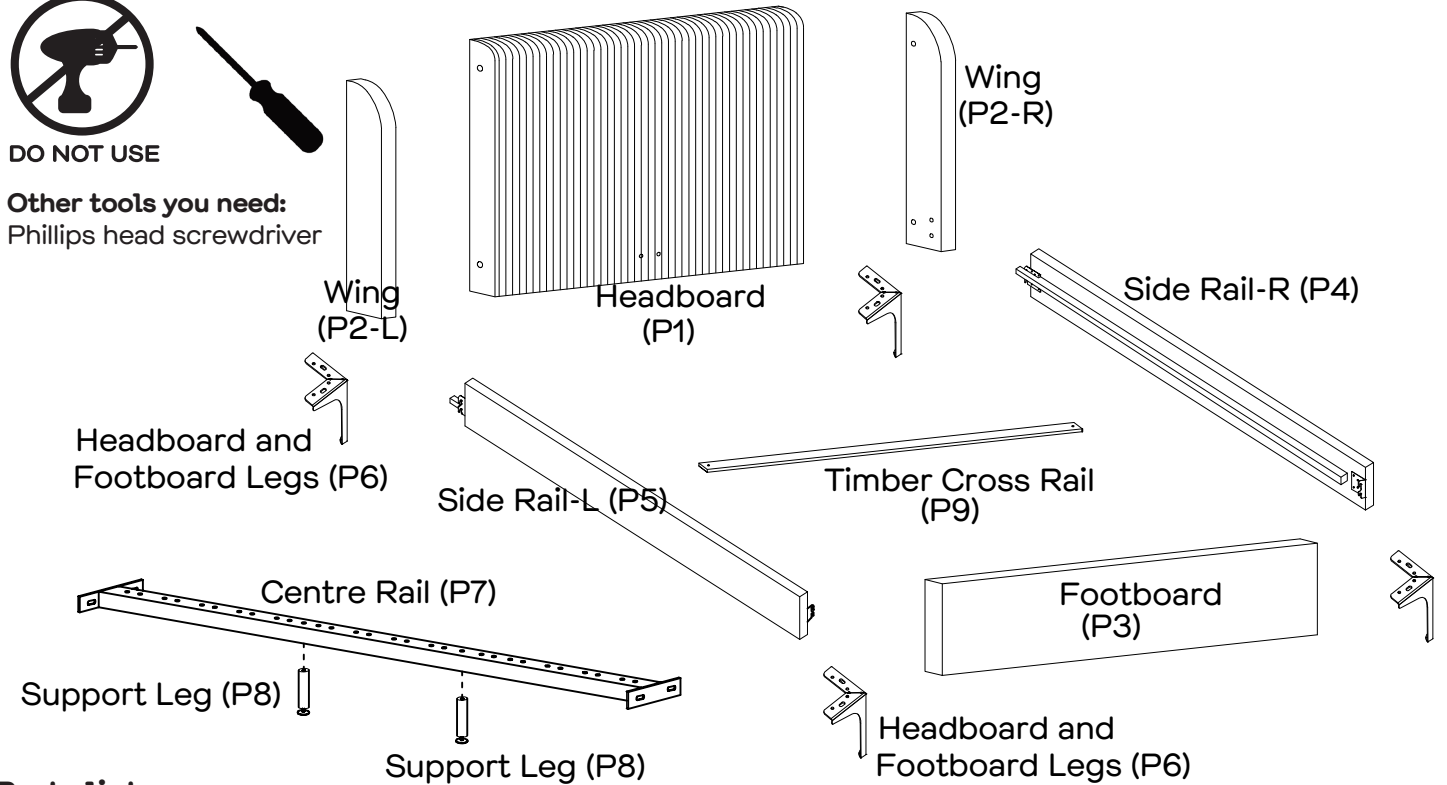




Parts list

Box 1 : Wings (P2-R;P2-L); Footboard (P3) ; Side Rail-R (P4) ; Side Rail-L (P5) ;
4 x Headboard and footboard Legs (P6) ; Centre Rail (P7) ; 2 x Support Legs (P8) ;
Timber Cross Rail (P9) ;28 x End Connectors (P10) ; 14 x Centre Connectors (P11) ;
Hardware Pack

Box 2 : Headboard (P1) ; 28 x Slats (P12)

28 x End Connectors (P10) 14 x Centre Connectors (P11)

28 x Slats (P12)

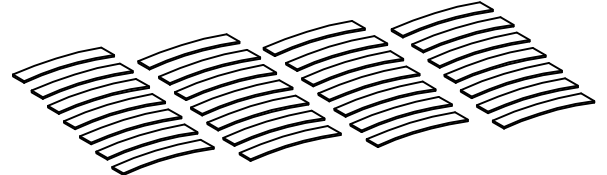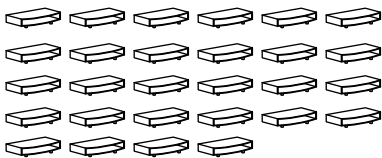

Hardware pack



(Big Head Bolts)
4 x M8 x 18mm
(H1)



(Small Bolts)
8 x M6 x 20mm
(H2)



(Medium Bolts)
10 x M8 x 20mm
(H3)



(Large Bolts)
4 x M8 x 50mm
(H4)



(Screws)
8 x M4 x 25mm
(H5)



(Felt Pad)
1 x 40 x 20 x 3mm
(H6)



(Small Washers)
8 x M6 x 19mm
(H7)



(Large Washers)
10 x M8 x 19mm
(H8)




(Small Allen Key)
1 x M4
(H9)








(Large Allen Key)
1 x M5
(H10)

Step 1

Two People

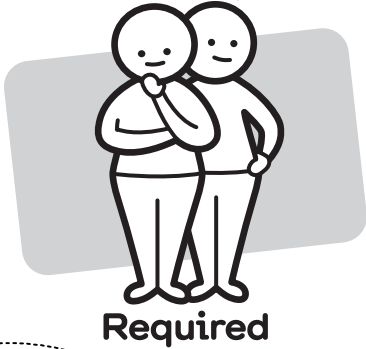



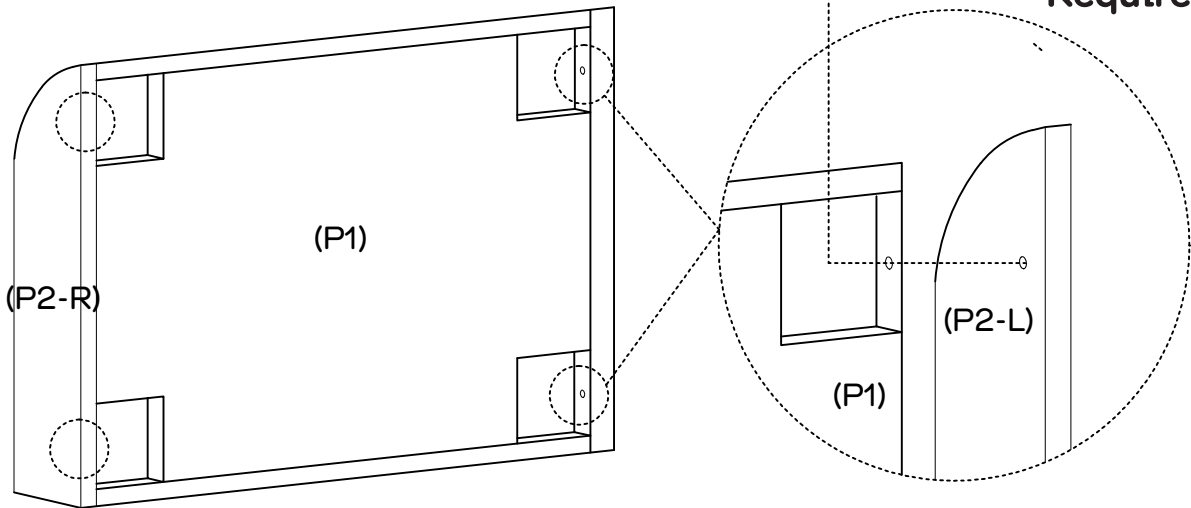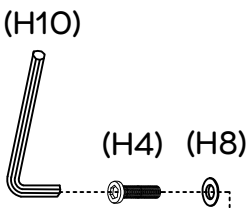


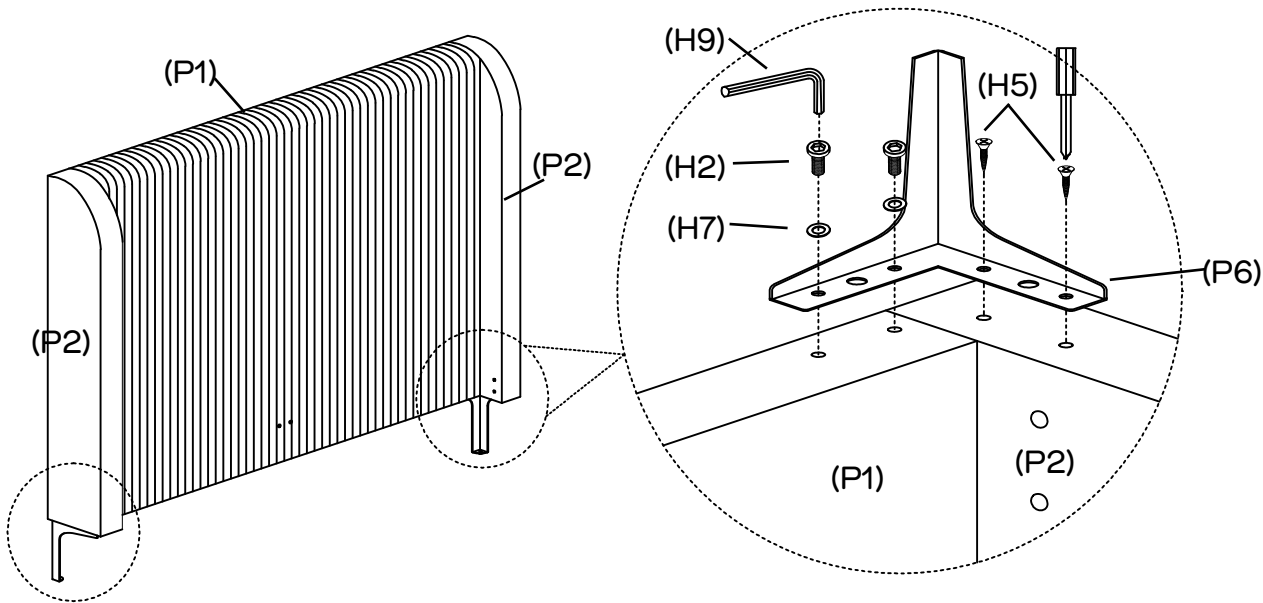
You will need		
		
4 x Bolts x 50mm (H4)	4 x Washers x M8 (H8)	Allen Key x M5 (H10)



Attach 2 x wings (P2-L/P2-R) to headboard (P1) with 4 x large bolts (H4) and 4 x large washers (H8), tightening with the allen key (H10).






Step 2


You will need				
				
4 x Bolts x 20mm (H2)	4 x Screws x 25mm (H5)	4 x Washers x M6 (H7)	Allen Key x M4 (H9)	Phillips Head Screwdriver (not provided)



Attach 2 x headboard legs (P6) to the bottom of the headboard (P1) using 4 x small washers (H7), 4 x small bolts (H2), tightening using allen key (H9). Further secure the legs (P6) using 4 x small screws (H5), tightening with a phillips head screwdriver.




Step 3



You will need		
		
4 x Bolts x 20mm (H2)	2 x Screws x 25mm (H5)	4 x Washers x M6 (H7)
		
Allen Key x M4 (H9)	Phillips Head Screwdriver (not provided)	

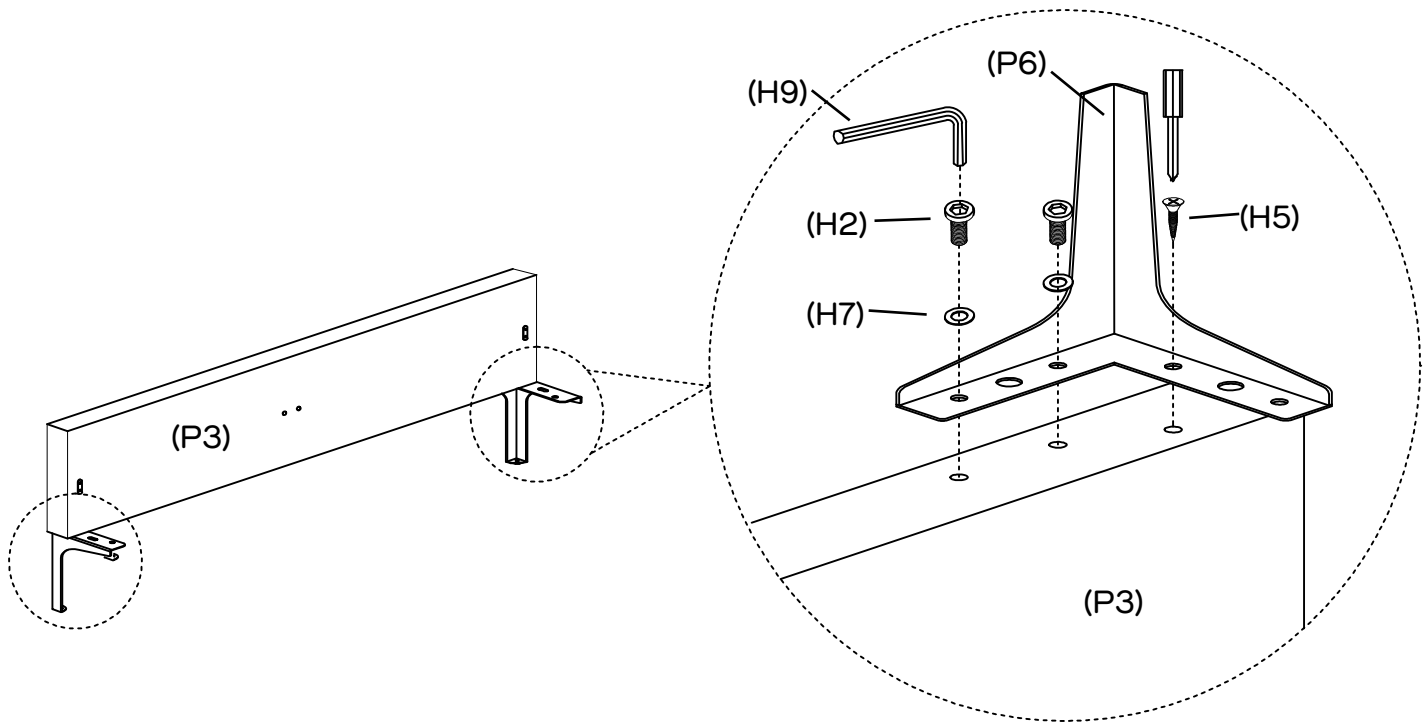

Attach 2 x footboard legs (P6) to the bottom of the footboard (P3) using 4 x small washers (H7), 4 x small bolts (H2), tightening using allen key (H9).
Further secure the legs (P6) using 2 x small screws (H5), tightening with a phillips head screwdriver.

Step 4

You will need		
		
4 x Bolts x 18mm (H1)	4 x Bolts x 20mm (H3)	Allen Key x M5 (H10)

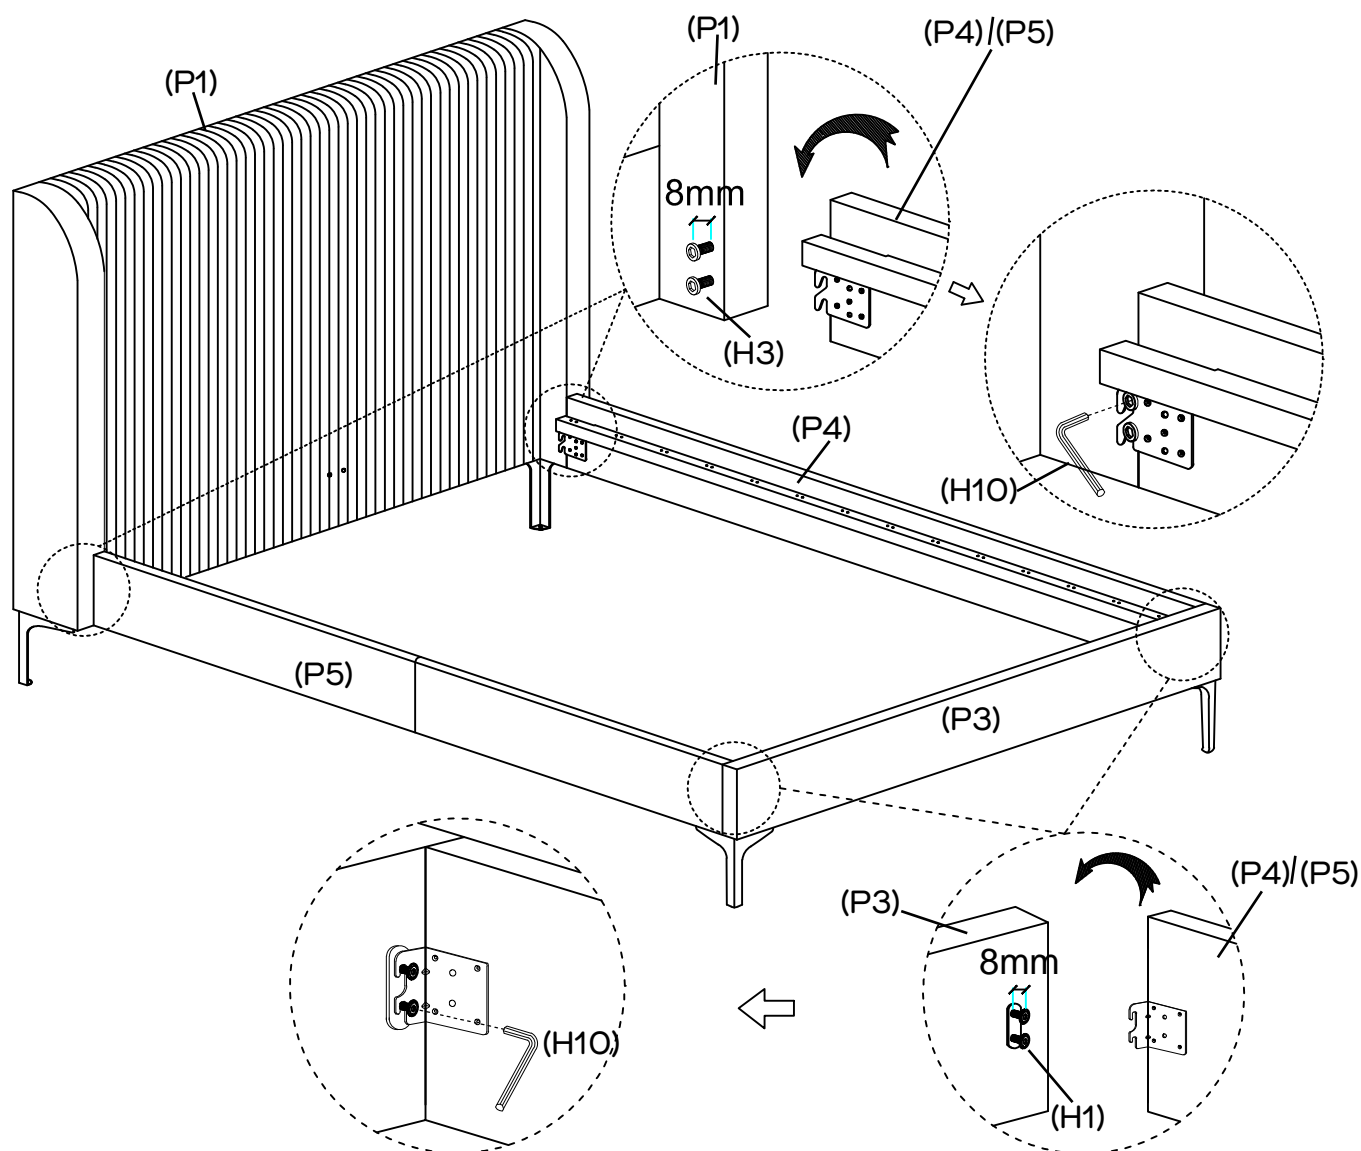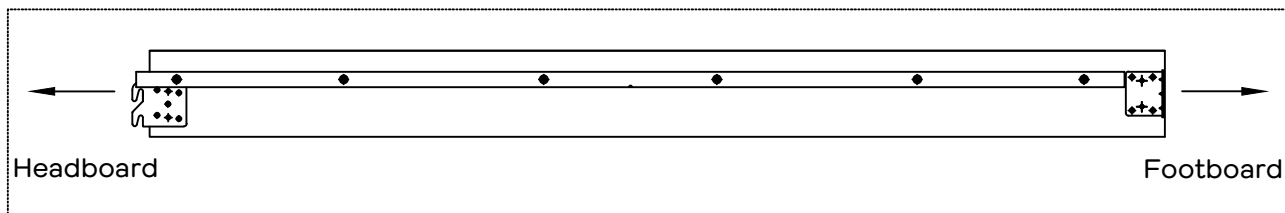




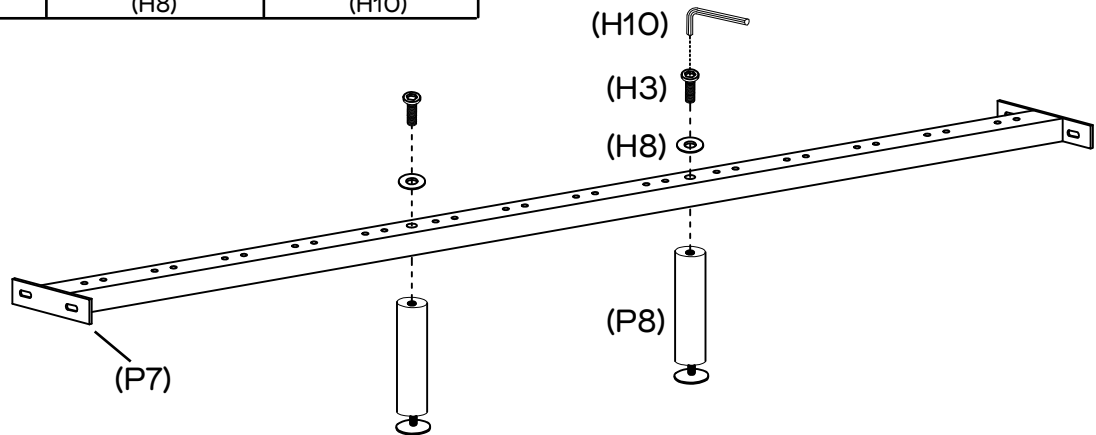
Insert 4 x medium bolts (H3) into the nuts of the headboard (P1), and install 4 x big head bolts (H1) to the brackets of footboard (P3) and tighten two thirds of the way with the allen key (H10) as shown.

Attach 2 x side rails (P4/P5) to the headboard (P1) and footboard (P3) by slotting the brackets on the side rails (P4/P5) over the bolts as shown.

Do not fully tighten the bolts yet.




Step 5


You will need		
		
2 x Bolts x 20mm (H3)	2 x Washers x M8 (H8)	Allen key x M5 (H10)



Attach 2 x support legs (P8) to the centre rail (P7) as shown using 2 x medium bolts (H3) and 2 x large washers (H8) , tightening with the large allen key (H10).

Step 6

You will need		
		
4 x Bolts x 20mm (H3)	4 x Washers x M8 (H8)	Allen Key x M5 (H10)

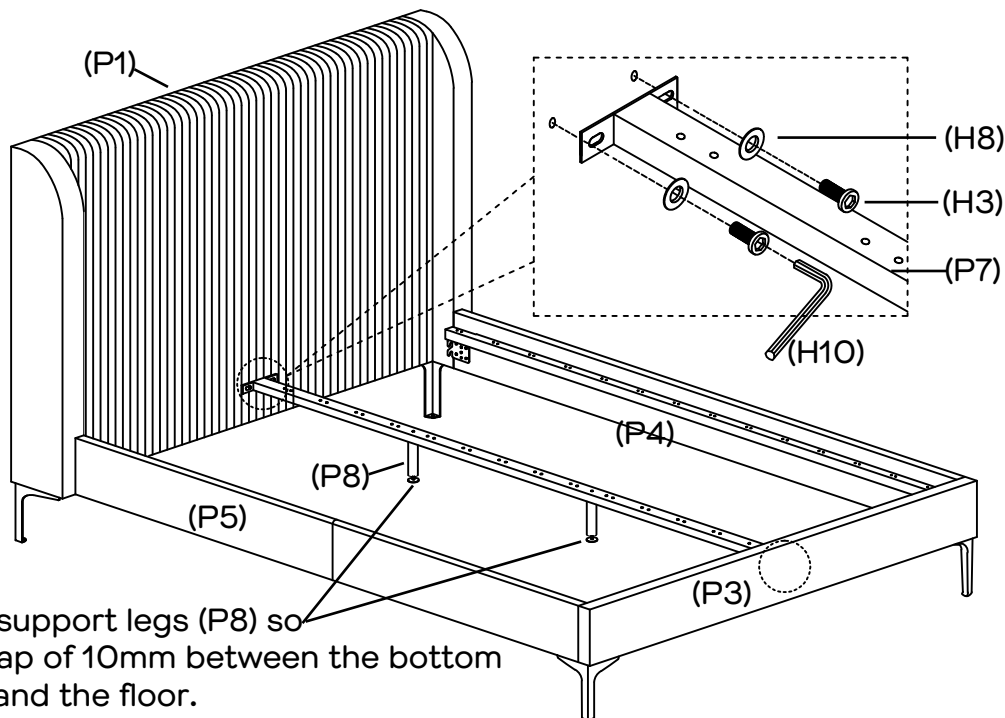




Adjust the support legs (P8) so there is a gap of 10mm between the bottom of the legs and the floor.


Insert the centre rail (P7) between the headboard (P1) and footboard (P3) as shown. Secure using 4 x medium bolts (H3) and 4 x large washers (H8), tightening with the large allen key (H10).

Do not fully tighten the bolts yet.

Step 7


You will need	
	
28 x End Connectors (P10)	14 x Centre Connectors (P11)
	
28 x Slats (P12)	

1

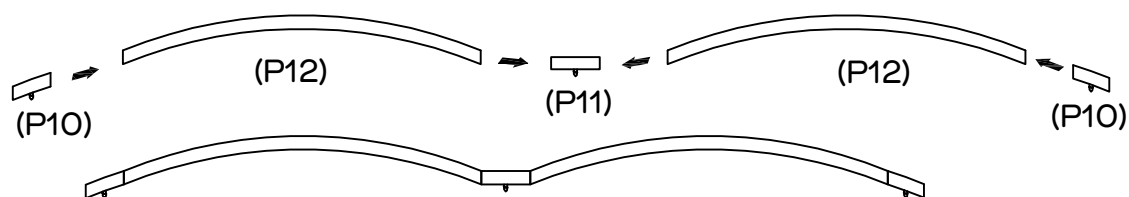


Connect 2 x End Connectors (P10), 2 x slats (P12) and a Centre Connector (P11) together as shown.

2

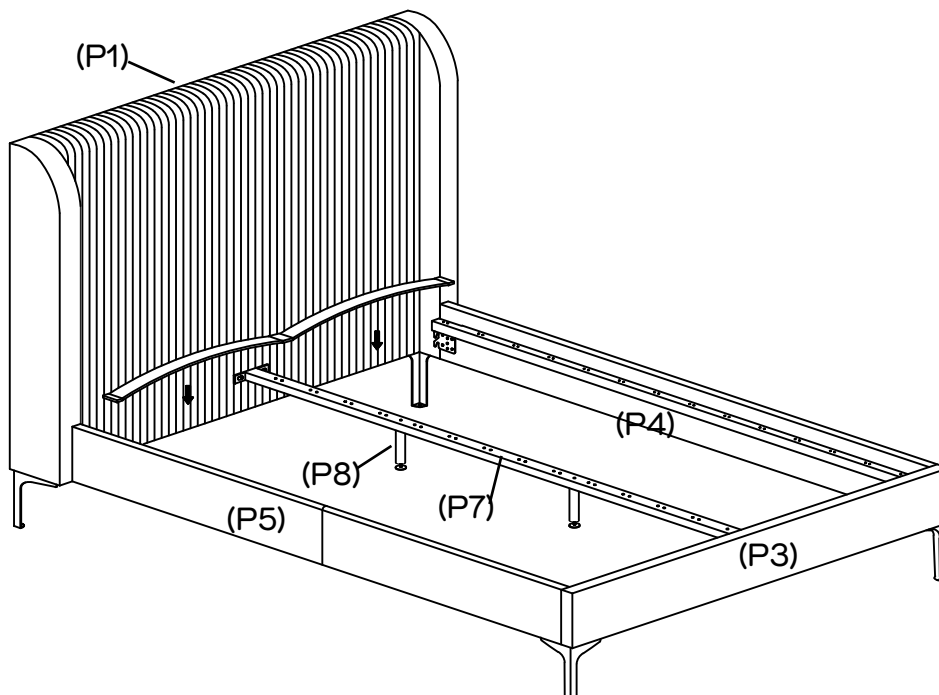


Insert the full slat into the side rails (P4/P5) and the centre rail (P7) by pressing down firmly.

3

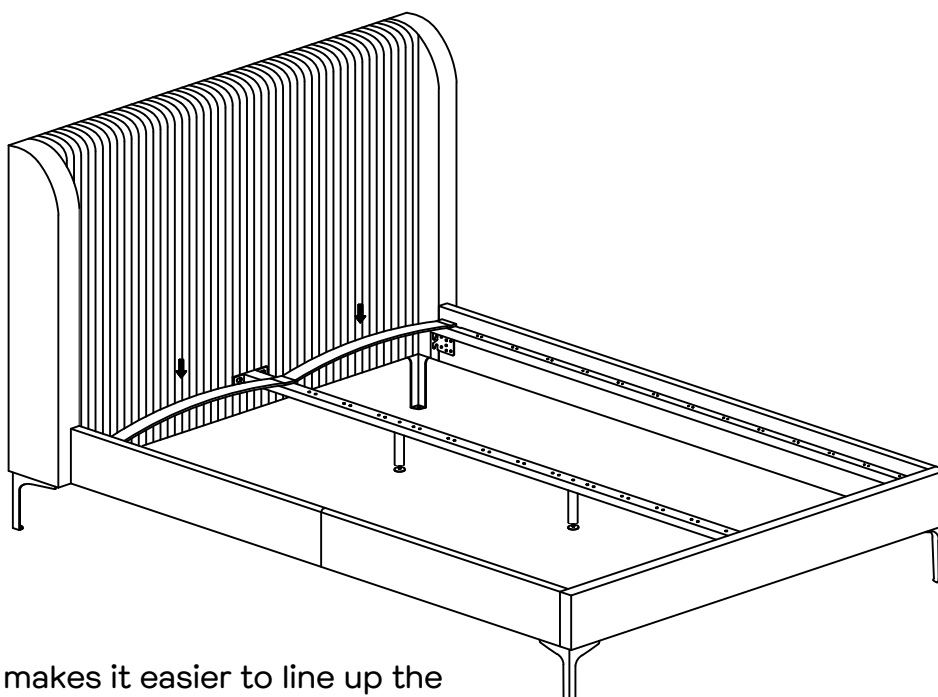

Sometimes it makes it easier to line up the holes if you press down in the middle of the slat to flatten it out.





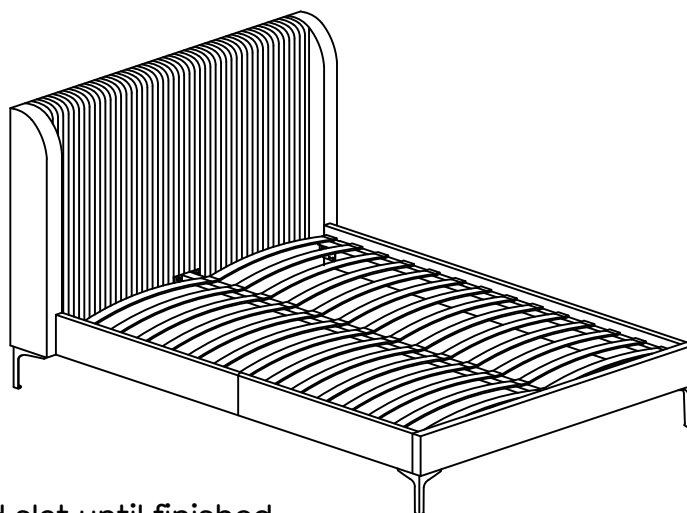4




Repeat for every bed slat until finished.

Step 8

You will need

			
2 x Screws x 25mm (H5)	Allen Key x M5 (H10)	Felt Pad 1 x 40 x 20 x 3mm (H6)	Phillips head Screwdriver (not provided)

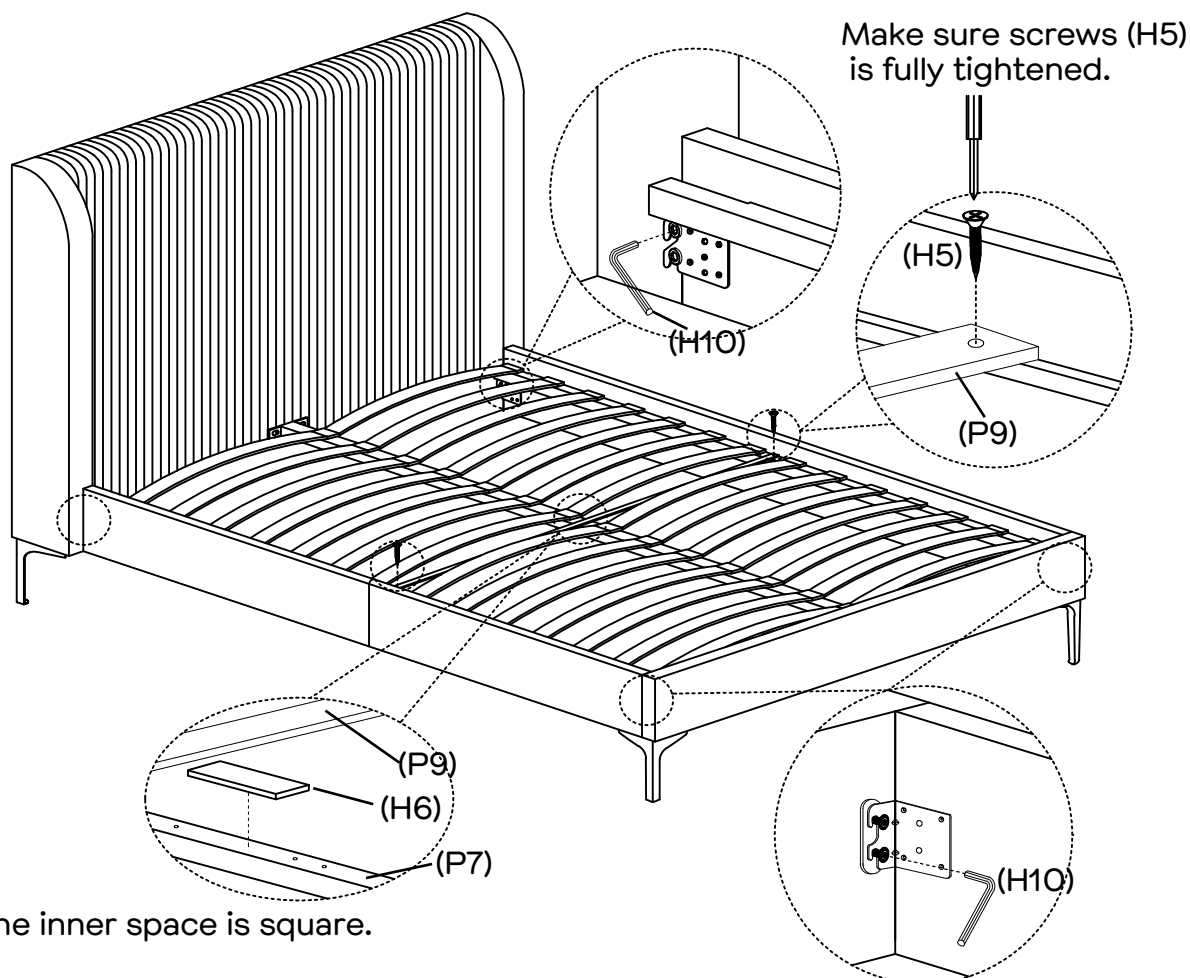


Ensure the inner space is square.

Attach the felt pad (H6) to the centre of the centre rail (P7) as shown. Secure the timber cross rail (P9) into place in the centre of the 2 x side rails (P4/P5) using 2 x screws (H5), fully tightening using a Phillips Head Screwdriver.

You may now fully tighten all bolts on the headboard (P1), footboard (P3) and 2 x side rails (P4/P5).

fantasticfurniture.com.au

Step 9

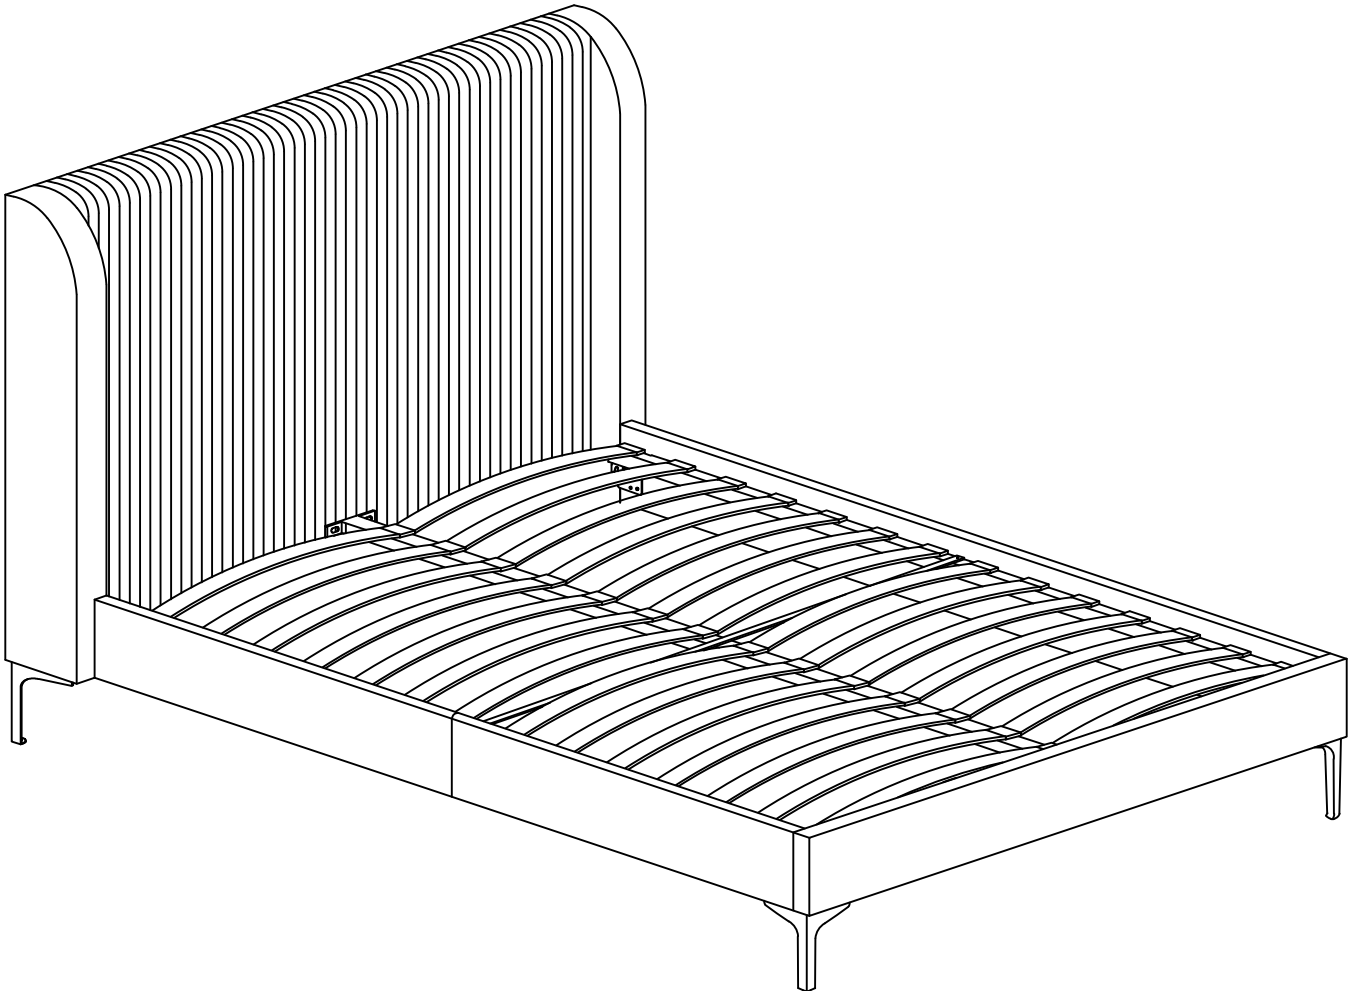

Job complete!

In the interest of our environment please dispose
of all packaging thoughtfully.