




**Fantastic
Furniture**

Version 1.0



Two People

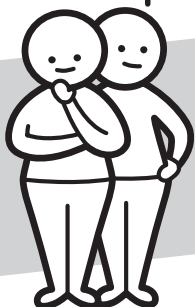

Required

Diamond

Bedside 3 Drawer

fantasticfurniture.com.au



Glass should always be handled with care.

Scratches, chips, sudden changes in temperature and hairline fractures may cause glass to break.

Avoid placing hot or cold items directly onto the table unless using a thick insulation material such as placemats or coasters.

Avoid dropping objects onto the glass. Do not allow hard or pointed objects to come into contact with the glass. Never use the top area as a chopping surface. Do not sit or stand on the glass surface.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture




**Fantastic
Furniture**


Assembly checklist




Read through the instructions carefully before you begin.

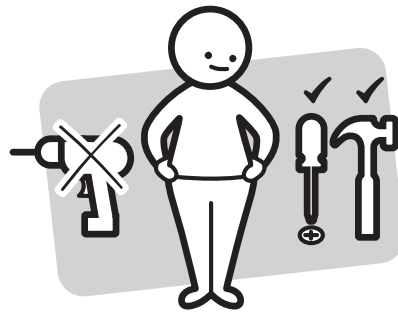

Make sure you have all the required tools. Never use power tools unless instructed.

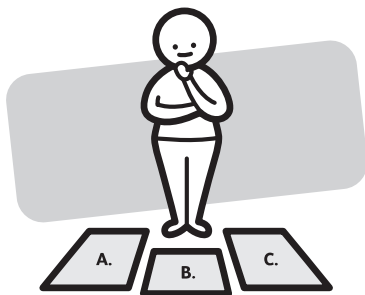

Identify and lay out all of the components before you begin assembly.

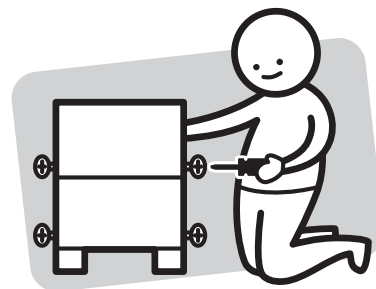

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need


to assemble the product



DO NOT USE



Other tools you need:
Phillips head screwdriver;

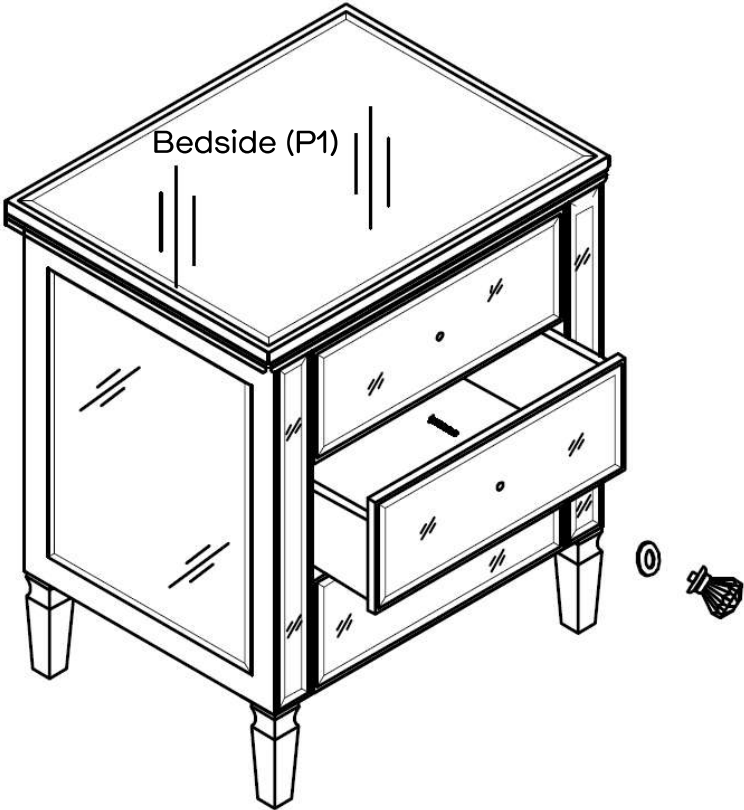

Parts list

Box 1 : 1 x Bedside (P1) ; Hardware.

Hardware



3 x Handles
(H1)




3 x Washers
(H2)



3 x Bolts
(H3)




Step 1

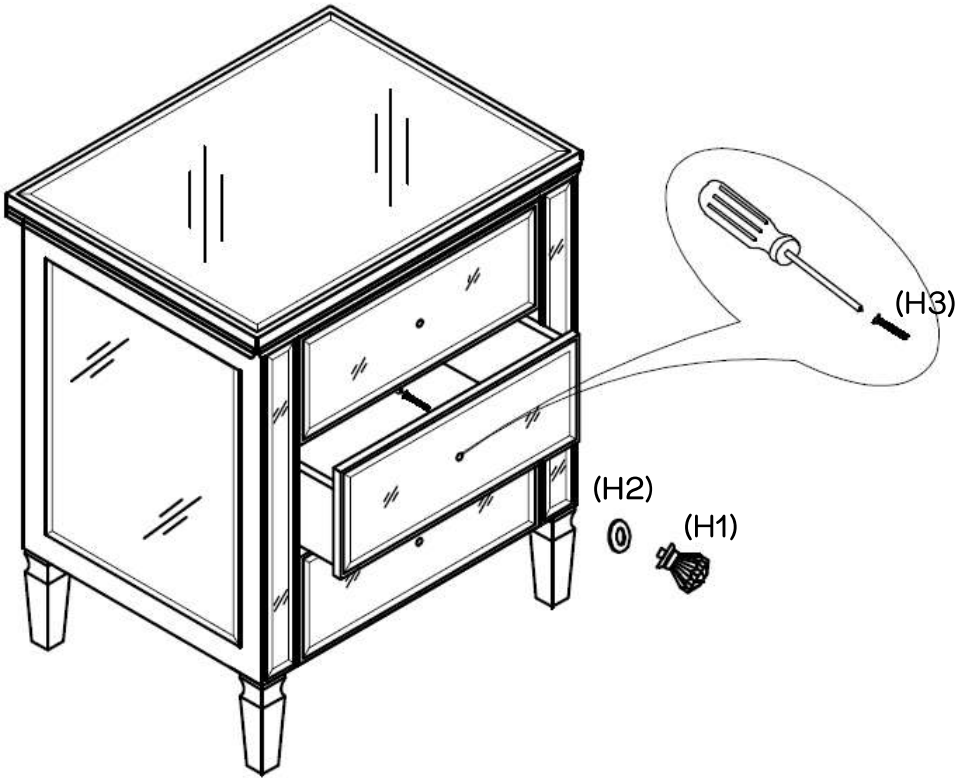
You will need	
	
3 x Handles (H1)	3 x Washers (H2)
	
3 x Bolts (H3)	Phillips head Screwdriver (not provided)



Attach the 3 x handles (H1) to the outside of the drawer using 3 x washer (H2) and 3 x bolts (H3) as shown.
Do not over tighten 3 x bolts (H3) as this will cause mirror face of the drawer to crack.

Step 2

You will need	
	
1 x Washer (not provided)	1 x Wall Screw (not provided)
	Washer and wall screw are not included since different surface materials require different attachments.
Phillips head Screwdriver (not provided)	

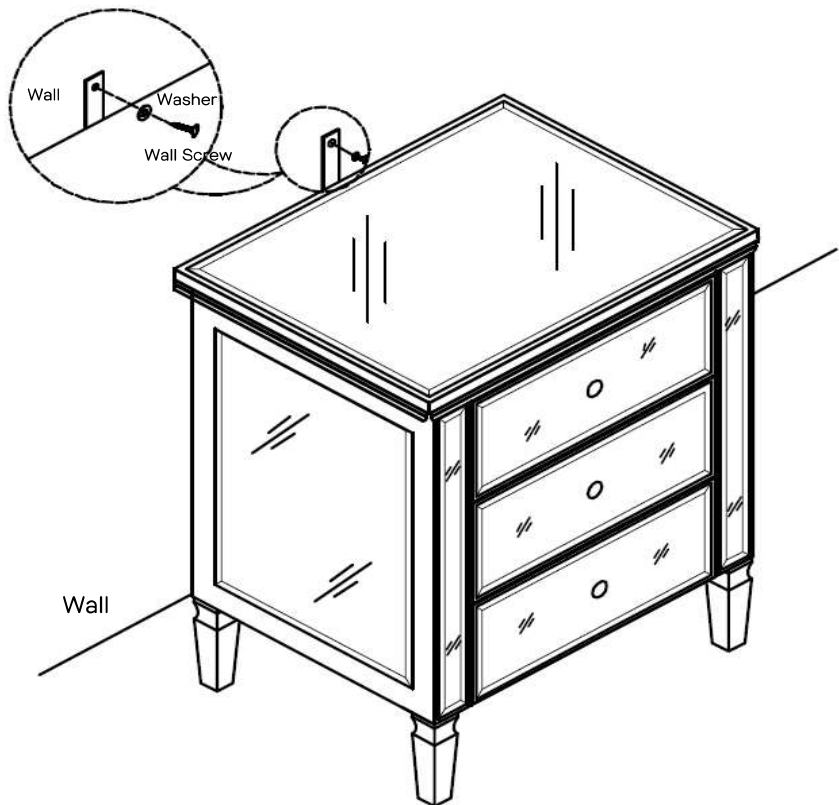

Warning: Ensure the wall strap is attached to avoid serious injury.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Step 3




Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.



**Fantastic
Furniture**

Version 1.0

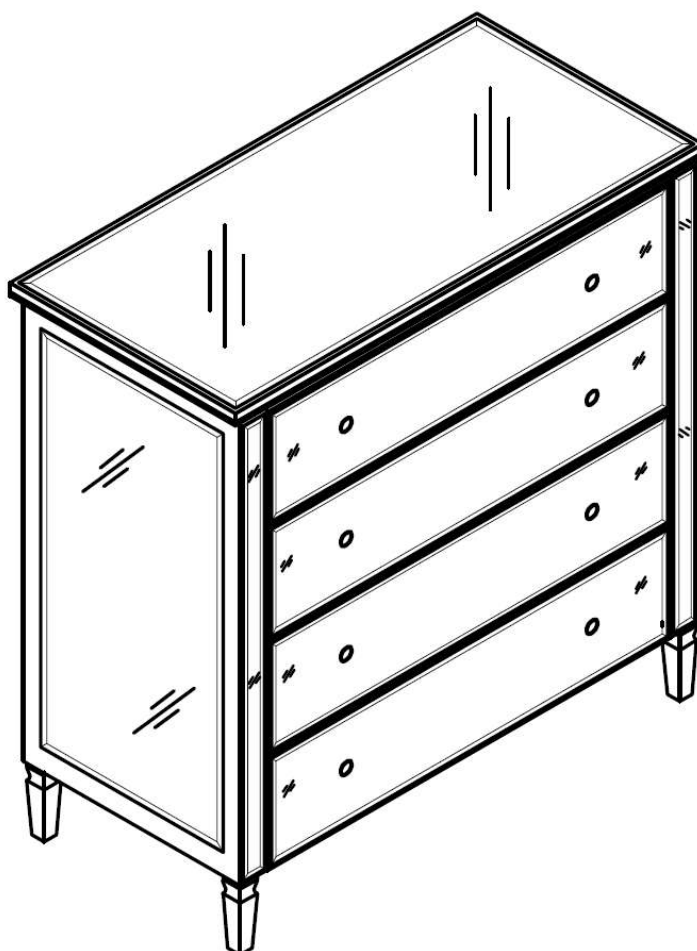

Two People



Required

Diamond

Tallboy 4 Drawer

fantasticfurniture.com.au



Glass should always be handled with care.

Scratches, chips, sudden changes in temperature and hairline fractures may cause glass to break.

Avoid placing hot or cold items directly onto the table unless using a thick insulation material such as placemats or coasters.

Avoid dropping objects onto the glass. Do not allow hard or pointed objects to come into contact with the glass. Never use the top area as a chopping surface. Do not sit or stand on the glass surface.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture




**Fantastic
Furniture**


Assembly checklist




Read through the instructions carefully before you begin.

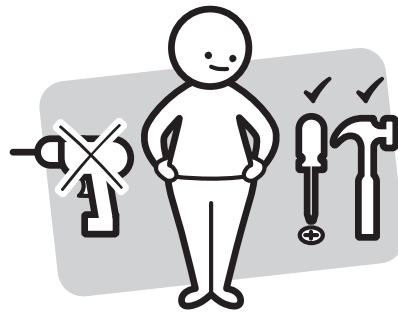

Make sure you have all the required tools. Never use power tools unless instructed.

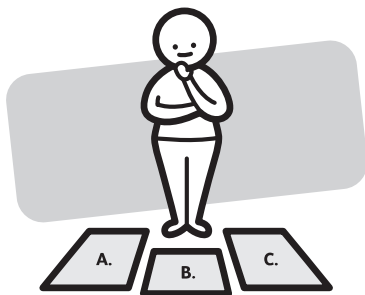

Identify and lay out all of the components before you begin assembly.

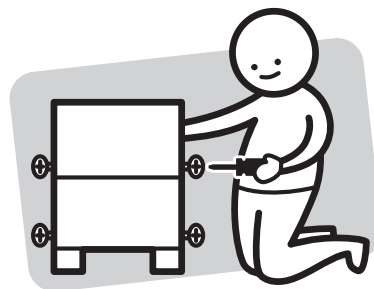

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need


to assemble the product



DO NOT USE



Other tools you need:
Phillips head screwdriver;

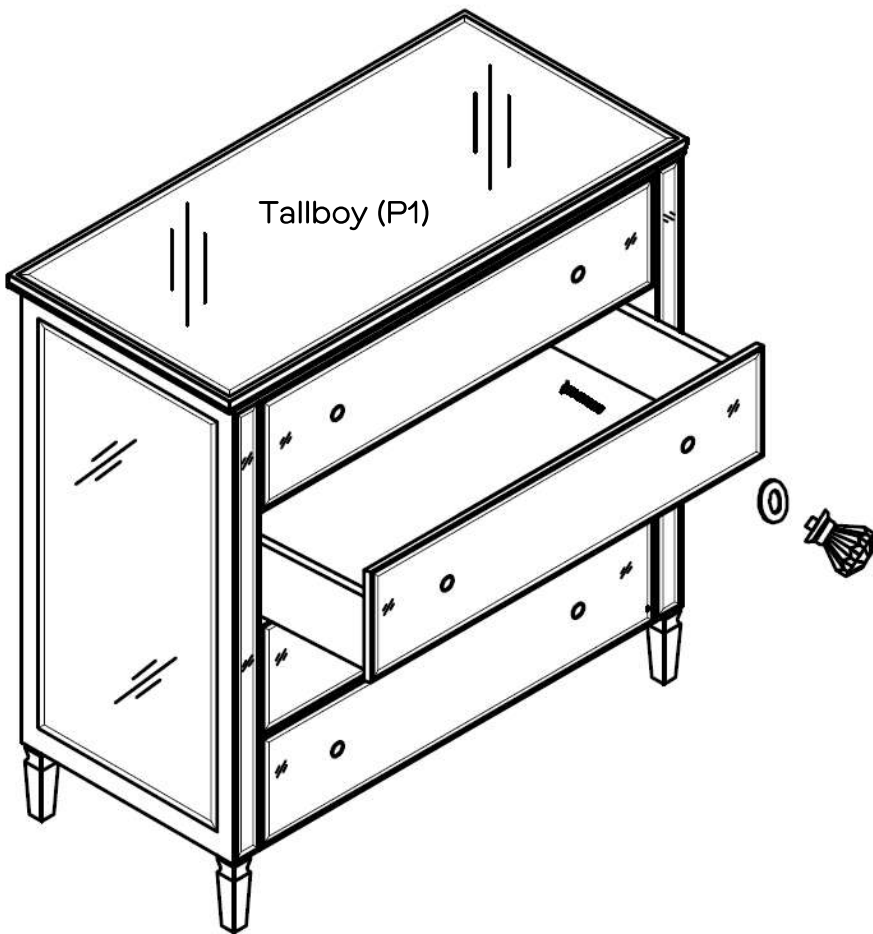

Parts list

Box 1 : 1 x Tallboy (P1) ; Hardware.

Hardware



8 x Handles
(H1)




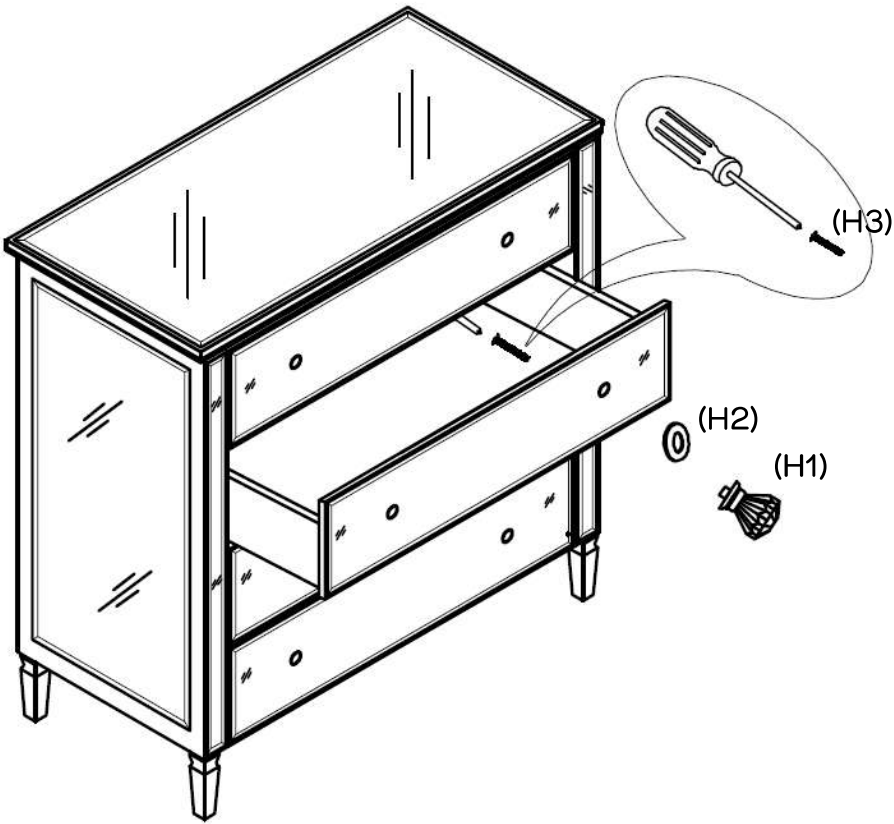
8 x Washers
(H2)



8 x Bolts
(H3)




Step 1


You will need	
	
8 x Handles (H1)	8 x Washers (H2)
	
8 x Bolts (H3)	Phillips head Screwdriver (not provided)



Attach the 8 x handles (H1) to the outside of the drawer using 8 x washer (H2) and 8 x bolts (H3) as shown.
Do not over tighten 8 x bolts (H3) as this will cause mirror face of the drawer to crack.

Step 2


You will need	
	
1 x Washer (not provided)	1 x Wall Screw (not provided)
	Washer and wall screw are not included since different surface materials require different attachments.
Phillips head Screwdriver (not provided)	

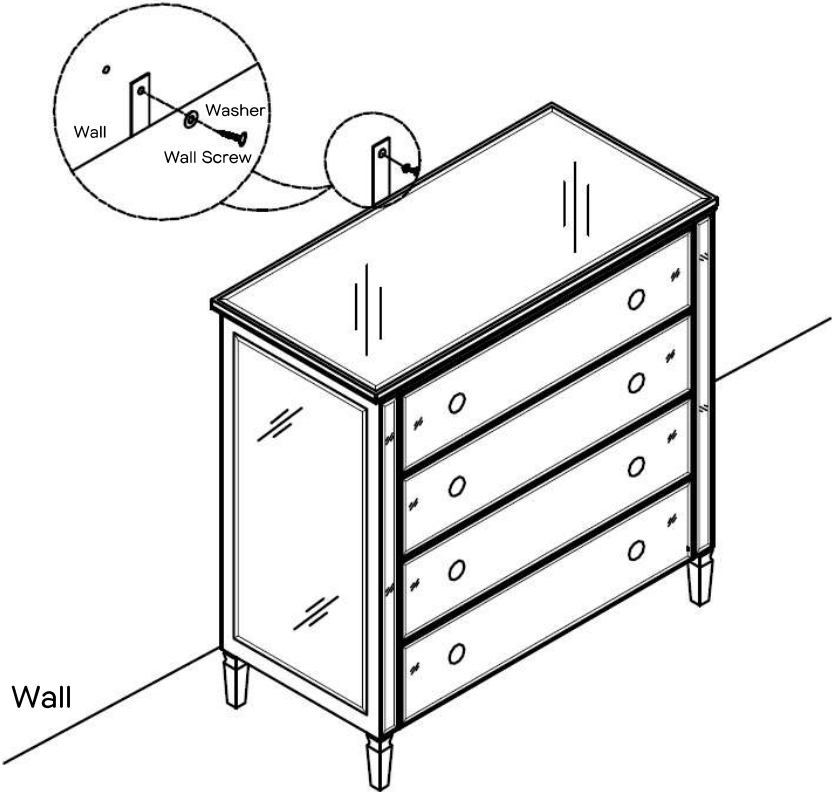

Warning: Ensure the wall strap is attached to avoid serious injury.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Step 3

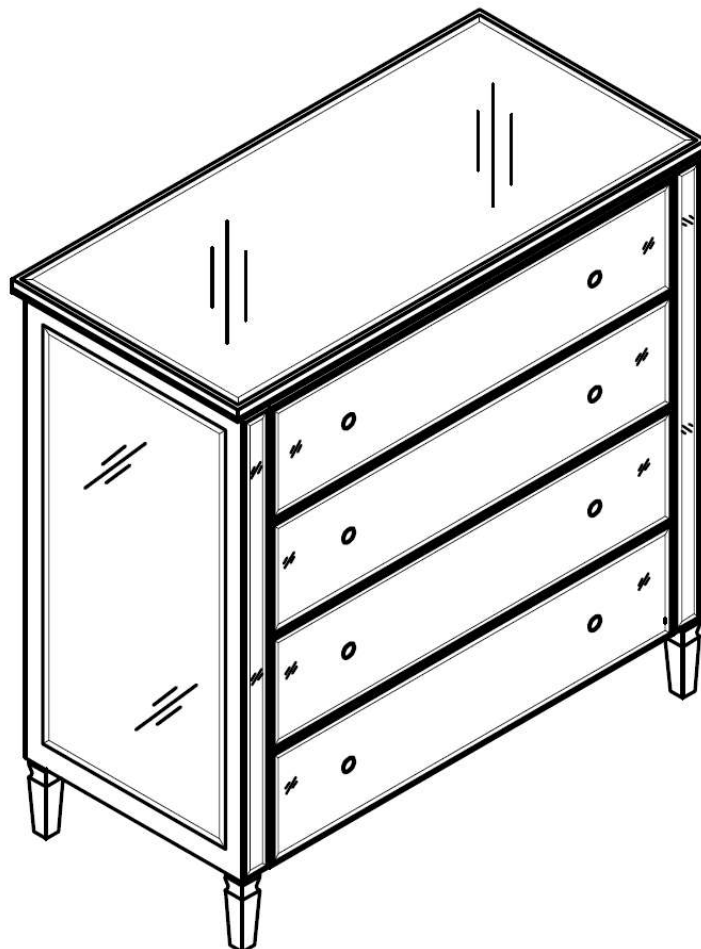

Job complete!


In the interest of our environment please dispose
of all packaging thoughtfully.



SP AProved
3/7/19

**Fantastic
Furniture**

Version 1.0

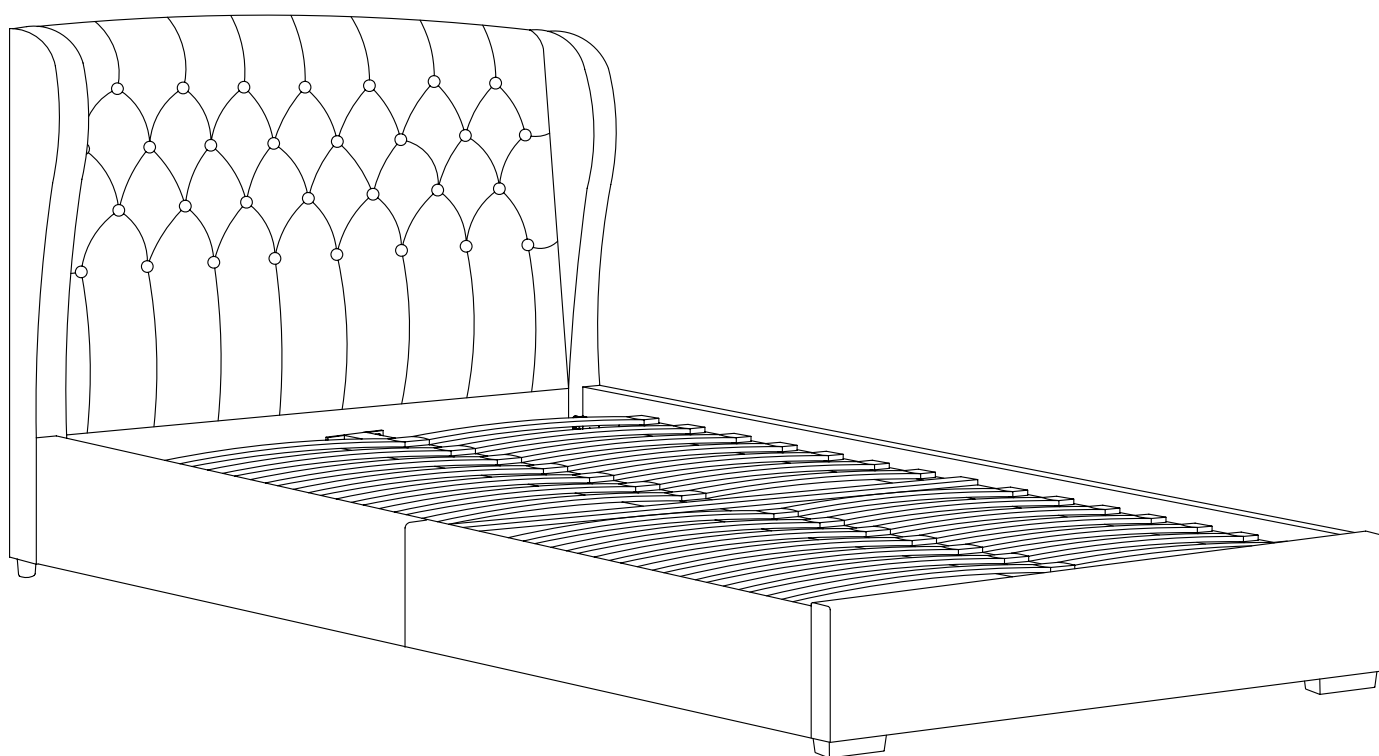

Two People



Required

Tiffany

King Bed

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

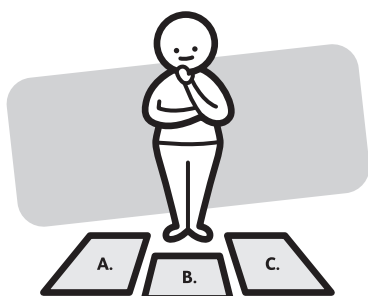

Identify and lay out all of the components before you begin assembly.

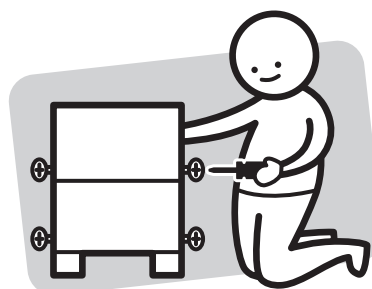

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product




DO NOT USE



Other tools you need:

Phillips head screwdriver;



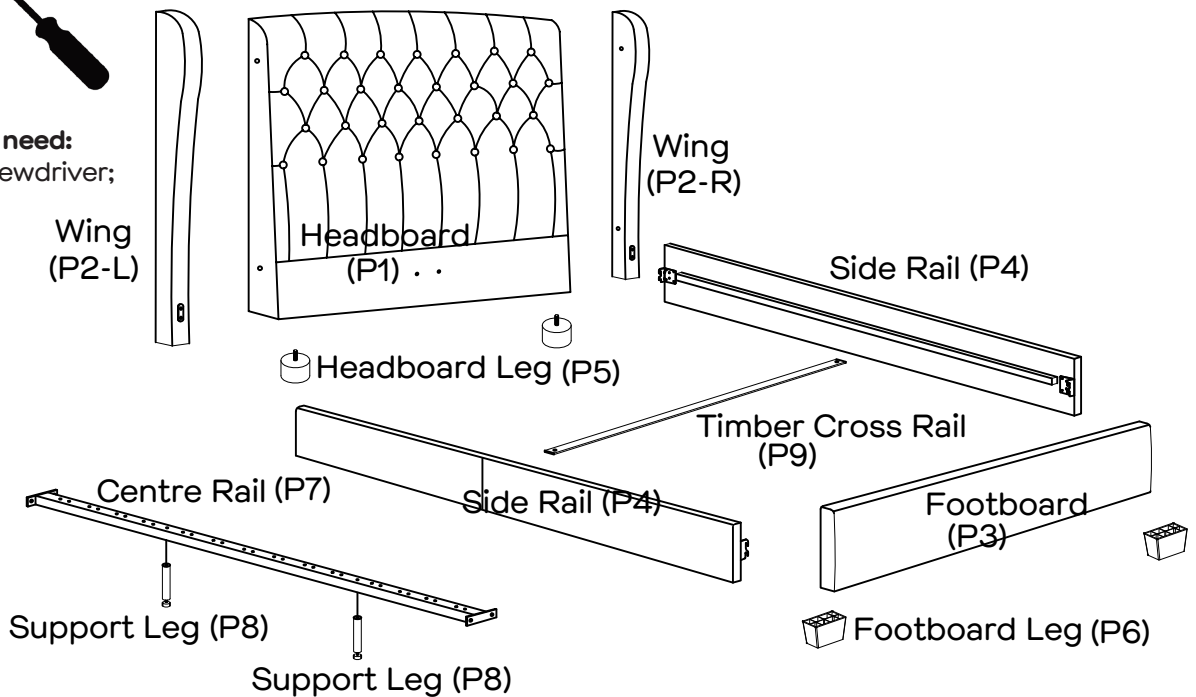


Parts list

Box 1 : Footboard (P3) ; Side Rail (P4) ; Headboard Legs (P5) ; Footboard Legs (P6) ;
Centre Rail (P7) ; Support Legs (P8) ; Timber Cross Rail (P9) ; End Connectors (P10) ;
Centre Connectors (P11) ; Hardware Pack

Box 2 : Headboard (P1) ; Wing (P2-L) ; Wing (P2-R) ; Slats (P12)

28 x End Connectors (P10) 14 x Centre Connectors (P11)

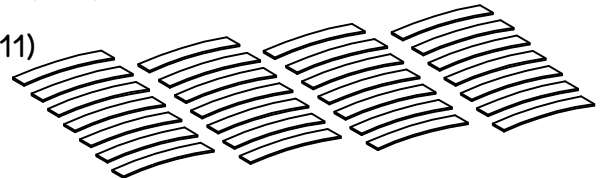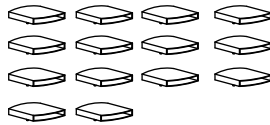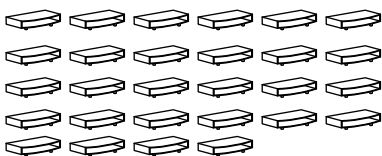


28 x Slats (P12)

Hardware pack



(Bolt)
8 x M8 x 18mm
(H1)



1 x M5 (Allen Key)
(H2)




(Bolt)
4 x M8 x 45mm
(H3)




(Washer)
10 x M8 x 19mm
(H4)



(Bolt)
6 x M8 x 25mm
(H5)



(Large Screw)
4 x M4 x 51mm
(H6)






(Felt Pad)
1 x 40 x 20mm
(H7)




(Small Screw)
2 x M4 x 32mm
(H8)


Step 1

You will need		
		
Allen Key (H2)	4 x Bolts 45mm (H3)	4 x Washers M8 (H4)

TWO PEOPLE

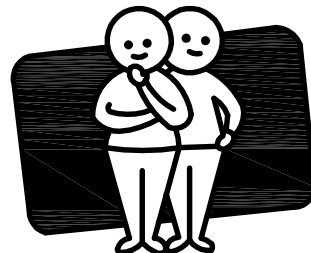


REQUIRED

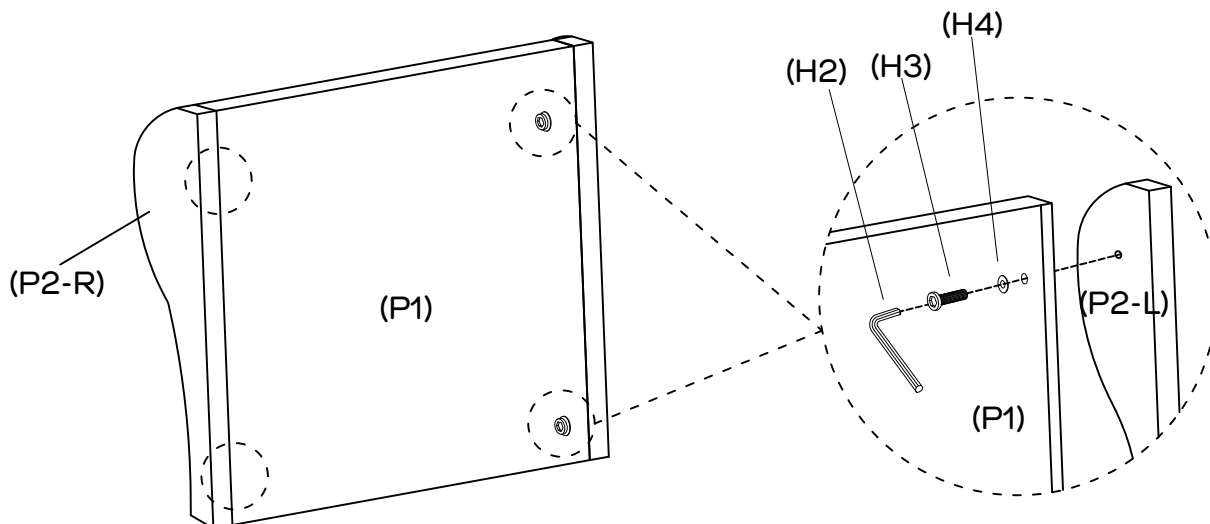

Attach Wing (P2-L; P2-R) to the headboard (P1) with 4 x washers (H4) and 4 x Bolt 45mm (H3) by using Allen key (H2) as shown.


Step 2

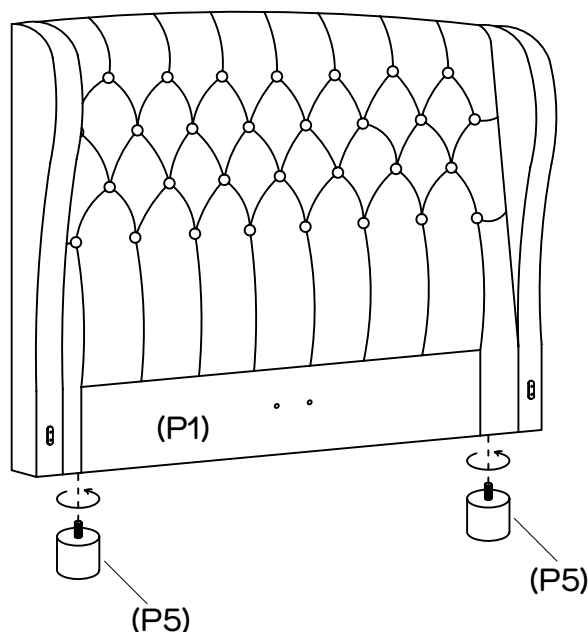



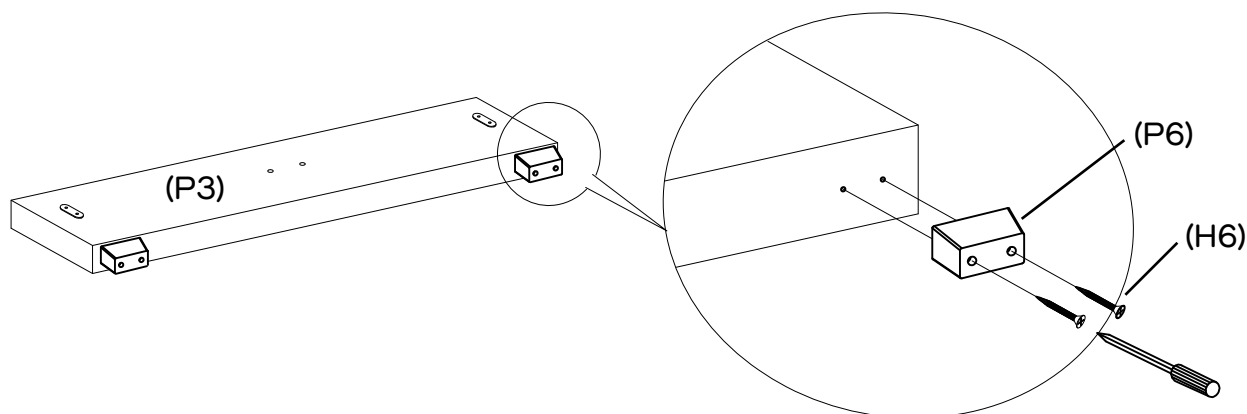
Attach Headboard legs (P5) to the bottom of headboard (P1) as shown.

Step 3

TWO PEOPLE

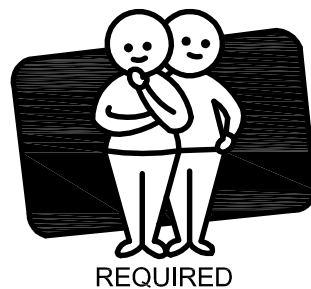
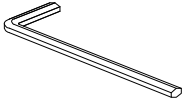


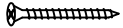
You will need	
	
4 x Large Screws 51mm (H6)	Phillips head Screwdriver (not provided)



Attach footboard leg (P6) to the bottom of footboard (P3) with 4 x Large Screw 51mm (H6) by using phillips head screwdriver (not provided).




Step 4

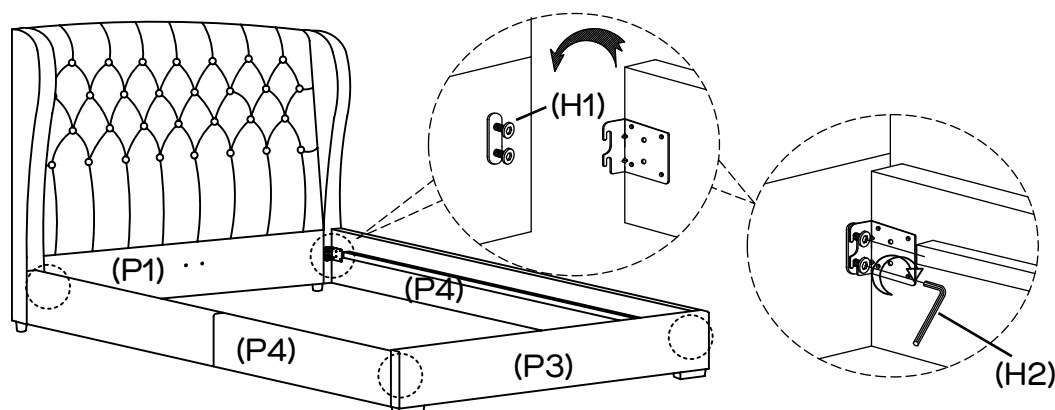
You will need	
	
8 x Bolts 18mm (H1)	Allen Key (H2)



Install the bolts (H1) to the brackets by using Allen key (H2) as shown, do not tighten the bolts and keep them 8 mm loose. Then attach side rails (P4) to headboard (P1) and footboard (P3) by slotting the bracket on the side rails (P4) over the bolt as shown. No need to tighten bolts until step 8 .




Step 5

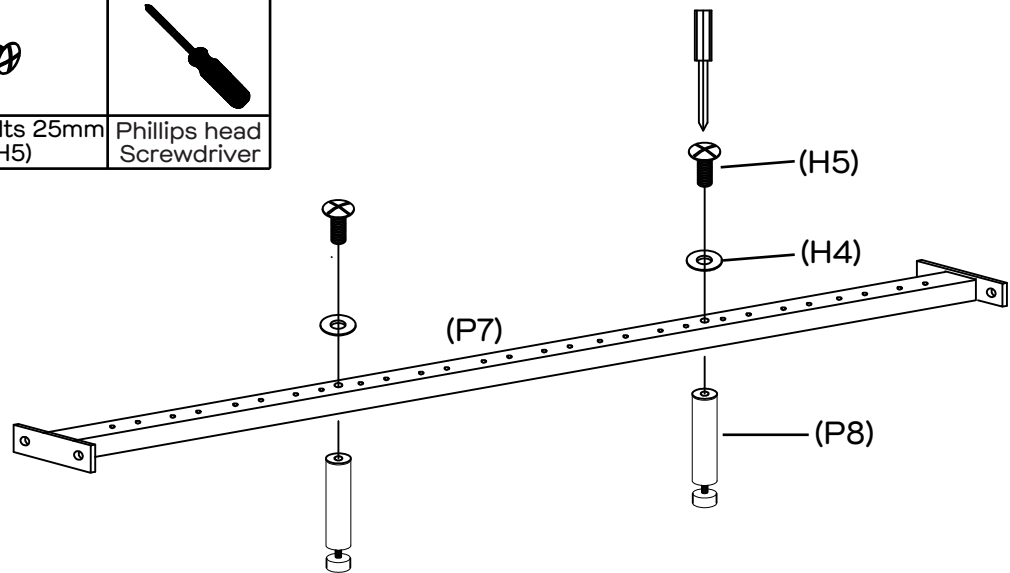
You will need		
		
2 x Washers M8 (H4)	2 x Bolts 25mm (H5)	Phillips head Screwdriver



Attach the support legs (P8) to the centre rail (P7) using 2 x Bolts (H5), 2 x Washers (H4) as shown.

Step 6

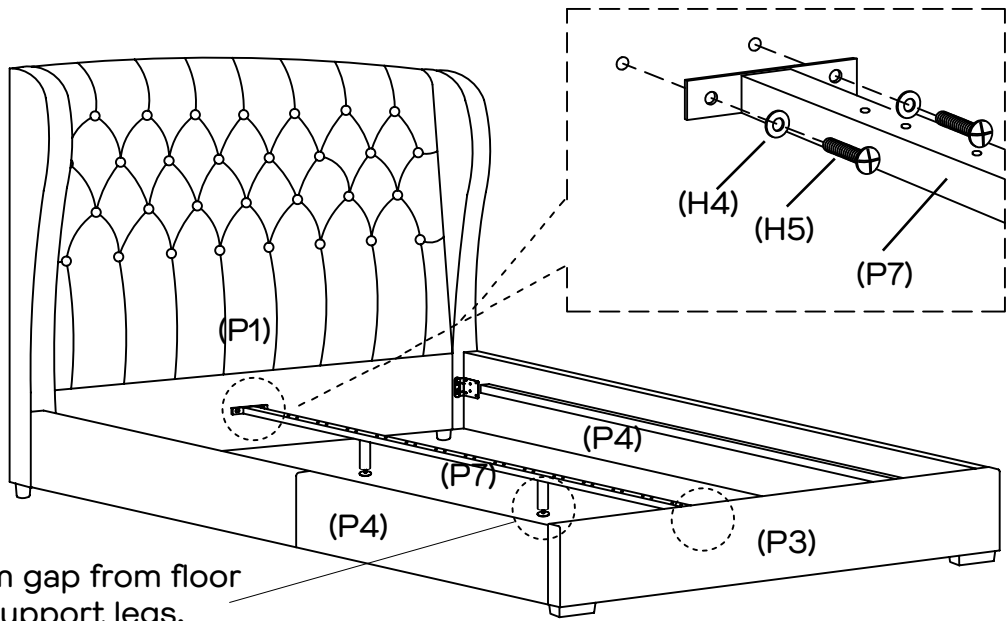


You will need	
	
4 x Washers M8 (H4)	4 x Bolts 25mm (H5)
	
Phillips head Screwdriver	




Adjust to be 10mm gap from floor to the bottom of support legs.

Slot the centre rail (P7) into the headboard (P1) and footboard (P3)
Rotate bolts (H5) by using phillips head screwdriver (not provided) to the headboard (P1) and footboard (P3). No need to tighten bolts until step 8 .

Step 7


You will need	
	
28 x End Connectors (P10)	14 x Centre Connectors (P11)
	
28 x Slats (P12)	

1

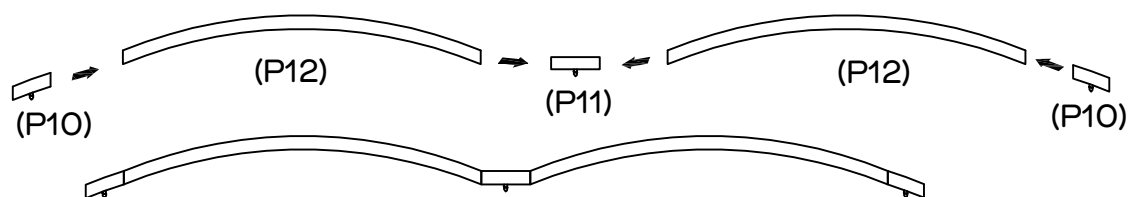


Push 2 End Connectors (P10), 2 pcs Slats (P12) and a Centre Connector (P11) together.

2

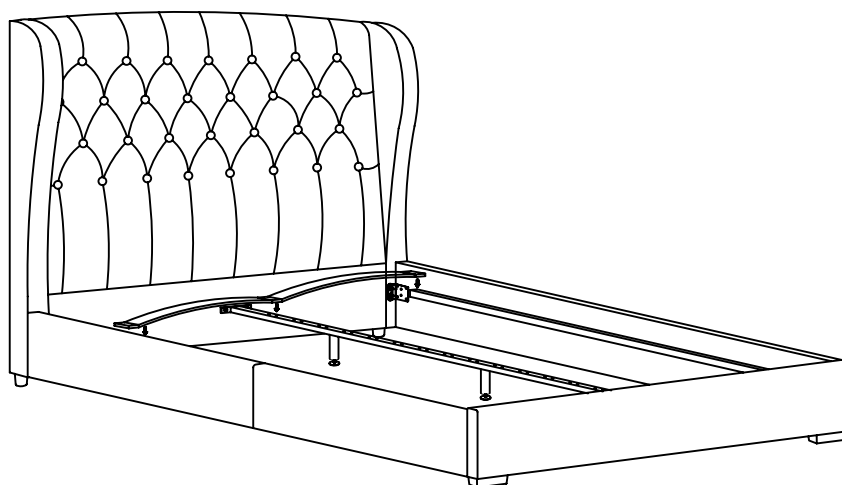


Insert the full slat into the side rail and centre rail one by one.

3

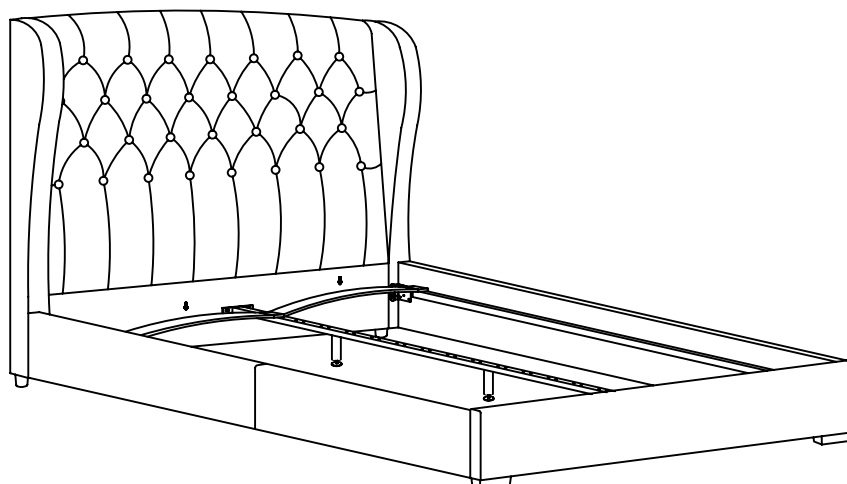

Sometimes it make it easier to line up the hole if you press down in the middle of the slat to flatten it out.


4

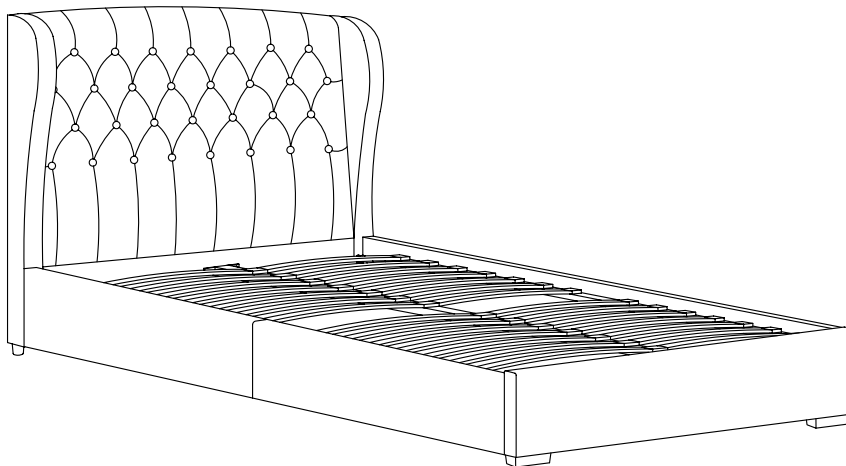

Repeat for every bed slat until finished.

Step 8

You will need	
Allen Key (H2)	Felt Pad 1 x 40 x 20mm (H7)
2 x Screws 32mm (H8)	Phillips head Screwdriver (not provided)

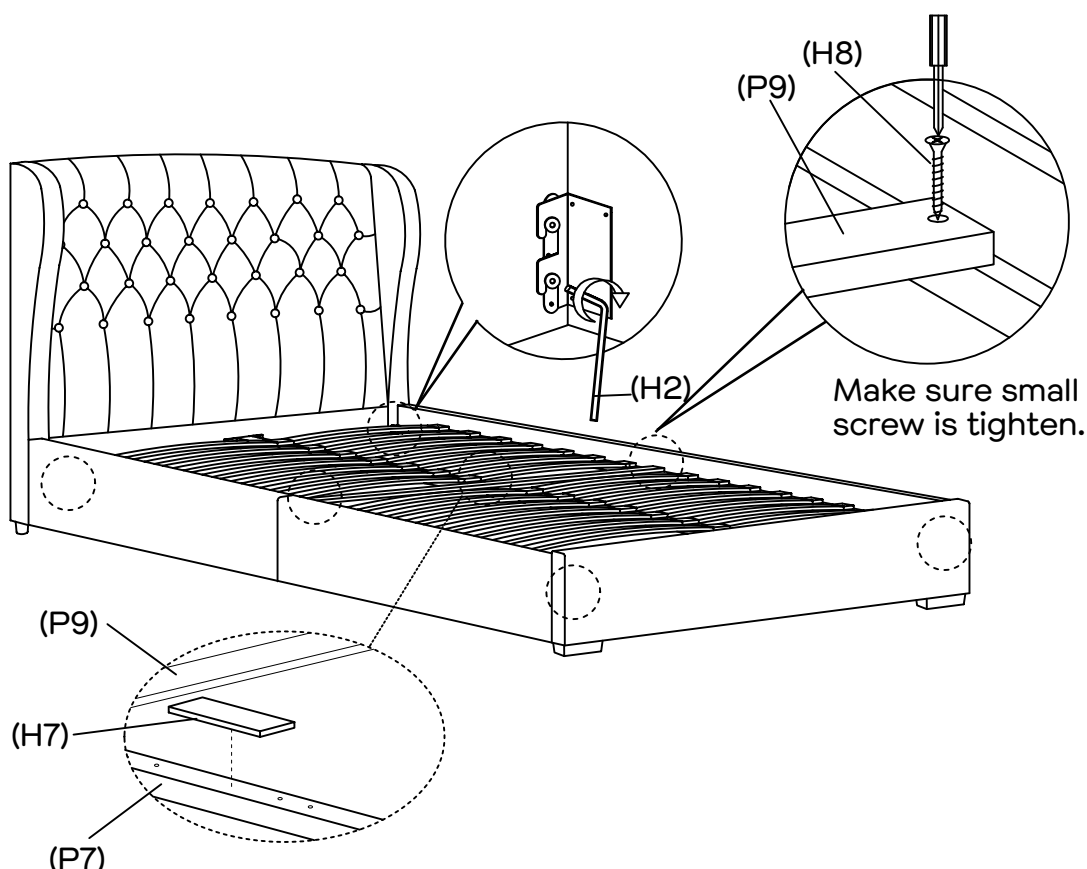


Make sure the inner space is square.

Attach the felt pad (H7) to the centre of centre rail (P7).

Then attach the timber cross rail (P9) to the centre of side rails (P4) by using 2 x screws (H8). Now tighten all the bolts on the corner bracket and tighten bolts on the headboard (P1) and footboard (P3).

Step 9

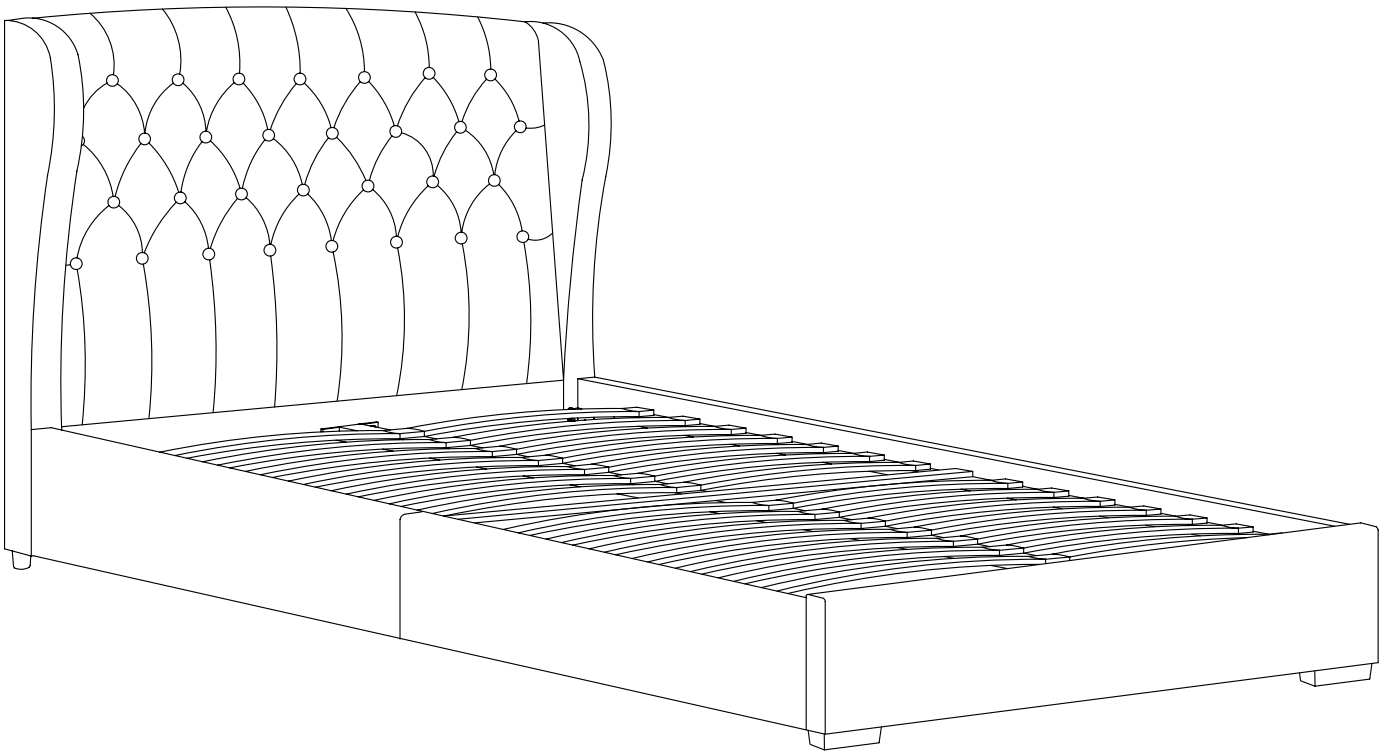

Job complete!

In the interest of our environment please dispose
of all packaging thoughtfully.