


Version 1.0



Two People

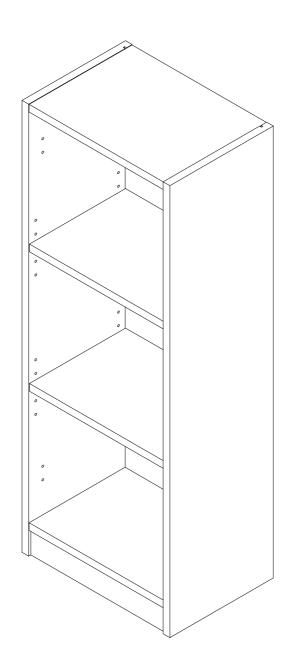

Kobi
Bookcase Small Narrow

www.fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love



Love it? Share it!

Fantastic buy! Share how it looks at home for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Warning: Ensure the wall strap is attached to avoid serious injury.

To avoid any serious or fatal injury, this product has been fitted with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.




Assembly Checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

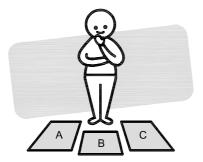

Identify and lay out all of the components before you begin assembly.

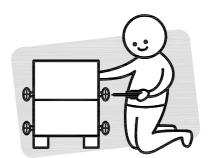

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



What You Need

to assemble the product





Other Tools You Need

Phillips head screwdriver; Hammer

Parts List

Box 1: Left Side Panel (P1) \times 1;

Right Side Panel (P2) x 1;

Top Panel (P3) \times 1;


Bottom Panel (P4) x 1;

Shelf Panel (P5) x 2;

Front Panel (P6) x 1

Back Panel (P7) x 1 &

Back Panel (P8) x 1

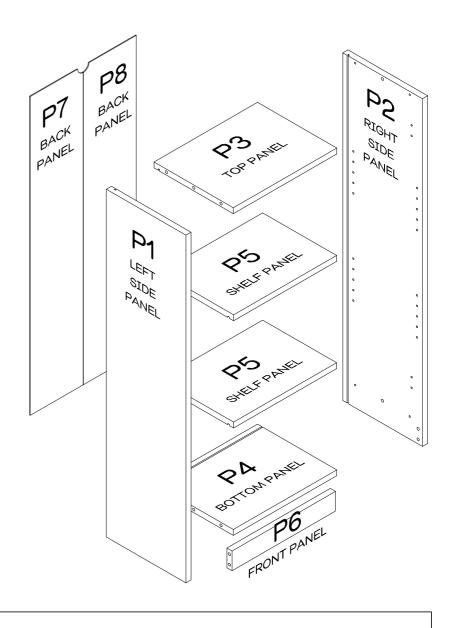













6 × Wedge Screws (H1)



2 × Washers (H3)

8 × Dowels (H4) 8 × Cam Bolts (H5) 8 × Cam Nuts (H6)






1 × Wall Bracket (H8)



8 × Shelf Studs (H9)



6 × Wedges (H10)

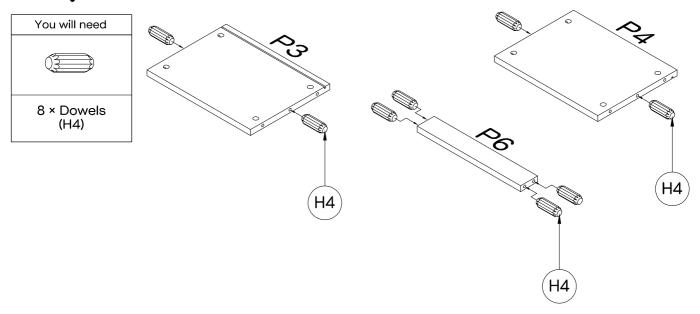


Insert 2 \times Dowels (H4) into Top Panel (P3), 2 \times Dowels (H4) into Bottom Panel (P4) and 4 \times Dowels (H4) into Front Panel (P6).


Step 2 Vou will need 8 * Cam Bolts (H5) Phillips Head Screwdriver

Secure $4 \times Cam$ Bolts (H5) to Left Side Panel (P1) and $4 \times Cam$ Bolts (H5) to Right Side Panel (P2) by tightening with the Phillips Head Screwdriver.



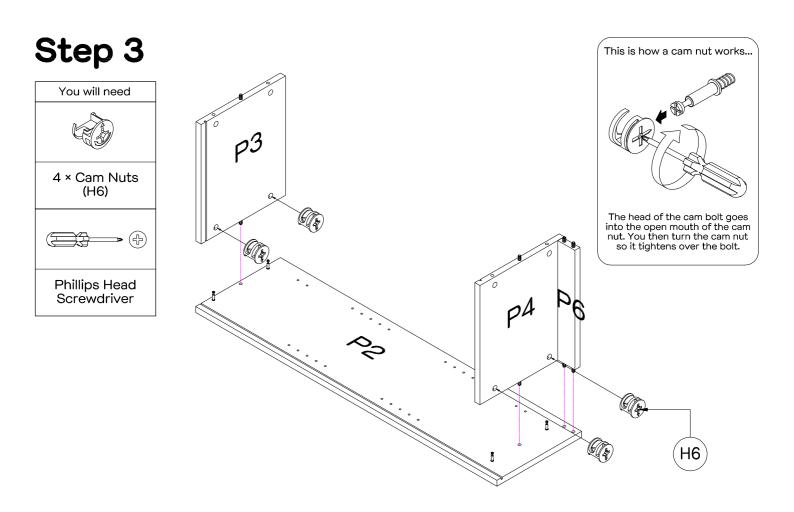



Insert 2 x Cam Nuts (H6) into Top Panel (P3) and 2 x Cam Nuts (H6) into Bottom Panel (P4) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Secure the Right Side Panel (P2) to Top & Bottom Panels (P3&P4) by tightening cam nuts with a Phillips Head Screwdriver. Insert Front Panel (P6) into Right Side Panel (P2) as shown.

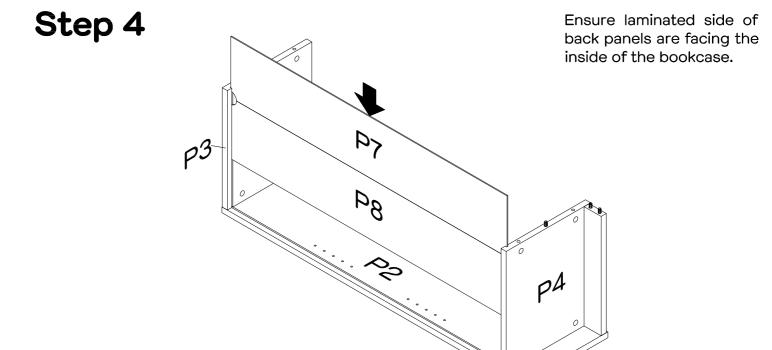


Slide Back Panels (P7&P8) into the grooves of Right Side Panel (P2) and Top & Bottom Panels (P3&P4) as shown.



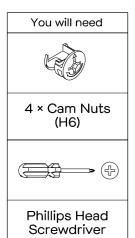


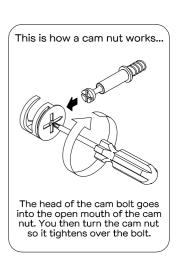

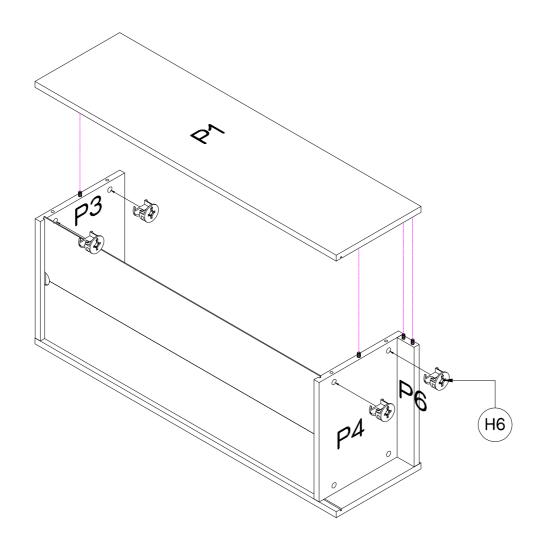


Insert 2 x Cam Nuts (H6) into Top Panel (P3) and 2 x Cam Nuts (H6) into Bottom Panel (P4) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Secure the Left Side Panel (P1) to Top & Bottom Panels (P3&P4) by tightening cam nuts with a Phillips Head Screwdriver.




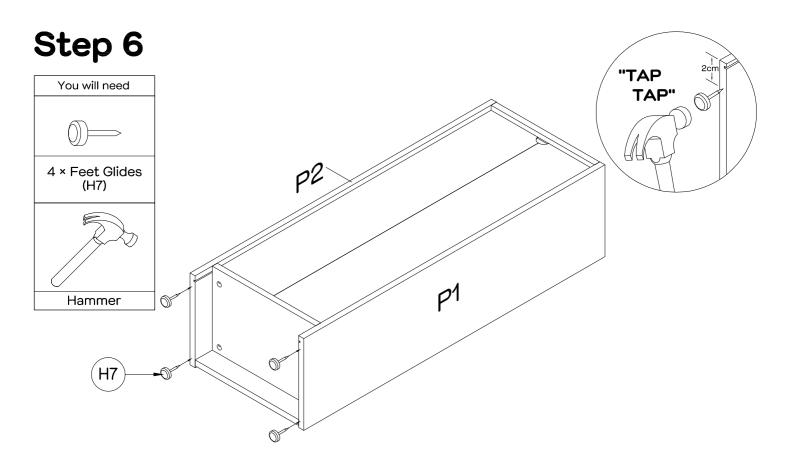



Secure 4 x Feet Glides (H7) to the bottom of Left & Right Side Panels (P1&P2) with the Hammer. Ensure the feet glides are evenly spaced, approximately 2cm from the end of each panel.

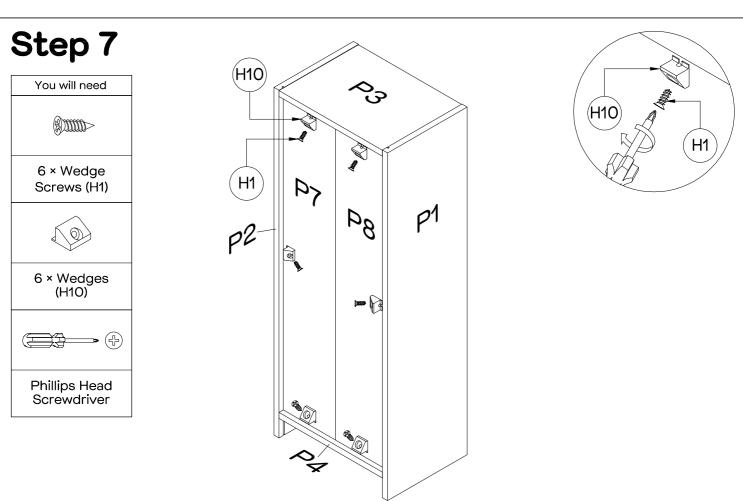

Insert 6 x Wedges (H10) into Top Panel (P3), Bottom Panel (P4) and Side Panels (P1&P2) as shown and use 6 x Wedge Screws (H1) to secure by tightening with the Phillips Head Screwdriver.

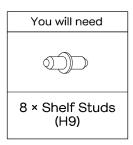

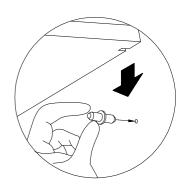


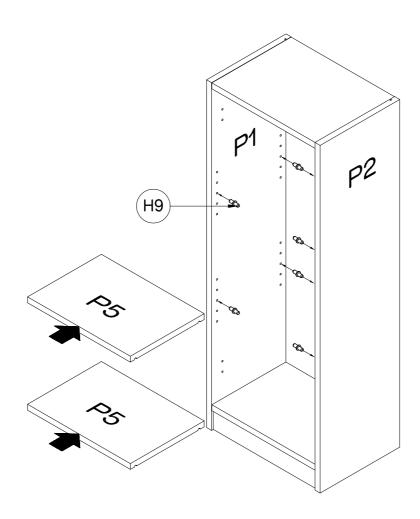



Insert 8 x Shelf Studs (H9) into the Left & Right Side Panels (P1&P2) at your preferred height. Place the Shelf Panels (P5x2) into the unit by resting each shelf on the shelf studs. Ensure each shelf is positioned securely.




You will need	
DIIIII >	
1 × Bracket Screw (H2)	1 × Wall Bracket (H8)
1 × Washer (H3)	Phillips Head Screwdriver

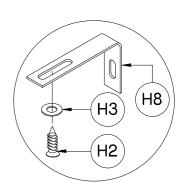


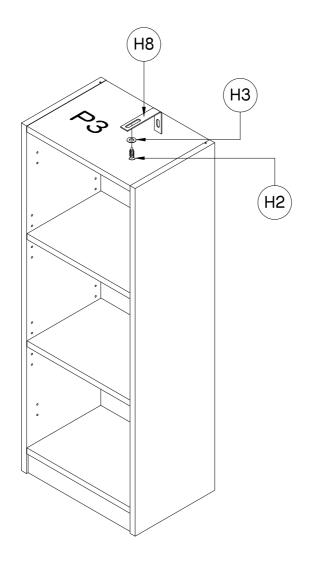

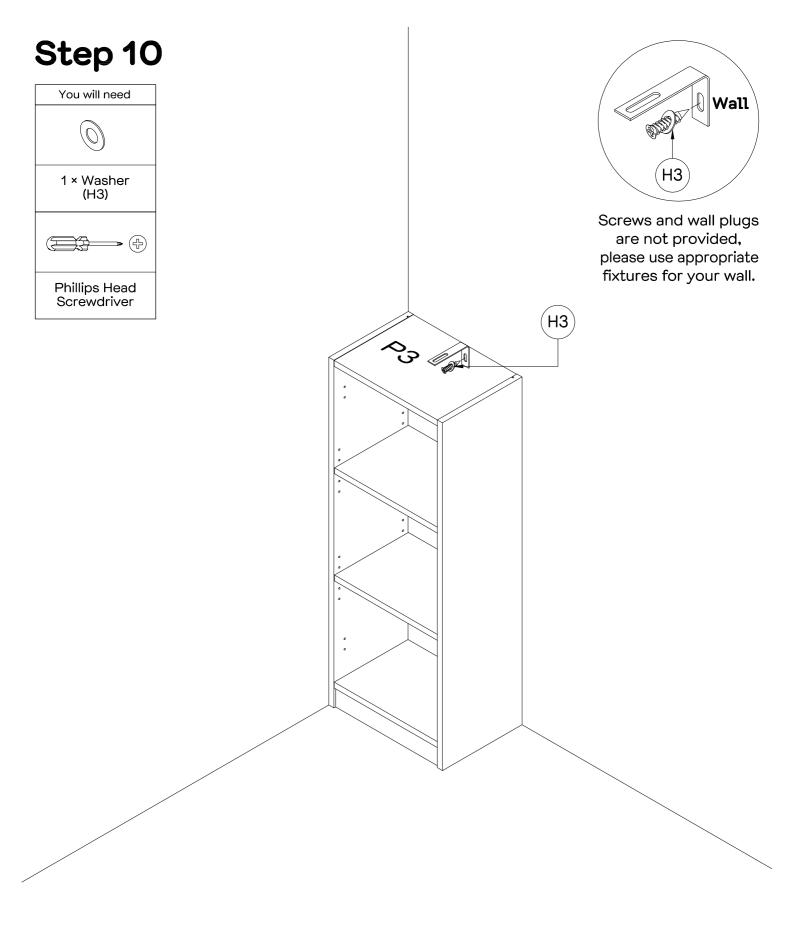





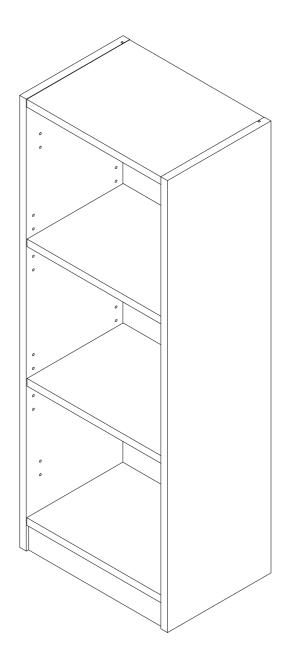

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

