




**Fantastic
Furniture**

Version 1.0

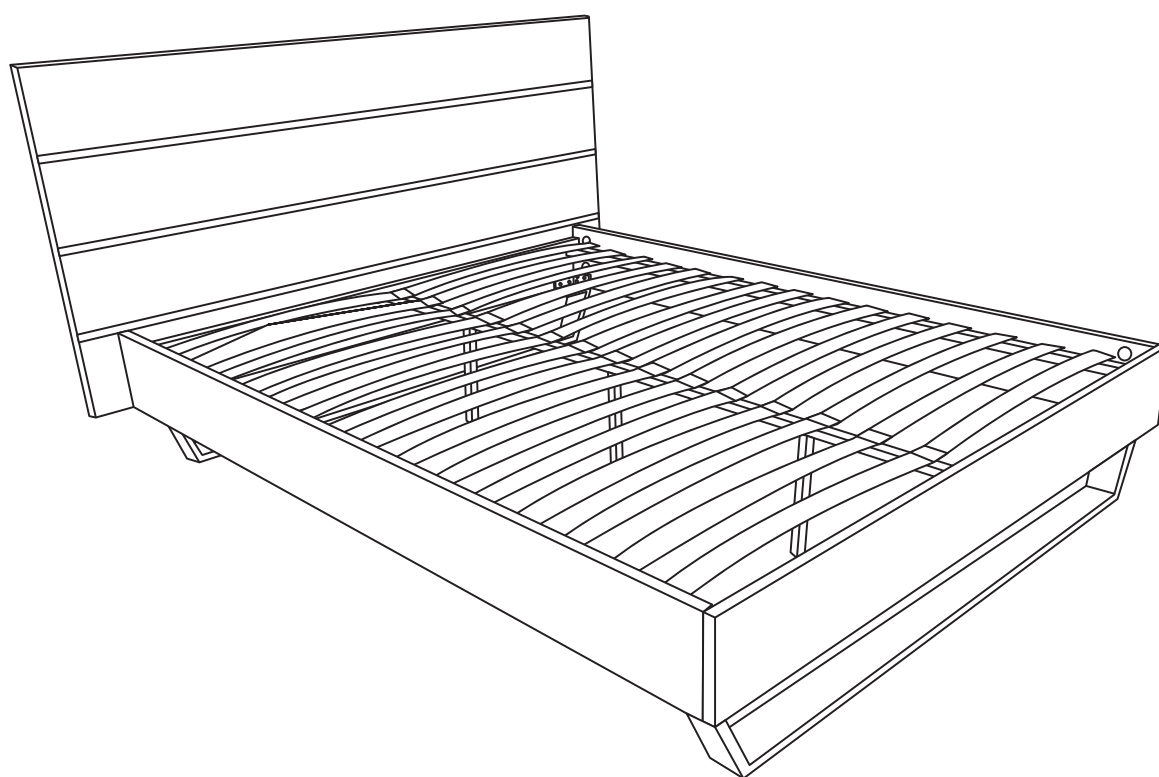

Bridge

Bed Queen Oak

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly Checklist




Read through the instructions carefully before you begin.

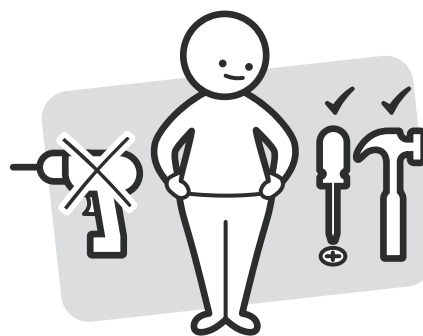

Make sure you have all the required tools. Never use power tools unless instructed.

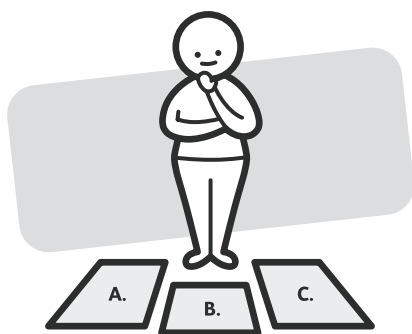

Identify and lay out all of the components before you begin assembly.

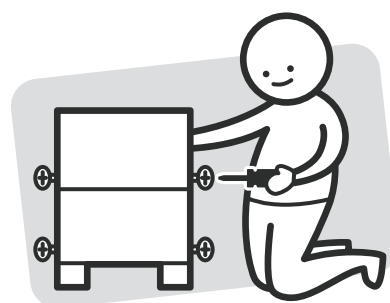

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product




DO NOT USE










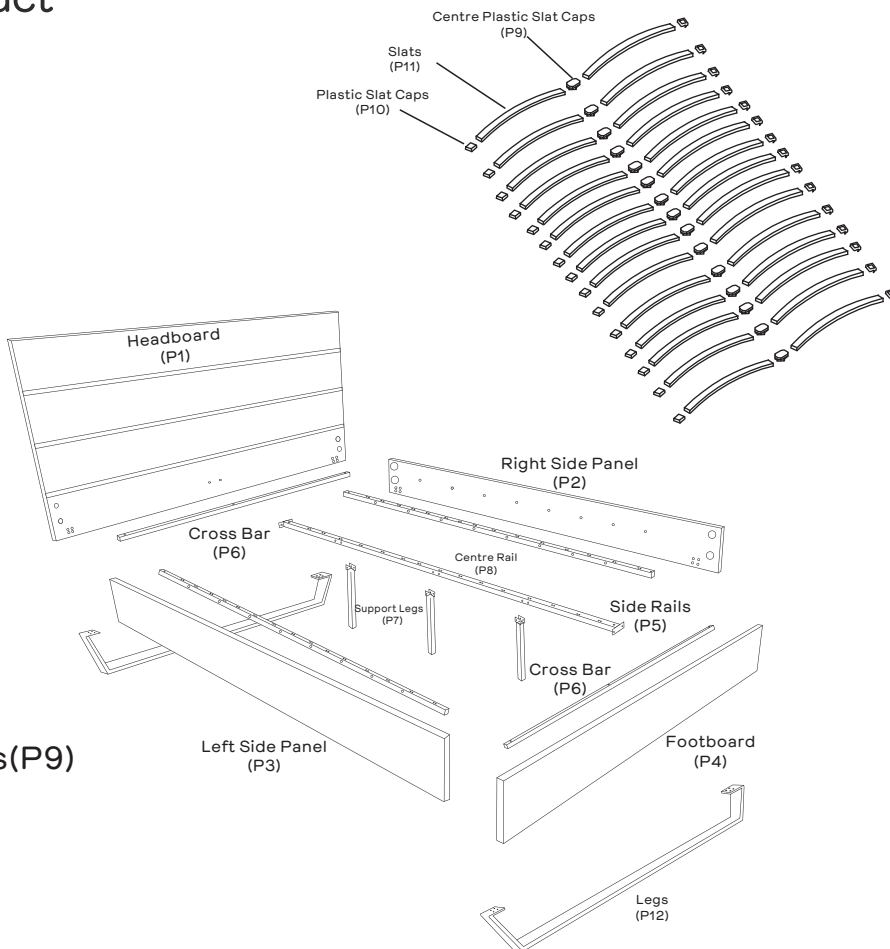






Other tools you need:
Phillips head screwdriver;

Parts list


- 1 x Headboard(P1)
- 1 x Right Side Panel (P2)
- 1 x Left Side Panel(P3)
- 1 x Footboard(P4)
- 2 x Side Rails(P5)
- 2 x Cross Bars(P6)
- 3 x Support Legs(P7)
- 1 x Centre Rail(P8)
- 15 x Centre Plastic Slat Caps(P9)
- 30 x Plastic Slat Caps(P10)
- 30 x Slats(P11)
- 2 x Legs(P12)




Hardware Pack

					
8 x Threaded Rods (H1)	8 x Half Moon Nuts (H2)	8 x Large Nuts (H3)	52 x Short Bolts (H4)	86 x Washers (H5)	16 x Long Bolts (H6)
					
12 x Bolts (H7)	6 x Nuts (H8)	4 x Levelling Feet (H9)	1 x Allen key (H10)	1 x Spanner (H11)	1 x Spanner (H12)
					
2 x Connectors (H13)	2 x Connectors (H14)				




Step 1

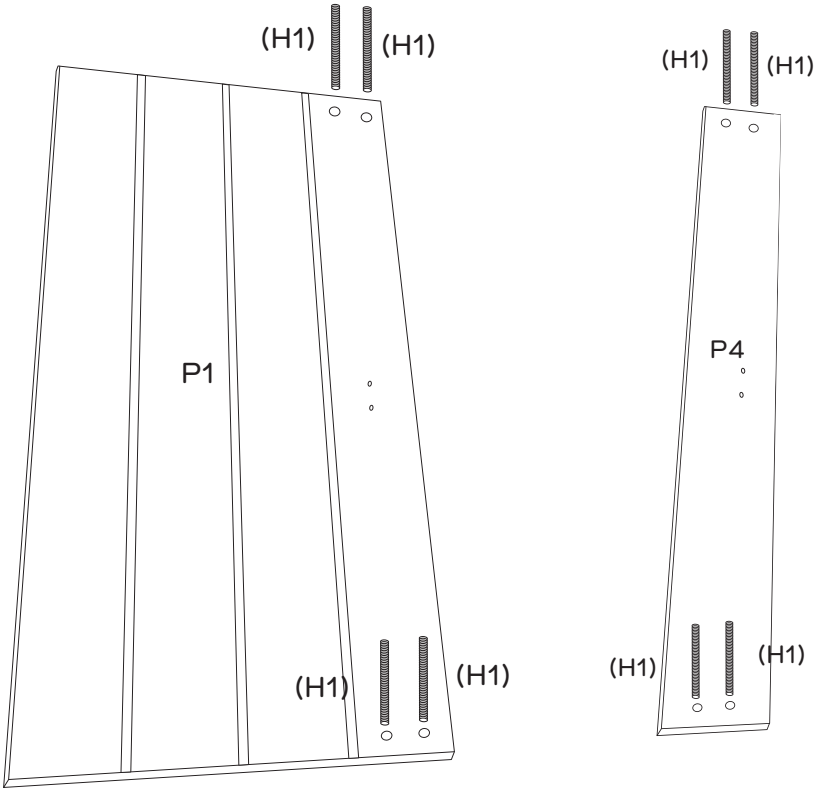
You will need:	
	
8 x Threaded Rods (H1)	



Attach 4 x threaded rods (H1) into the bottom of headboard (P1) and 4 x threaded rods (H1) into the footboard (P4) by turning clockwise until secure.



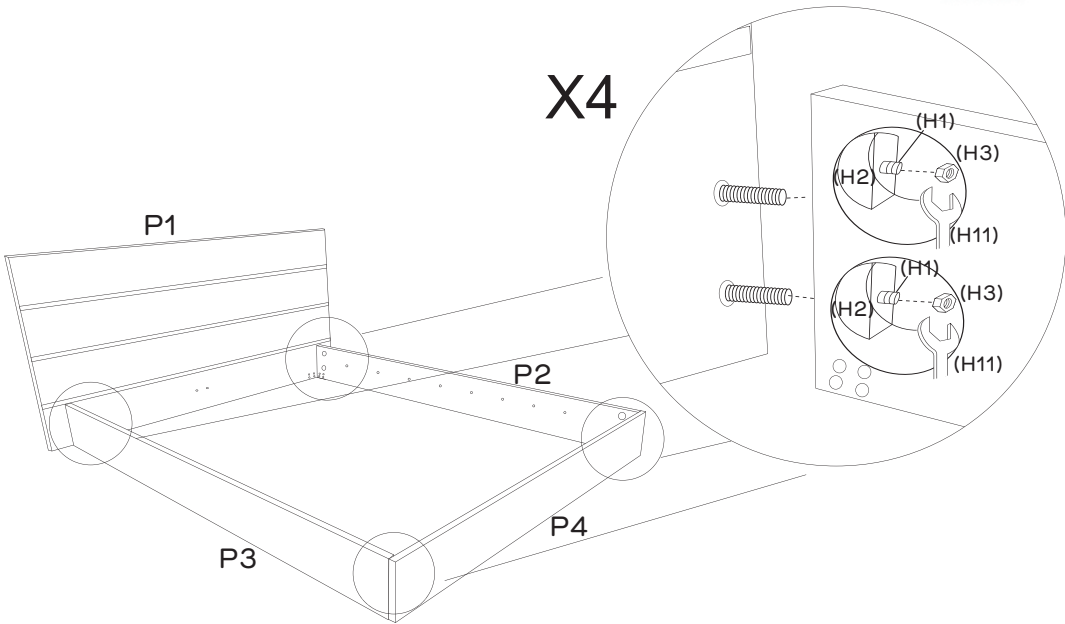


Step 2


You will need:	
	
8 x Half Moon Nuts (H2)	8 x Large Nuts (H3)
	
1 x Spanner (H11)	



With assistance, carefully align and attach the right side panel (P2) between the headboard (P1) and footboard (P4). Secure together using 8 x half moon nuts (H2) and 8 x large nuts, tightening with the spanner (H11). Repeat this step to attach the left side panel (P3) to the headboard (P1) and footboard (P4).

Step 3

You will need:	
	
32 x Short Bolts (H4)	32 x Washers (H5)
	
Allen Key (H10)	2 x Connectors (H13)
	
2 x Connectors (H14)	

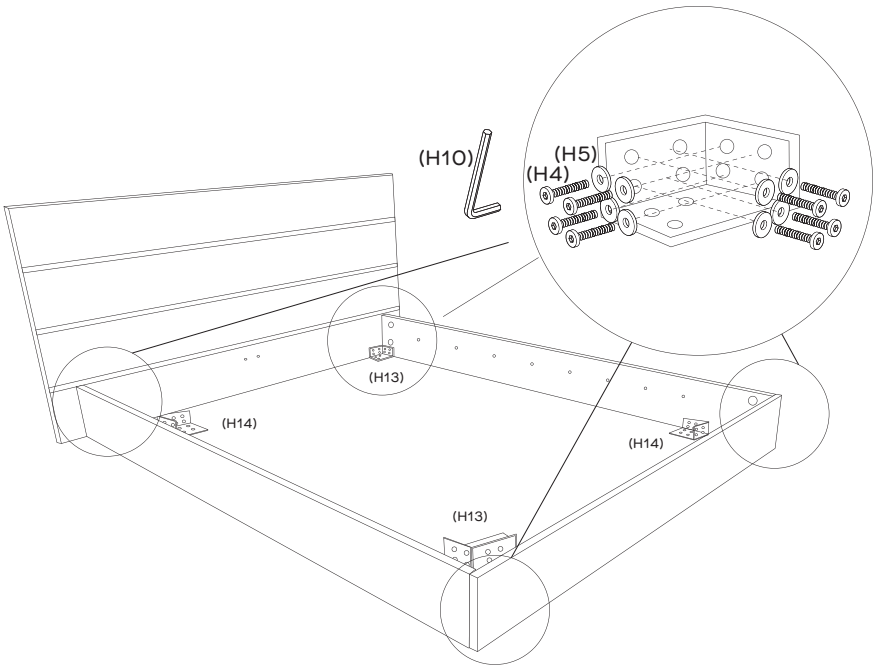


X4

Attach the connectors (H13,H14) to each corner of the bed frame using 32 x short bolts (H4) and 32 x washers (H5), tightening using allen key (H10).

Step 4

You will need:

4 x Levelling Feet (H9)

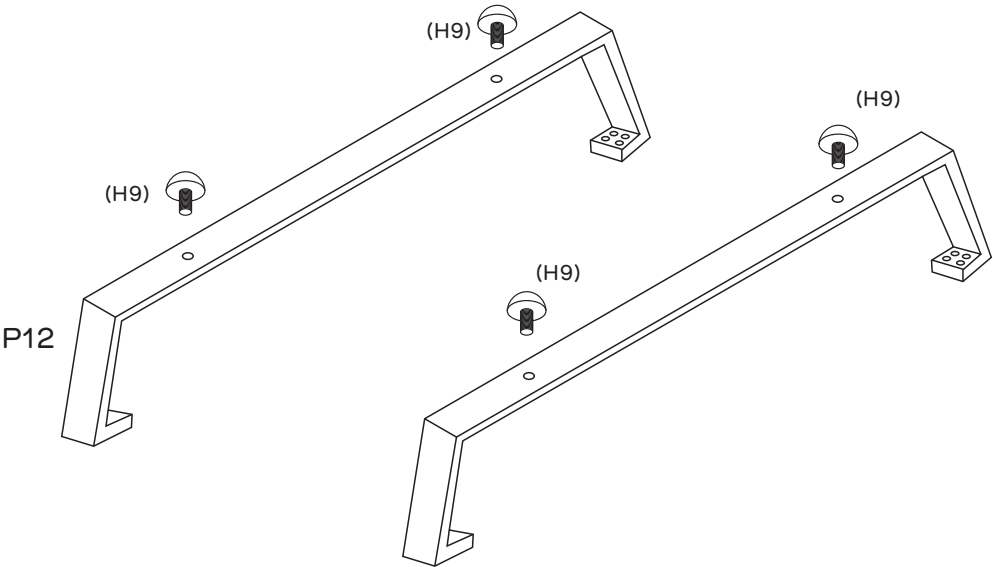




Screw in 4 x levelling feet (H9) into the 2 x legs (P12) by turning clockwise until secure. These can be adjusted as required to ensure assembled unit is level.


Step 5

TWO PEOPLE



X4

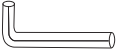You will need:	
	
16 x Short Bolts (H4)	16 x Washers (H5)
	
Allen Key (H10)	

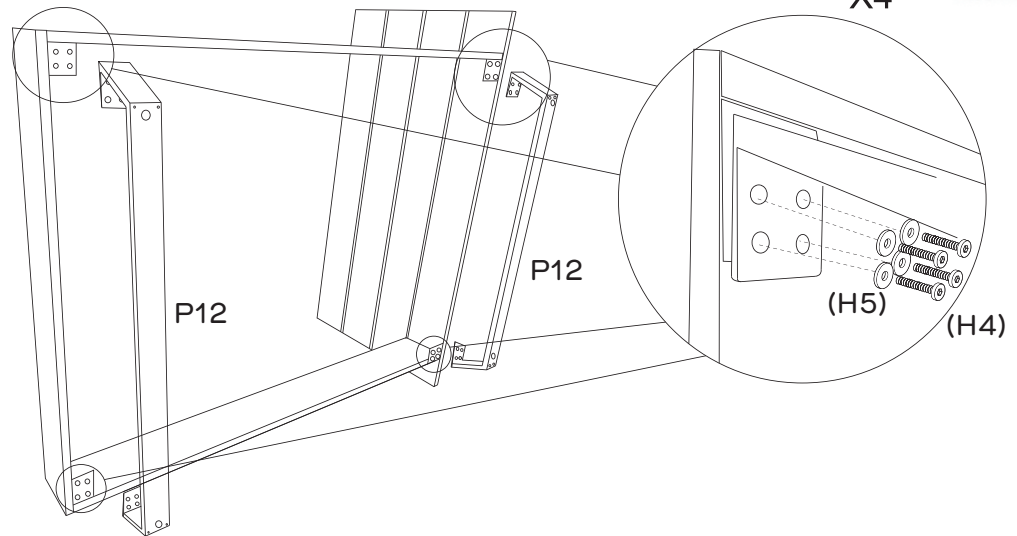




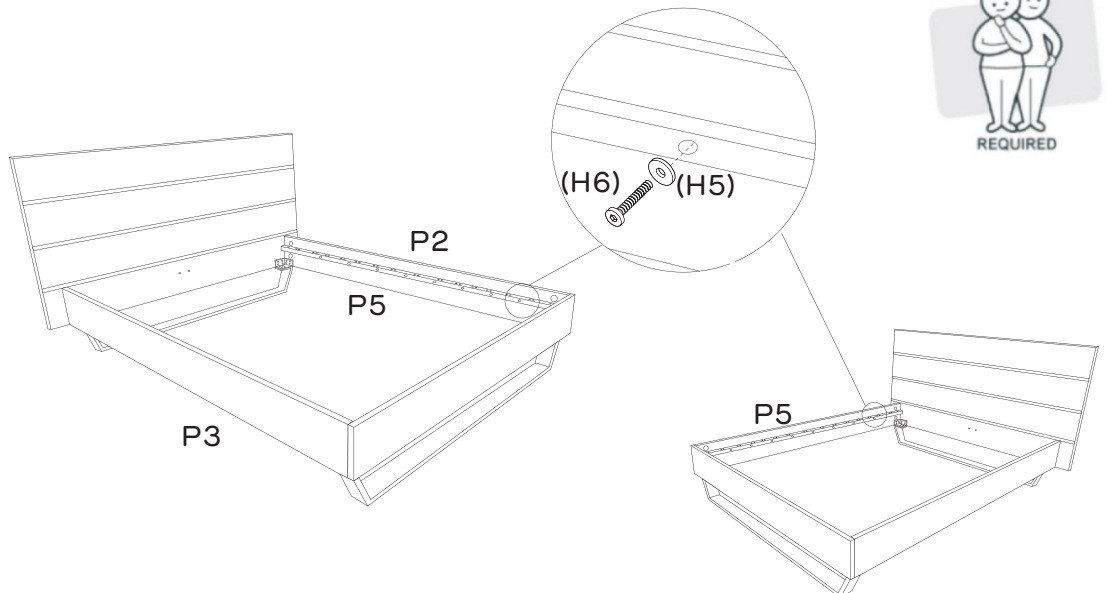
With assistance, carefully turn the bed over onto one side as pictured.
Connect the 2 x legs (P12) to the connectors (H13,H14)
using 16 x short bolts and 16 x washers (H5), completely tightening with the allen key (H10).

Step 6

TWO PEOPLE








You will need:	
	
16 x Bolts (H6)	16 x Washers (H5)
	
Allen Key (H10)	




With assistance, carefully turn the bed upright again.
Secure 1 x side rail (P5) to the right side panel (P2) using 8 x long bolts (H6)
and 8 x washers (H5), tightening using allen key (H10).
Repeat this step to secure the side rail (P5) to the left side panel (P3).

Step 7




You will need:	
	
6 x Bolts (H7)	12 x Washers (H5)
	
6 x Nuts (H8)	1 x Allen Key (H10)
	
1 x Spanner (H12)	

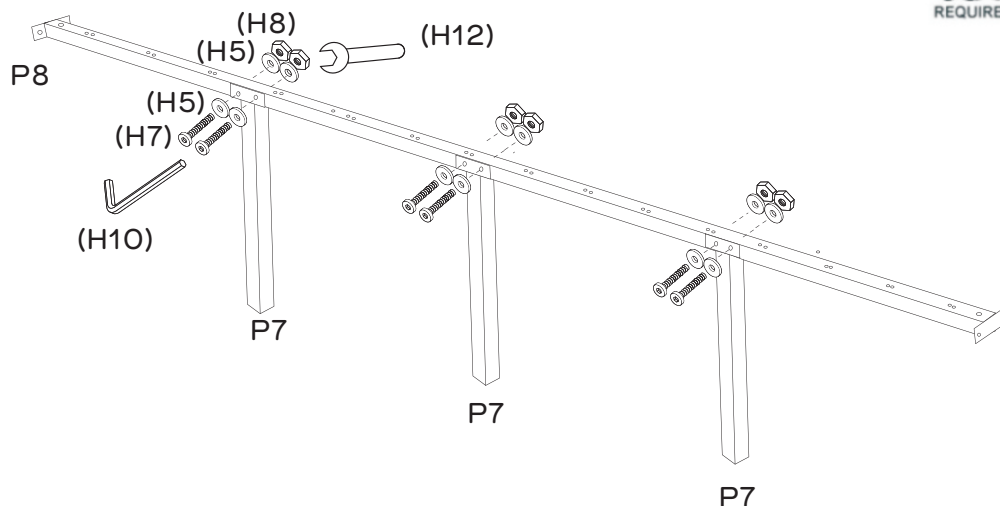

Attach the 3 x support legs (P7) to the centre rail (P8) using 6 x bolts (H7), 12 x washers (H5) and 6 x nuts (H8), tightening using the allen key (H10) and spanner (H12).




Step 8

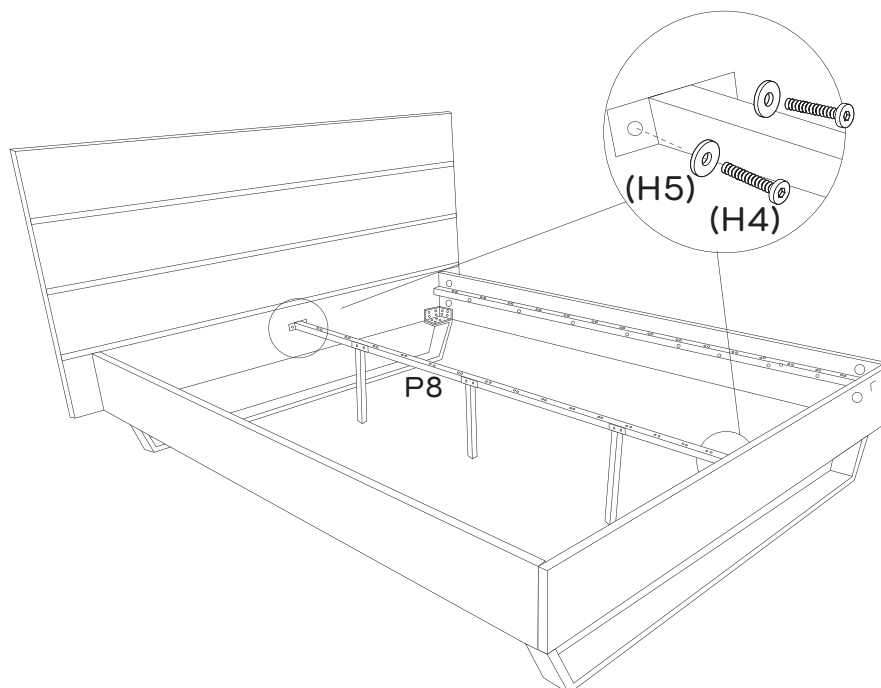
You will need:	
	
4 x Short Bolts (H4)	4 x Washers (H5)
	
Allen Key (H10)	



Align the centre rail (P8) between the headboard (P1) and footboard (P4) as shown. Secure the centre rail to the headboard (P1) and footboard (P4) using 4 x short bolts (H4) and 4 x washers (H5), tightening with the allen key (H10).



Step 9


You will need:	
	
6 x Bolts (H7)	6 x Washers (H5)
	
1 x Allen key (H10)	

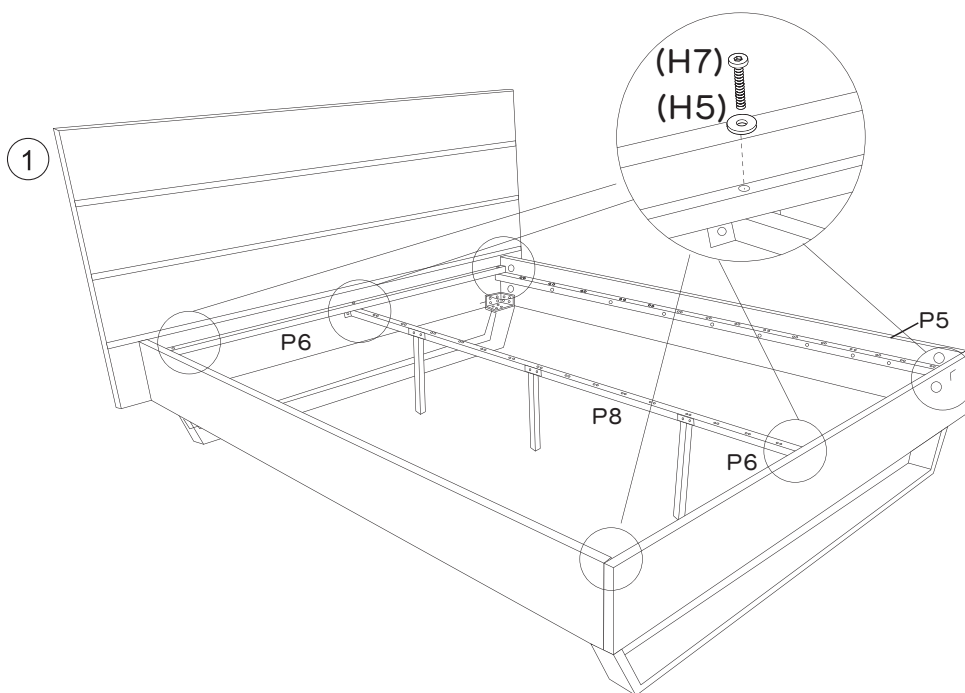

Attach the 2 x cross bars (P6) to the 2 x side rails (P5) and centre rail (P8) using 6 x bolts (H7) and 6 x washers (H5), tightening using the allen key (H10).

Step 10

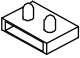You will need:	
	
15 x Centre Plastic Slat Caps (P9)	30 x Plastic Slat Caps (P10)
	
30 x Slats (P11)	

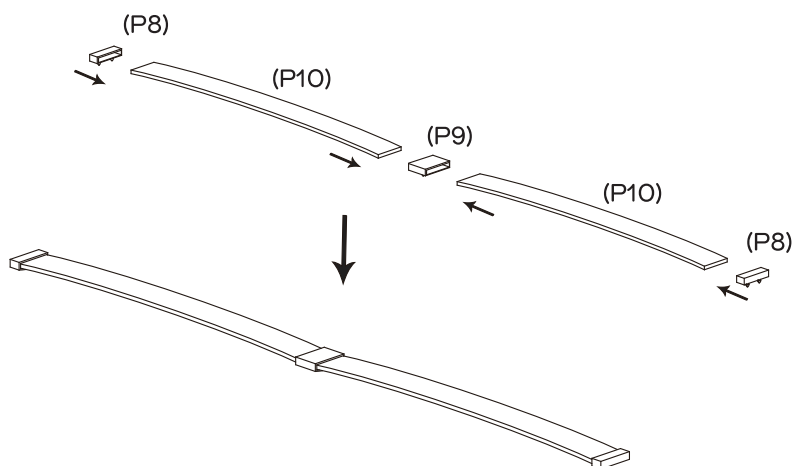

Attach 2 x plastic slat caps (P10), 2 x slats (P11) and 1 x centre plastic slat cap together as shown above.
Repeat this step for the other slats and caps.

Step 11



Lower onto the assembled bed frame, pushing in the plastic slat caps (P10) into the holes on the side rail, and the centre plastic slat caps (P9) into the holes on the centre rail (P8). Apply downward pressure until you feel the caps pop into place.

Step 12



Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.