




**Fantastic
Furniture**

Version 1.0

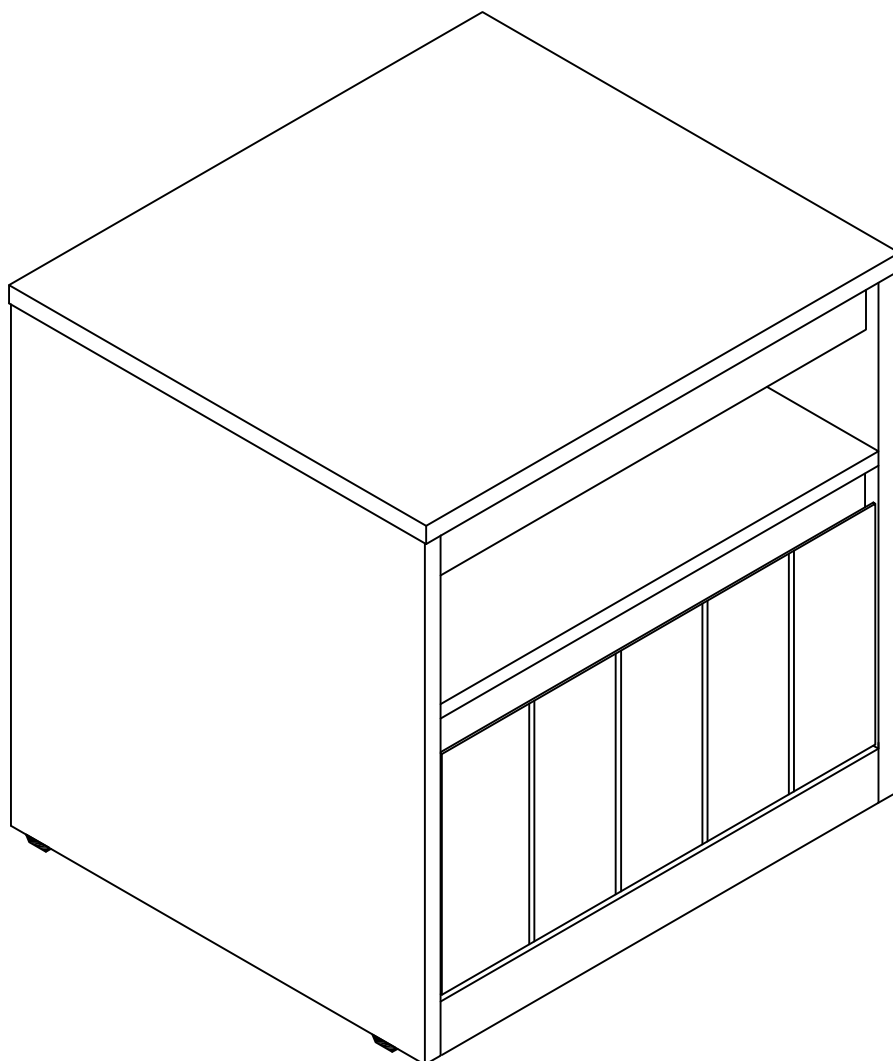

Jordan

Bedside 1 Drawer

fantasticfurniture.com.au



Warning: Ensure the wall strap is attached to avoid serious injury.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!
[@fantasticfurniture](https://www.instagram.com/fantasticfurniture)




**Fantastic
Furniture**

Assembly Checklist



Read through instructions carefully before you begin

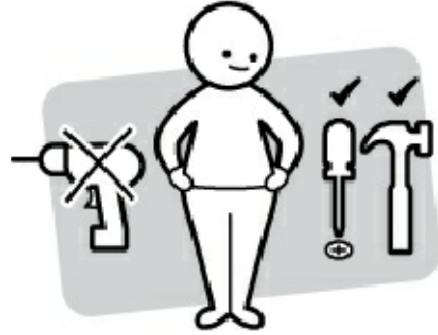

Make sure you have all the required tools.
Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless Instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistake made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need to assemble the product



Other tools you need


Phillips head screwdriver; Soft headed mallet

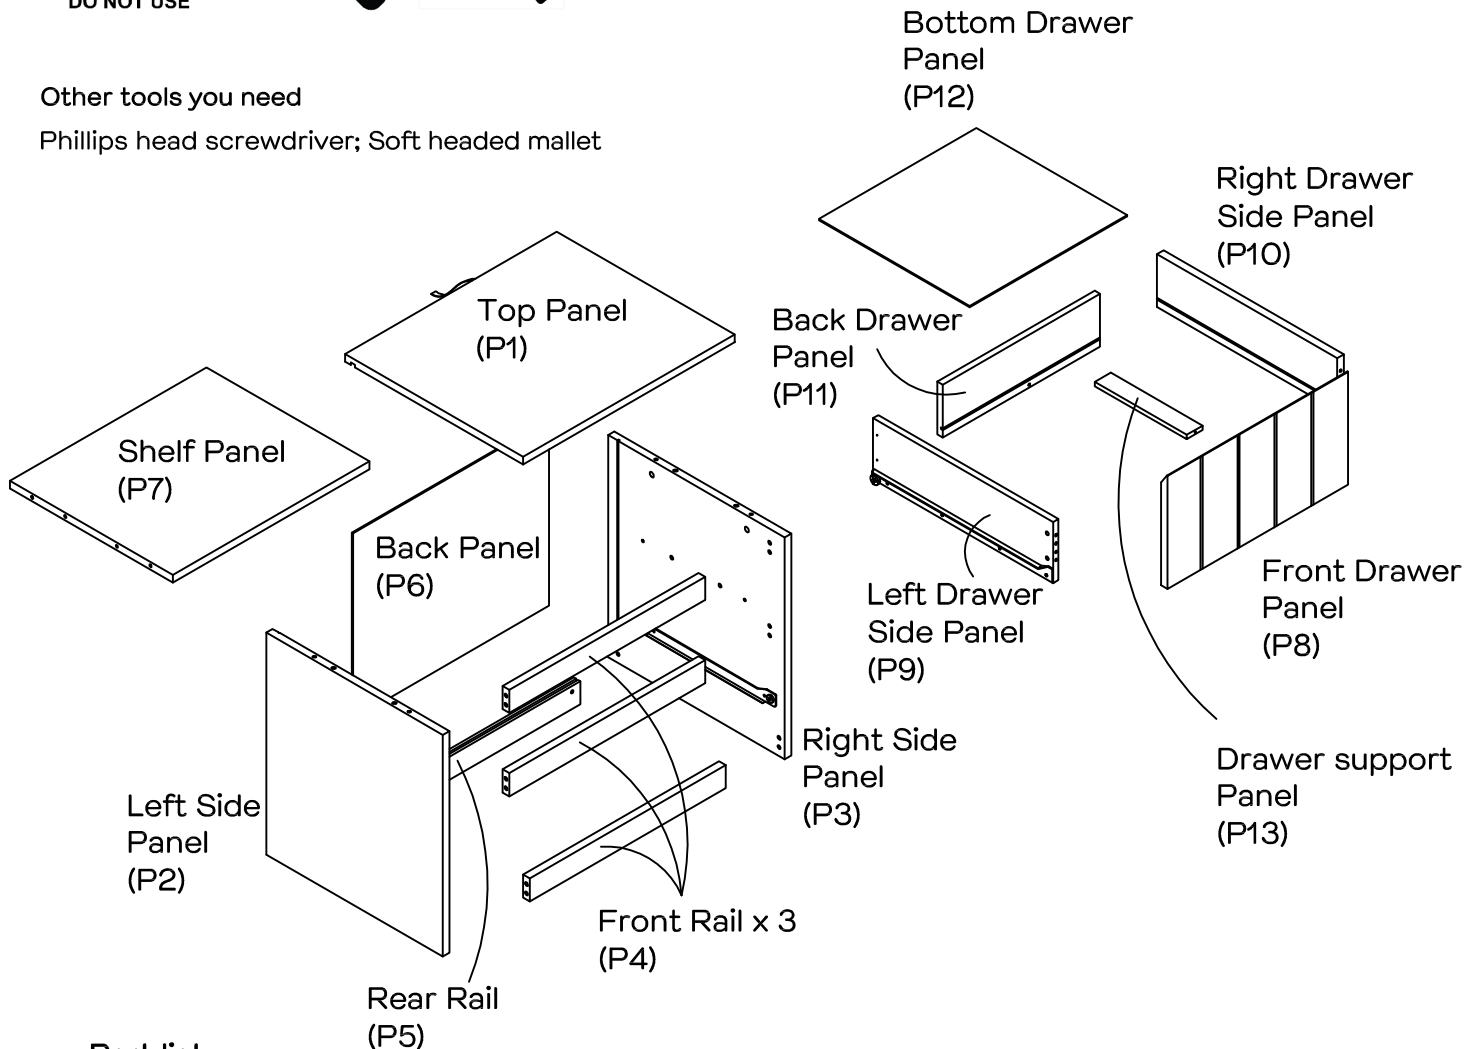



Part list


Top Panel (P1), Left Side Panel (P2), Right Side Panel (P3), Front Rails (P4), Rear Rail (P5), Back Panel (P6), Shelf Panel (P7), Front Drawer Panel (P8), Left Drawer Side Panel (P9), Right Drawer Side Panel (P10), Back Drawer Panel (P11), Bottom Drawer Panel (P12), Drawer Support Panel (P13), Hardware pack.

Hardware pack

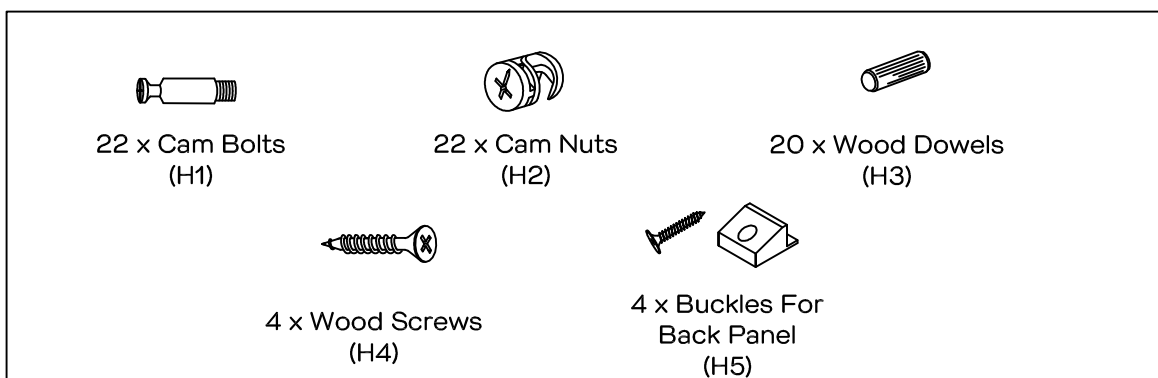



Step 1

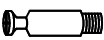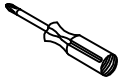
You will need	
	
22 x Cam Bolts (H1)	Phillips Head Screwdriver

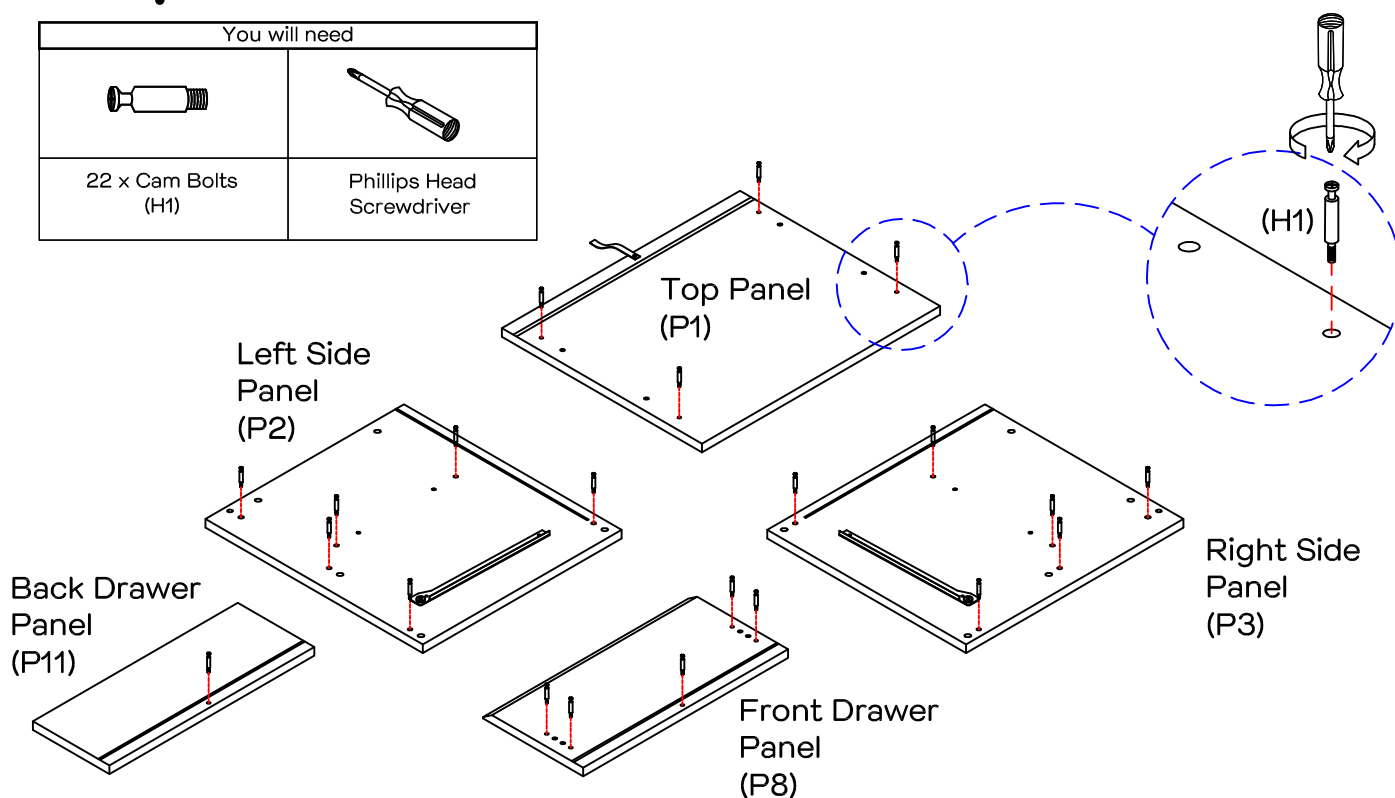

Insert 22 x cam bolts (H1) to panels as shown.
Secure by tightening cam bolts (H1) with a phillips head screwdriver.


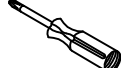
Step 2



You will need	
	
20 x Wood Dowels (H3)	Soft Headed Mallet

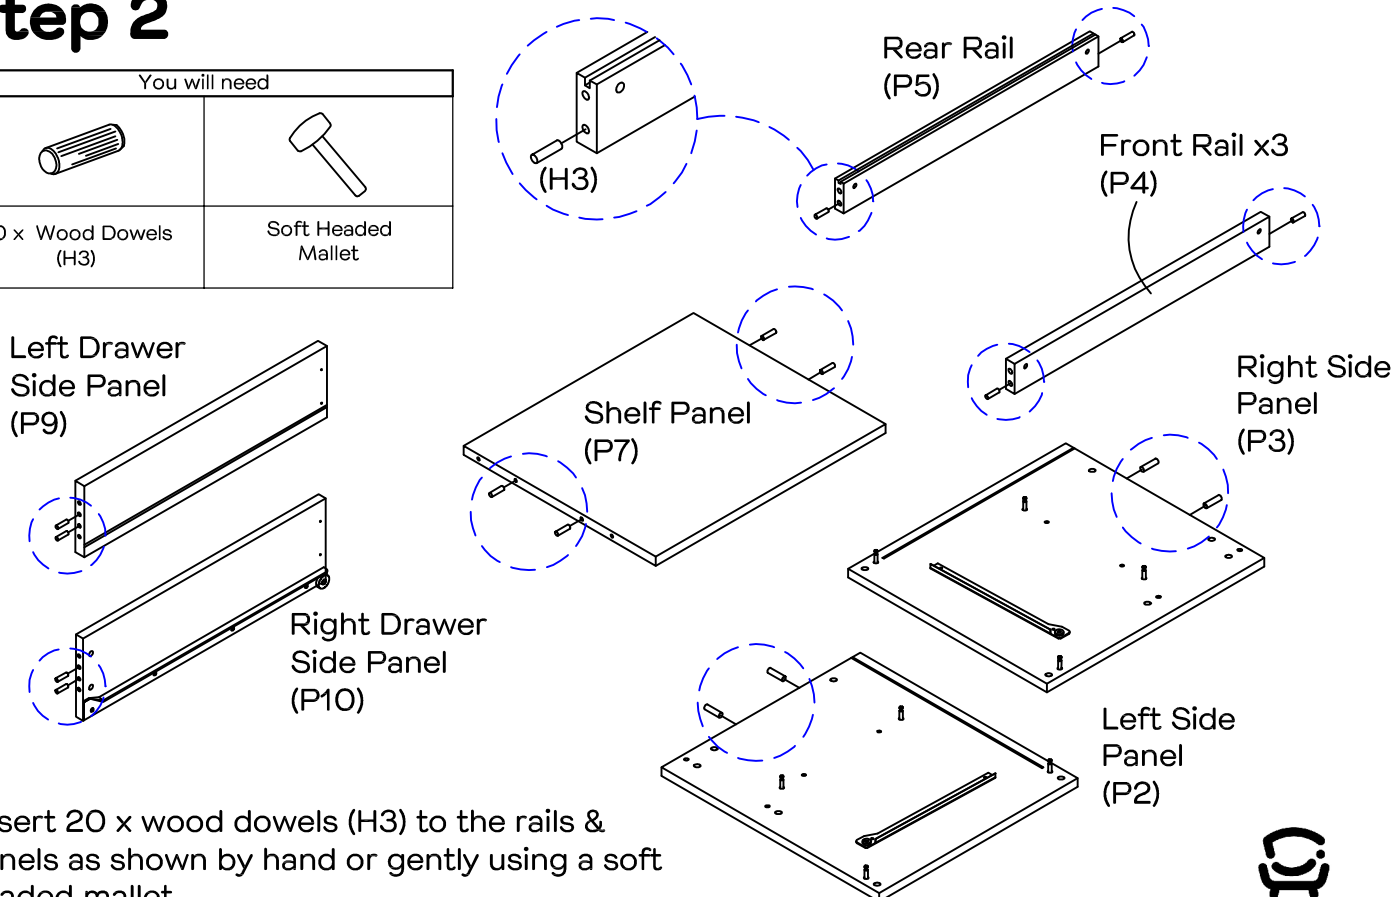

Insert 20 x wood dowels (H3) to the rails & panels as shown by hand or gently using a soft headed mallet.

Step 3

You will need	
	
3 x Cam Nuts (H2)	Phillips Head Screwdriver

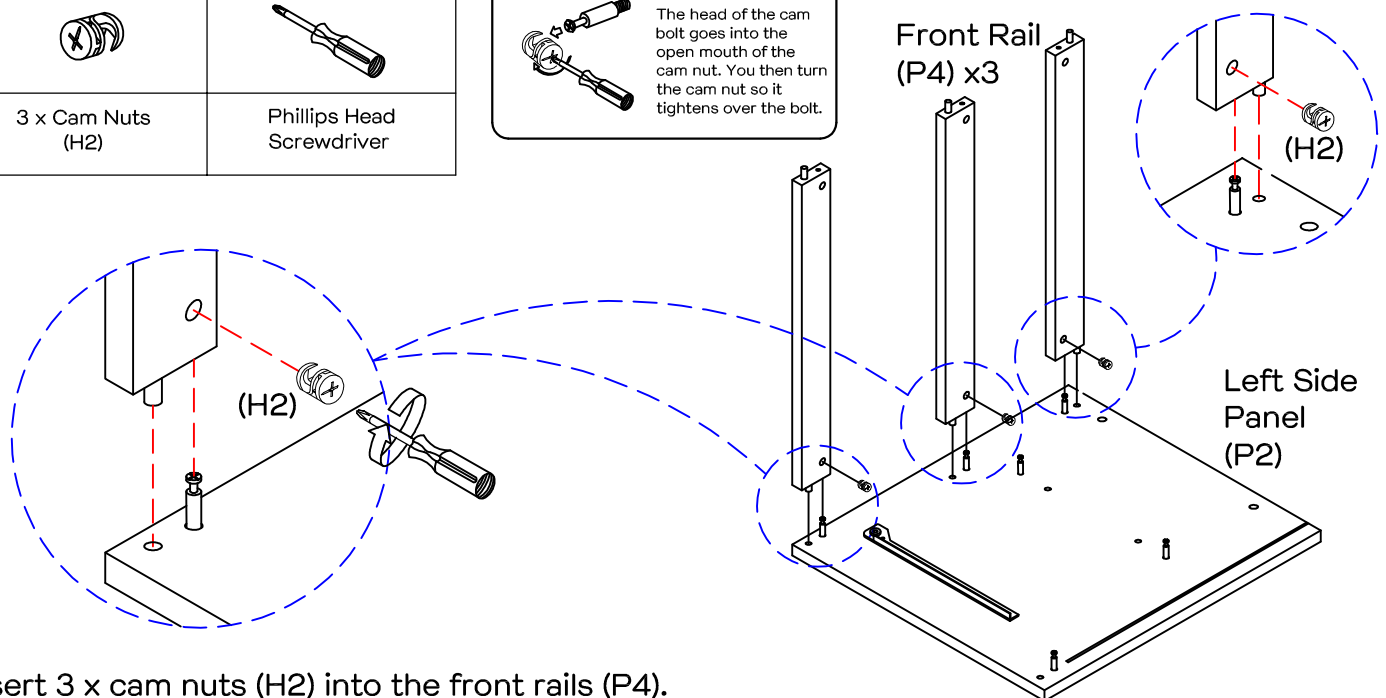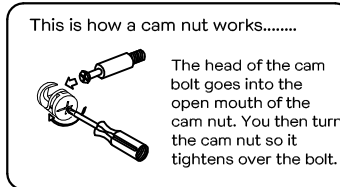


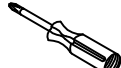
Insert 3 x cam nuts (H2) into the front rails (P4).



Rotate the cam nuts (H2) so the arrows point towards the incoming cam bolts.

Attach the 3 x front rails (P4) to the left side panel (P2).

Turn the cam nuts (H2) on the front rails (P4) clockwise with a phillips head screwdriver to lock into position.

Step 4

You will need	
	
1 x Cam Nut (H2)	Phillips Head Screwdriver

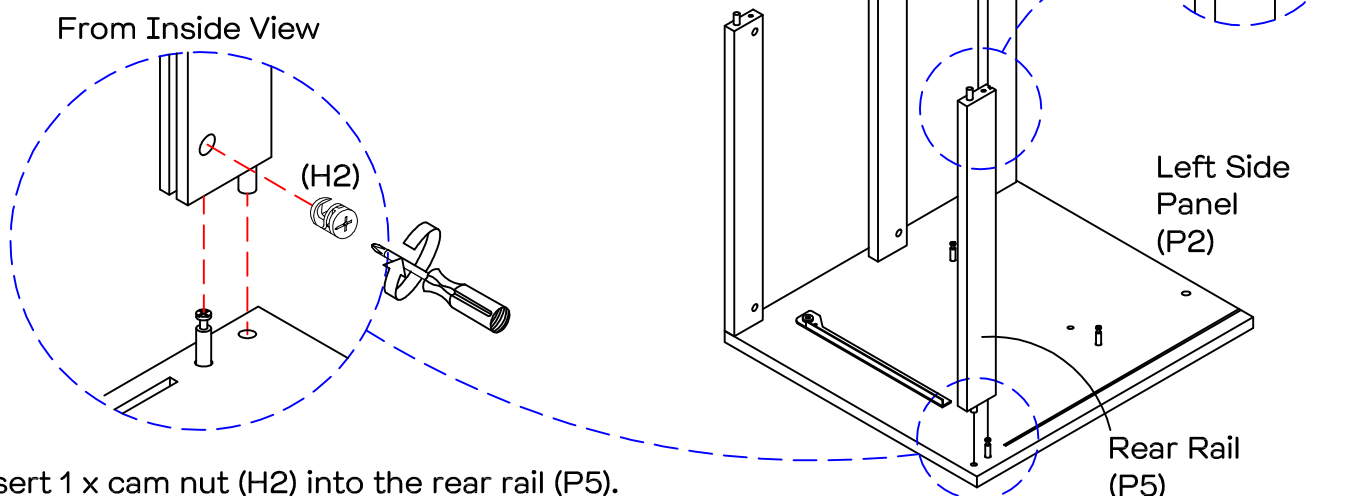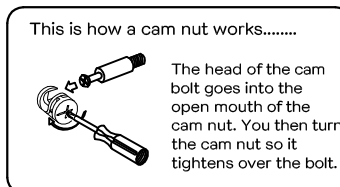


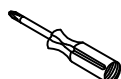
Insert 1 x cam nut (H2) into the rear rail (P5).



Rotate the cam nut (H2) so the arrow point towards the incoming cam bolts.

Attach the rear rail (P5) to the left side panel (P2).

Turn the cam nut (H2) on the rear rail (P5) clockwise with a phillips head screwdriver to lock into position.


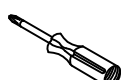
Step 5



You will need	
	
2 x Cam Nuts (H2)	Phillips Head Screwdriver

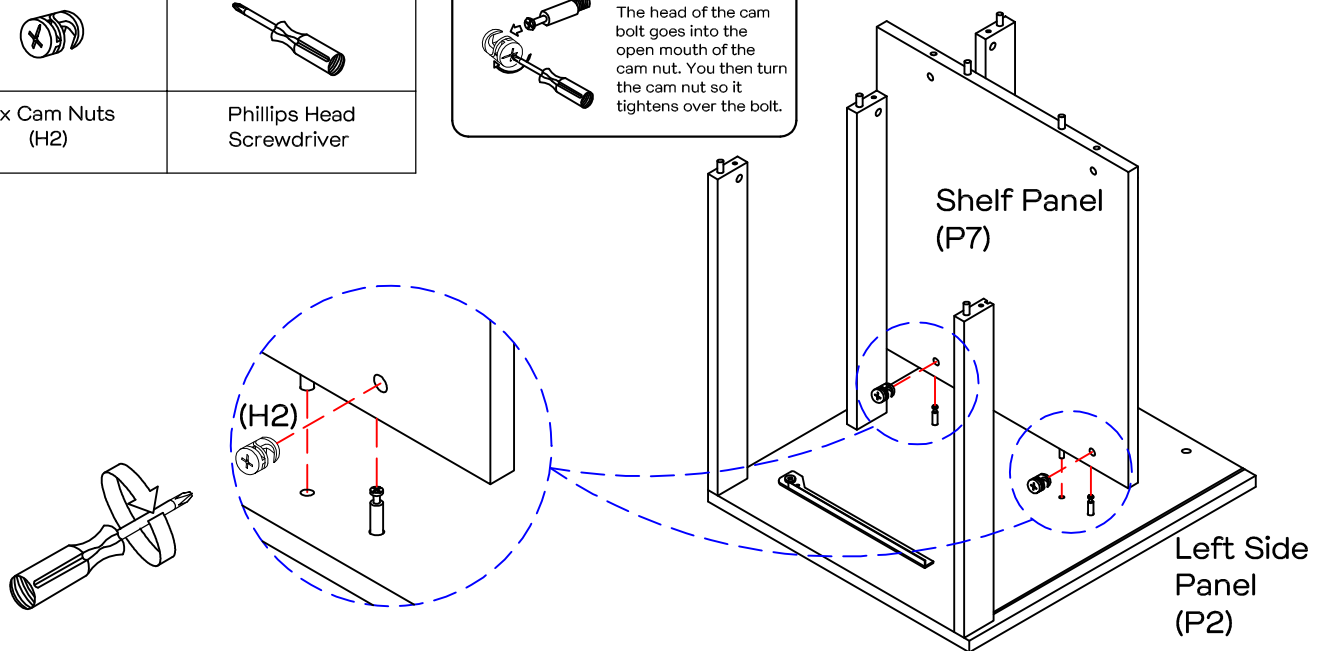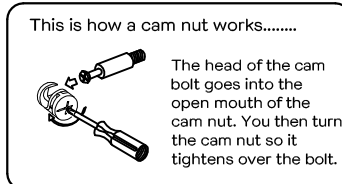

Insert 2 x cam nuts (H2) into the shelf panel (P7).
 Rotate the cam nuts (H2) so the arrows point towards the incoming cam bolts.
 Attach the shelf panel (P7) to the left side panel (P2).
 Turn the cam nuts (H2) on the shelf panel (P7) clockwise with a phillips head screwdriver to lock into position.


Step 6

You will need	
	
6 x Cam Nuts (H2)	Phillips Head Screwdriver

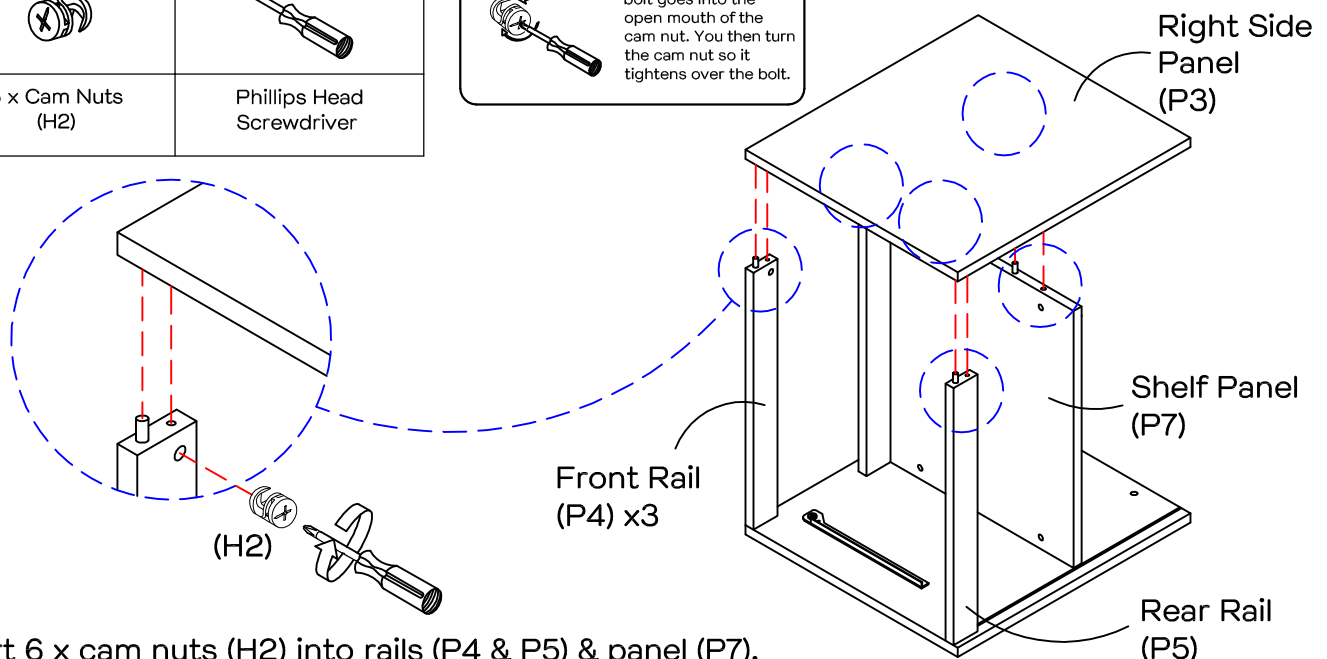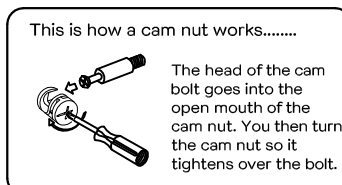

Insert 6 x cam nuts (H2) into rails (P4 & P5) & panel (P7).
 Rotate the cam nuts (H2) so the arrows point towards the incoming cam bolts.
 Attach the right side panel (P3) to the rails (P4 & P5) & panel (P7).
 Turn the cam nuts (H2) on the rails (P4 & P5) & panel (P7) clockwise with a phillips head screwdriver to lock into position.



Step 7

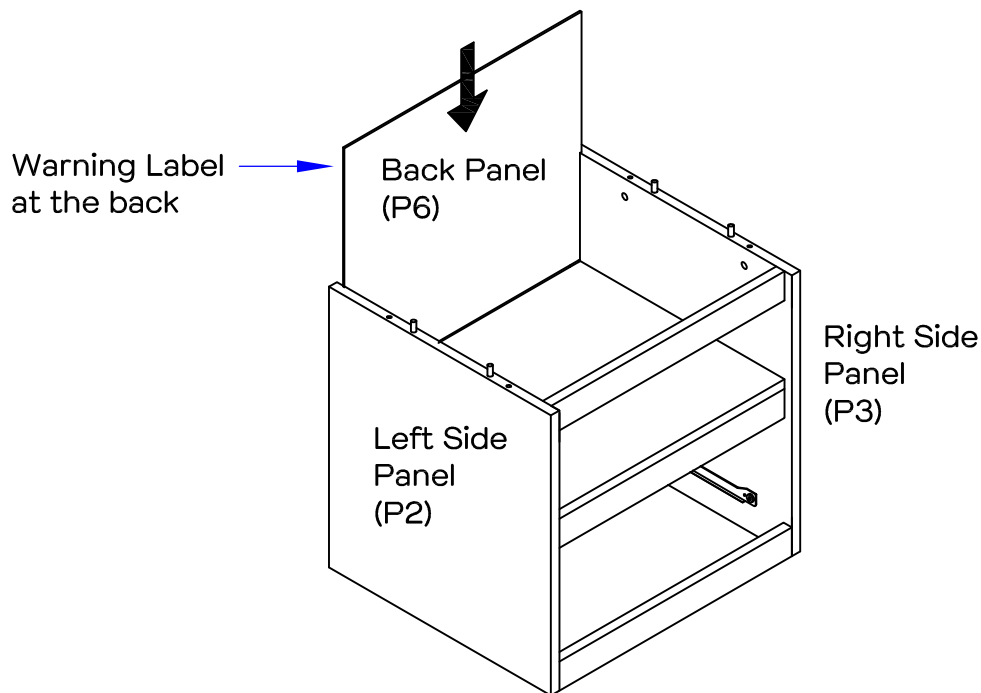

Slot in back panel (P6) into the grooves of the left & right side panel (P2 & P3) and also rear rail (P5). The warning label should be facing the back.


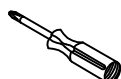
Step 8



You will need	
4 x Cam Nuts (H2)	Phillips Head Screwdriver

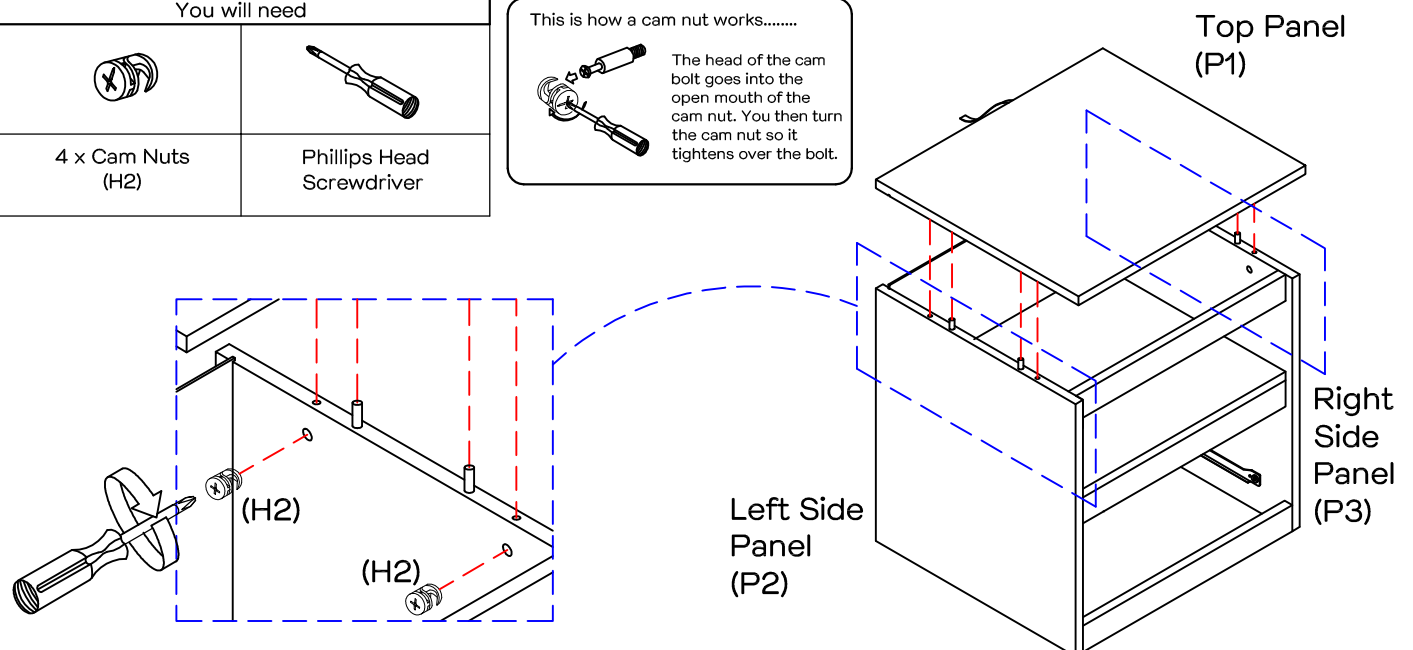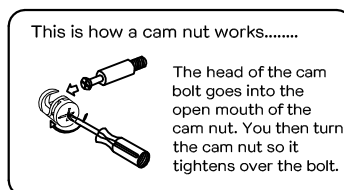

Insert 4 x cam nuts (H2) into the right & left side panel (P2 & P3).
 Rotate the cam nuts (H2) so the arrows point towards the incoming cam bolts.
 Attach the top panel (P1) to the right & left side panel (P2 & P3).
 Turn the cam nuts (H2) on the right & left side panel (P2 & P3) clockwise with a phillips head screwdriver to lock into position.
 Ensure the back panel (P6) slots into the groove of the top panel (P1).


Step 9

You will need	
	
4 x Cam Nuts (H2)	Phillips Head Screwdriver

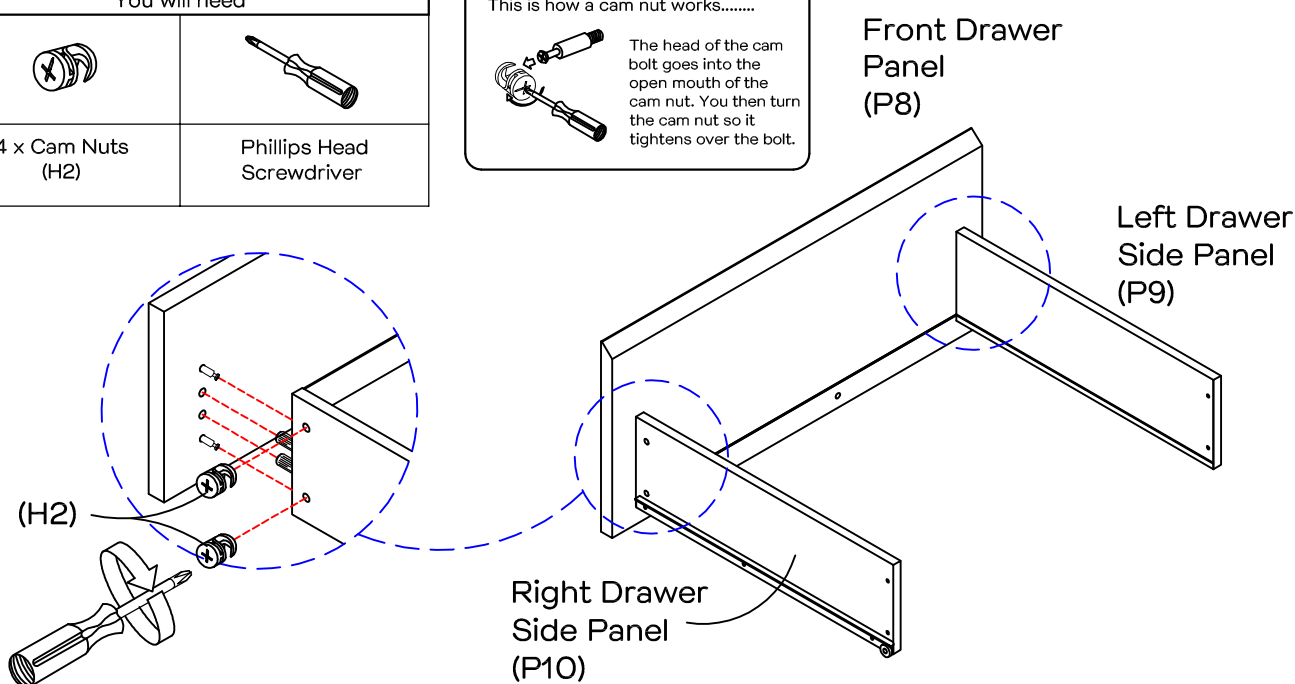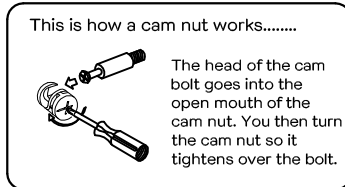


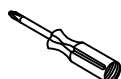
Insert 4 x cam nuts (H2) into the left & right drawer side panels (P9 & P10). Rotate the cam nuts (H2) so the arrows point towards the incoming cam bolts. Attach the front drawer panel (P8) to the left & right drawer side panels (P9 & P10). Turn the cam nuts (H2) on panels (P9 & P10) clockwise with a phillips head screwdriver to lock into position.



Step 10

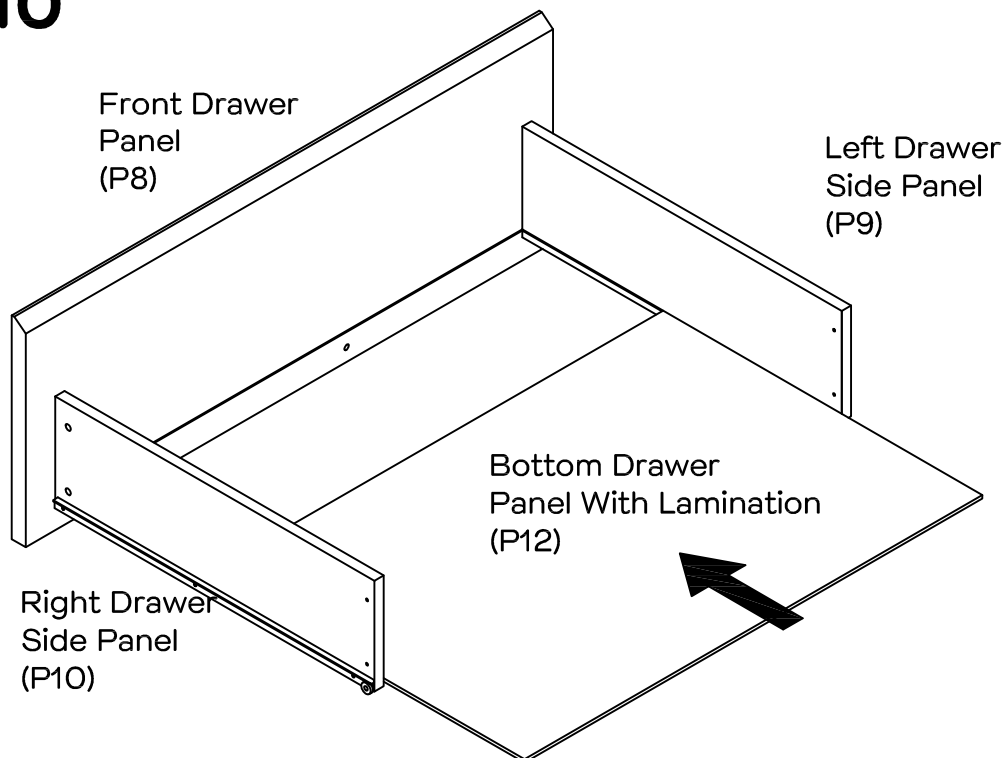

Slot in bottom drawer panel (P12) into the grooves of the left & right drawer side panels (P9 & P10) and also to the front drawer panel (P8) .


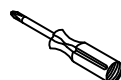
Step 11


You will need	
	
2 x Cam Nuts (H2)	Phillips Head Screwdriver

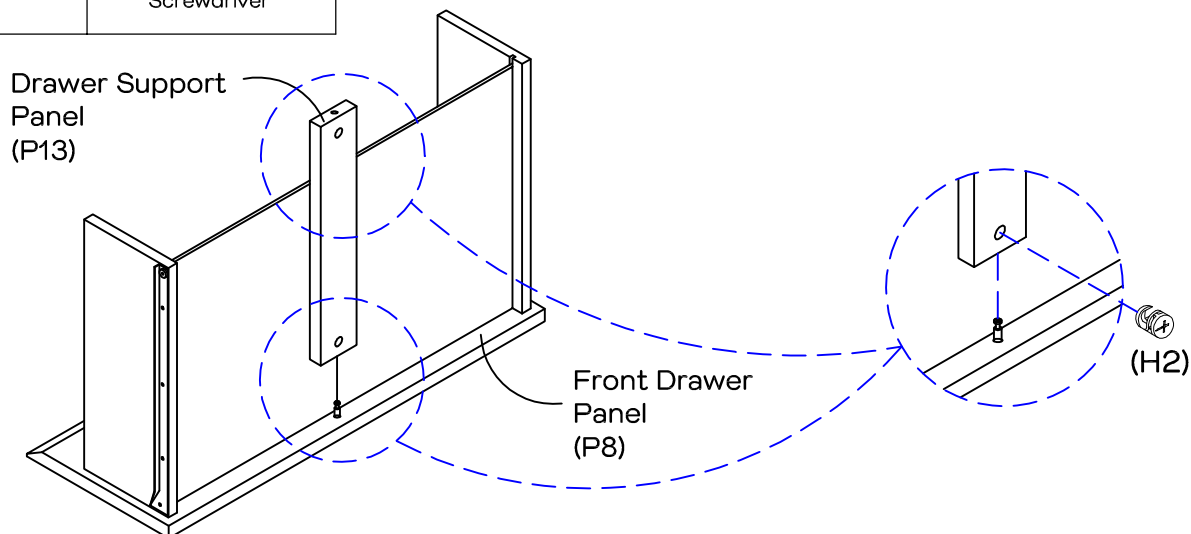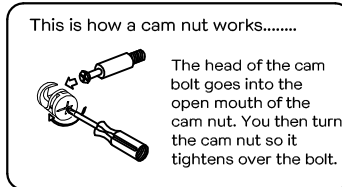

Insert 2 x small cam nuts (H2) into the drawer support panel (P13). Rotate the cam nuts (H2) so the arrow points towards the incoming cam bolts. Attach the drawer support panel (P13) to the front drawer panel (P8). Turn the bottom cam nut (H2) on drawer support panel (P13) clockwise with a phillips head screwdriver to lock into position.



Step 12

You will need	
	
4 x Wood Screws (H4)	Phillips Head Screwdriver

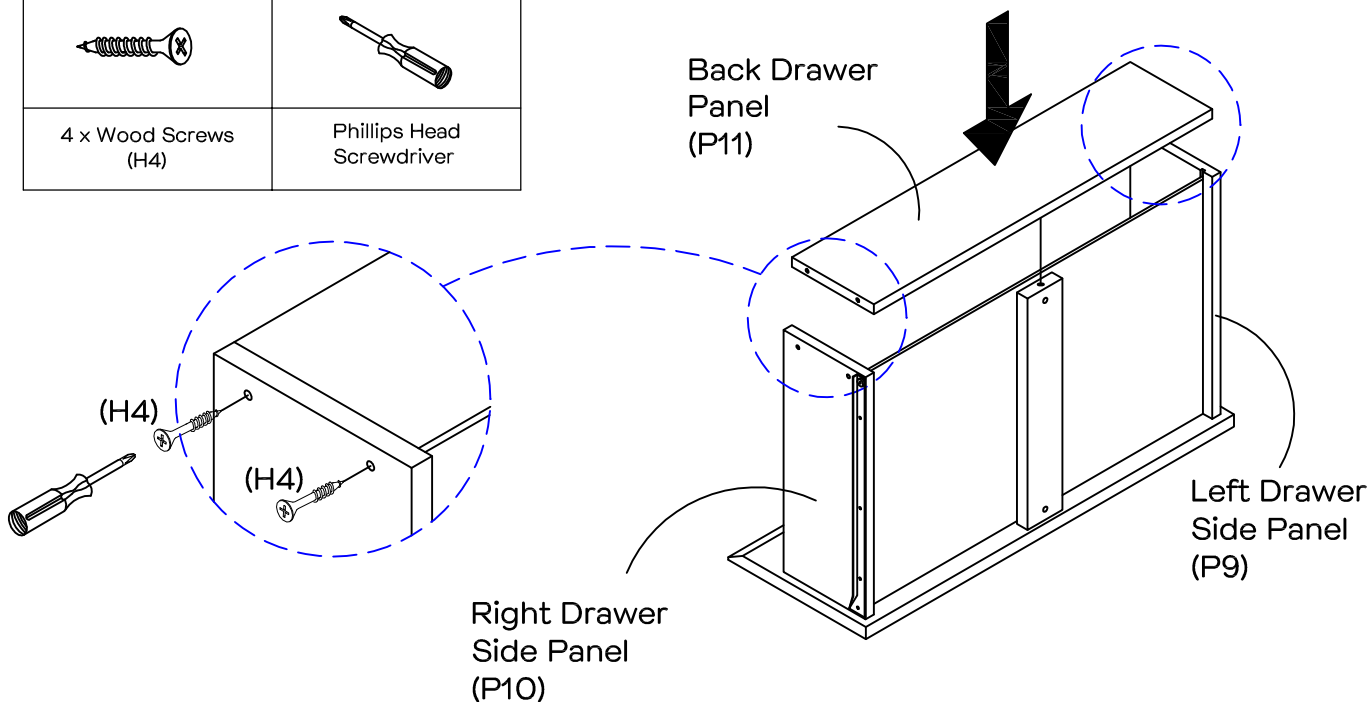


Fix the back drawer panel (P11) to the left & right drawer side panels (P9 & P10) using 4 x wood screws (H4) tightening with a phillips head screwdriver.

Step 13

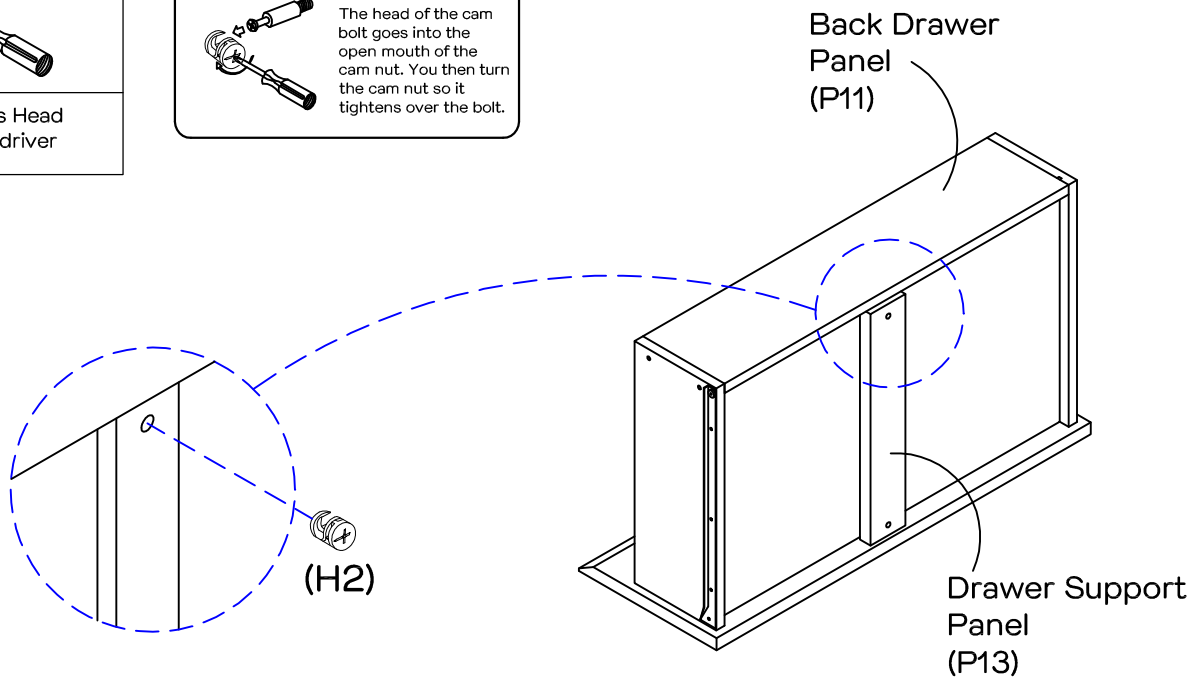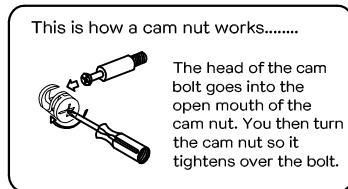

Attach the back drawer panel (P11) to the drawer support panel (P13). Turn the top cam nut (H6) on drawer support panel (P13) clockwise with a phillips head screwdriver to lock into position.


Step 14

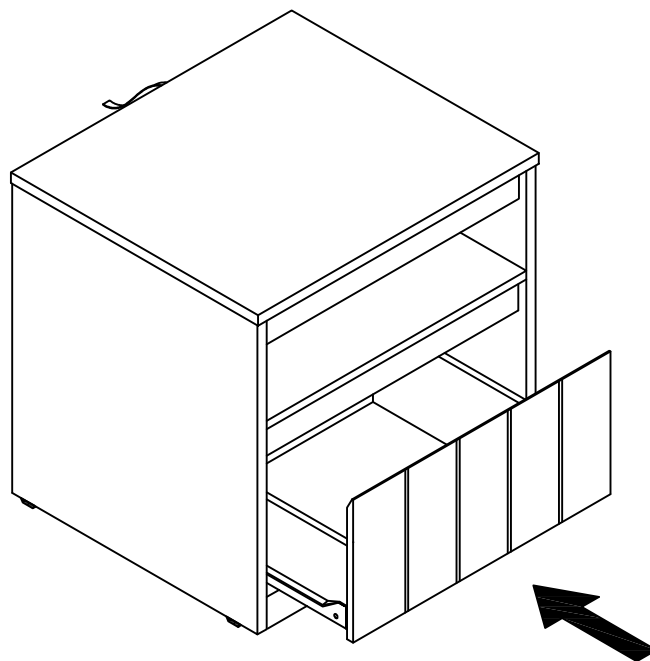

Insert the drawer into the unit.

Step 15


You will need	
4 x Buckles For Back Panel (H5)	Phillips Head Screwdriver

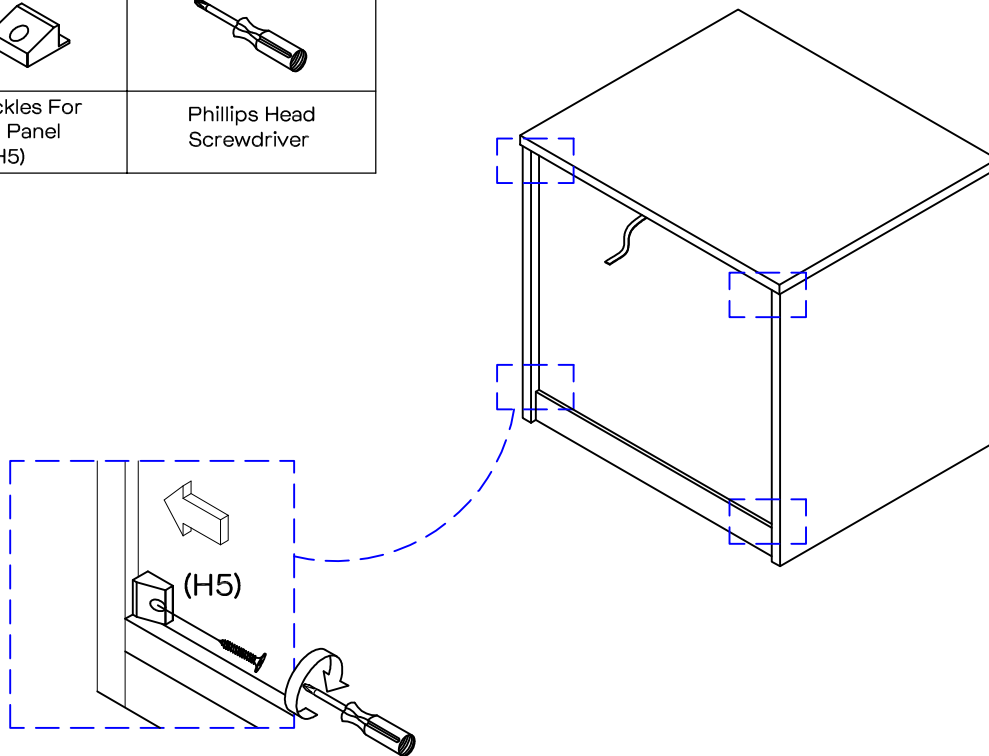

Insert the 4 x buckles (H5) into the frame as shown with a phillips head screwdriver.


Step 16

You will need	
Phillips Head Screwdriver	

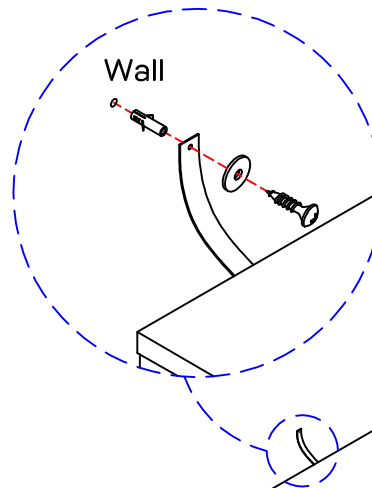


We strongly advise that you use the wall safety strap provided to prevent the unit topping.

Move the bedside to its final position and then secure the wall strap to the wall. Ensure it is firmly attached. The screws and wall plugs are not provided. Please use appropriate fixtures for your wall. Seek advice from a qualified tradesperson on how to attach this safety straps to your specific wall.

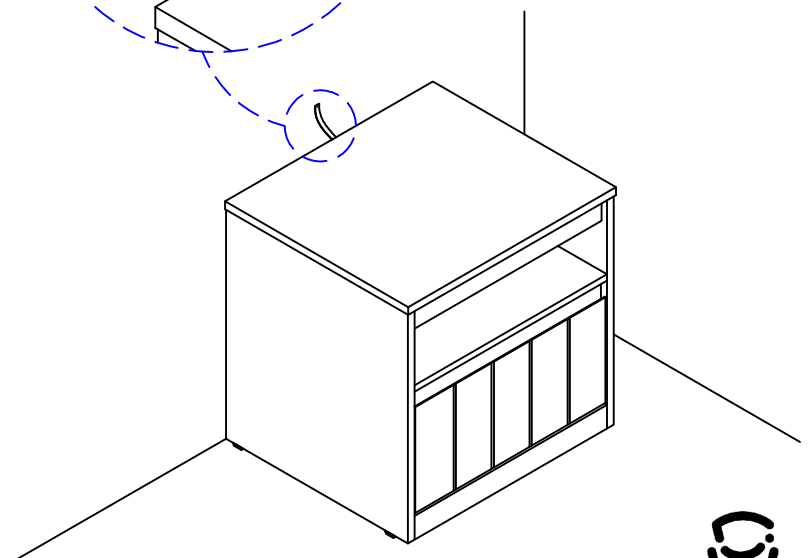

Step 17

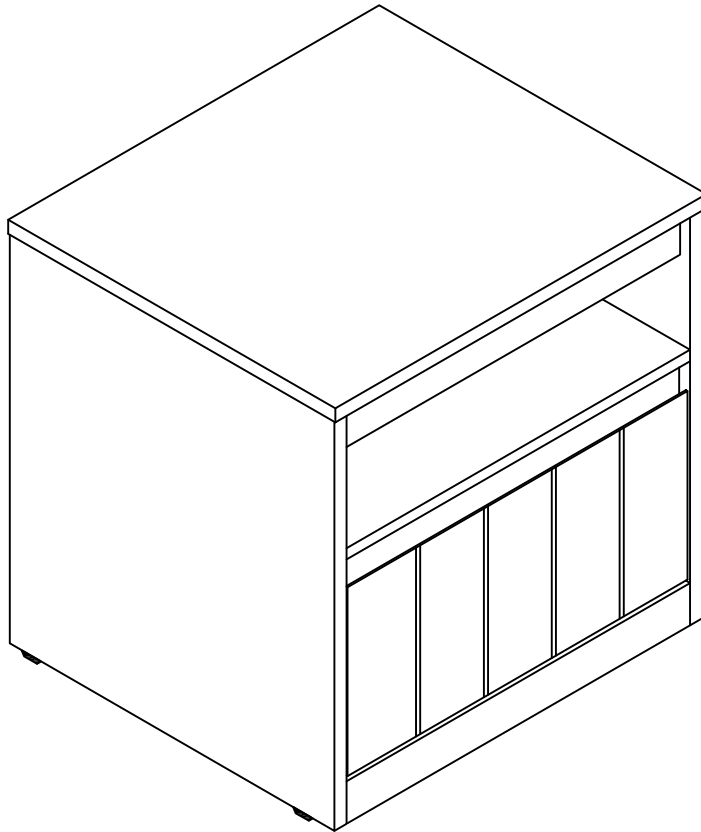

Job Complete!

in the interest of our environment please dispose of all packaging thoughtfully.