


# Assembly Instructions

## GECKO


### Trundle Single

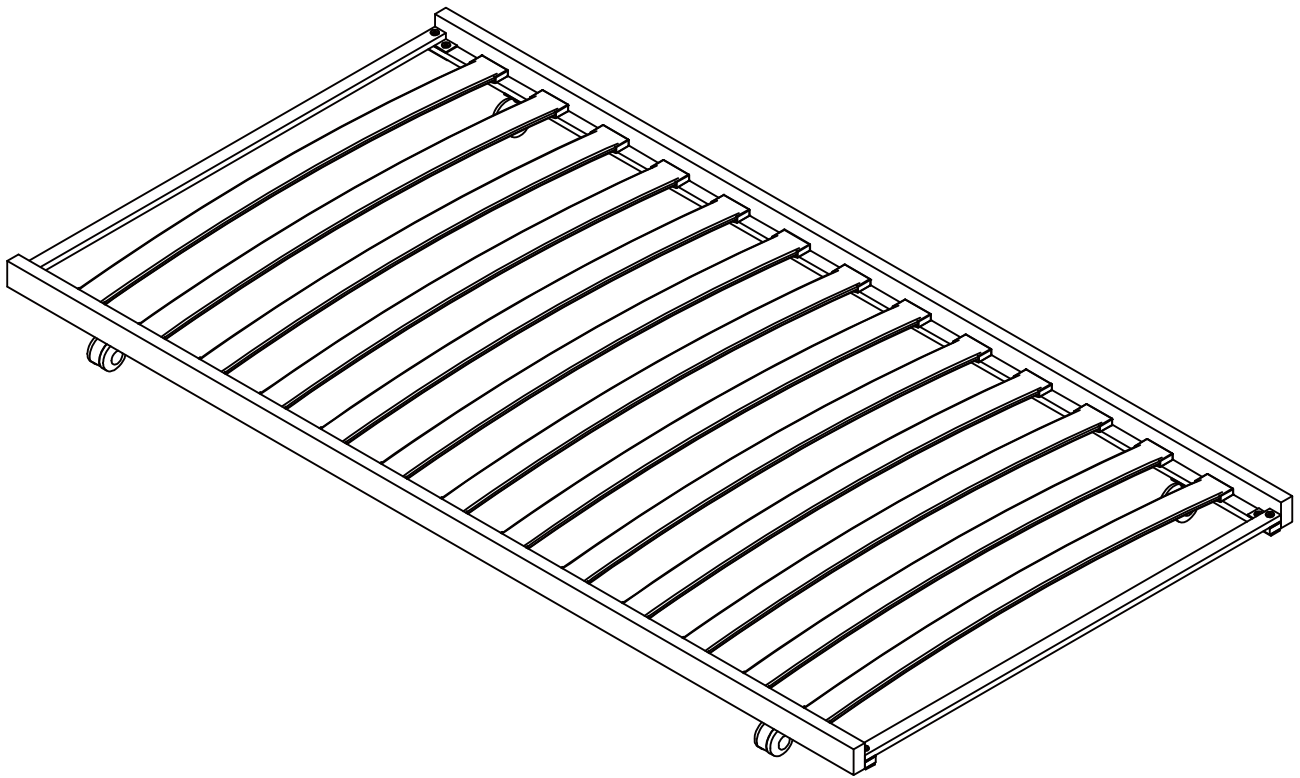

# WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1

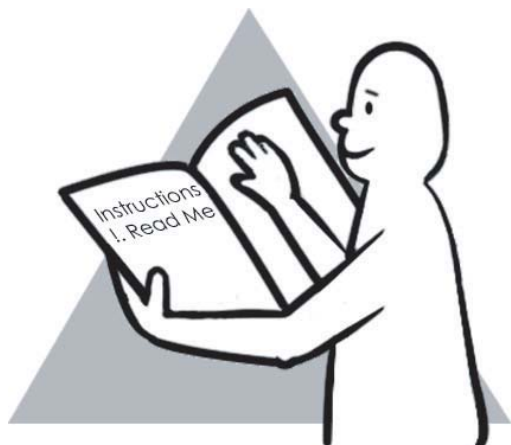


Read Instructions carefully.  
Check no parts are missing.

2

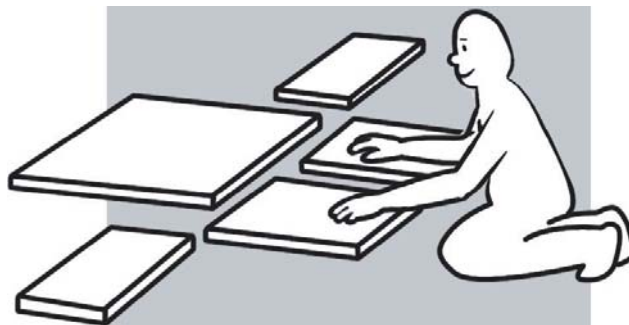

Lay out all of the components on a soft surface  
as if you were preparing to do a jigsaw puzzle.

3

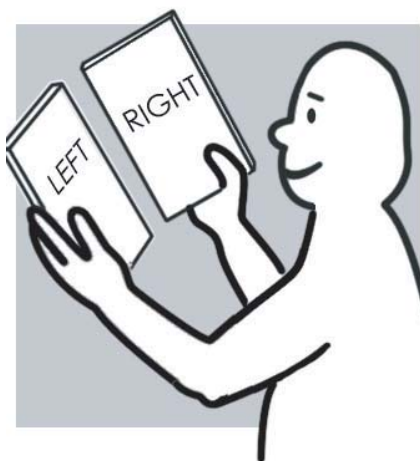


Carefully identify each component, especially  
those that are similar. The most common mistake  
is getting things back to front.

4



Separate and identify each component from the  
hardware pack and rest each one in its proper  
location before fastening.

5

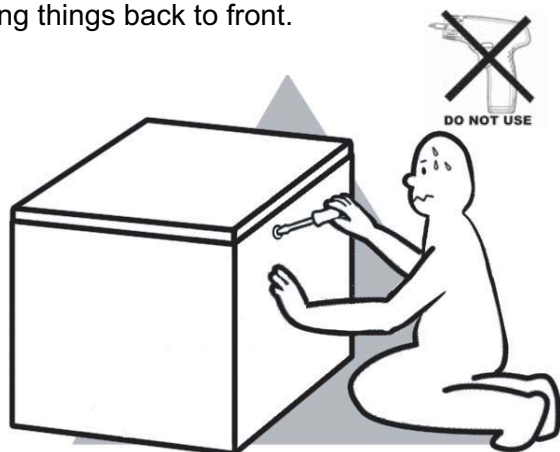

**DO NOT** fully tighten screws (leave slightly  
loose). When the item is fully assembled  
tighten the screws - but do not over tighten.


6



If glue is required **DO NOT** set until you are  
certain that the parts belong together.

# What you Need

## To Assemble the Body

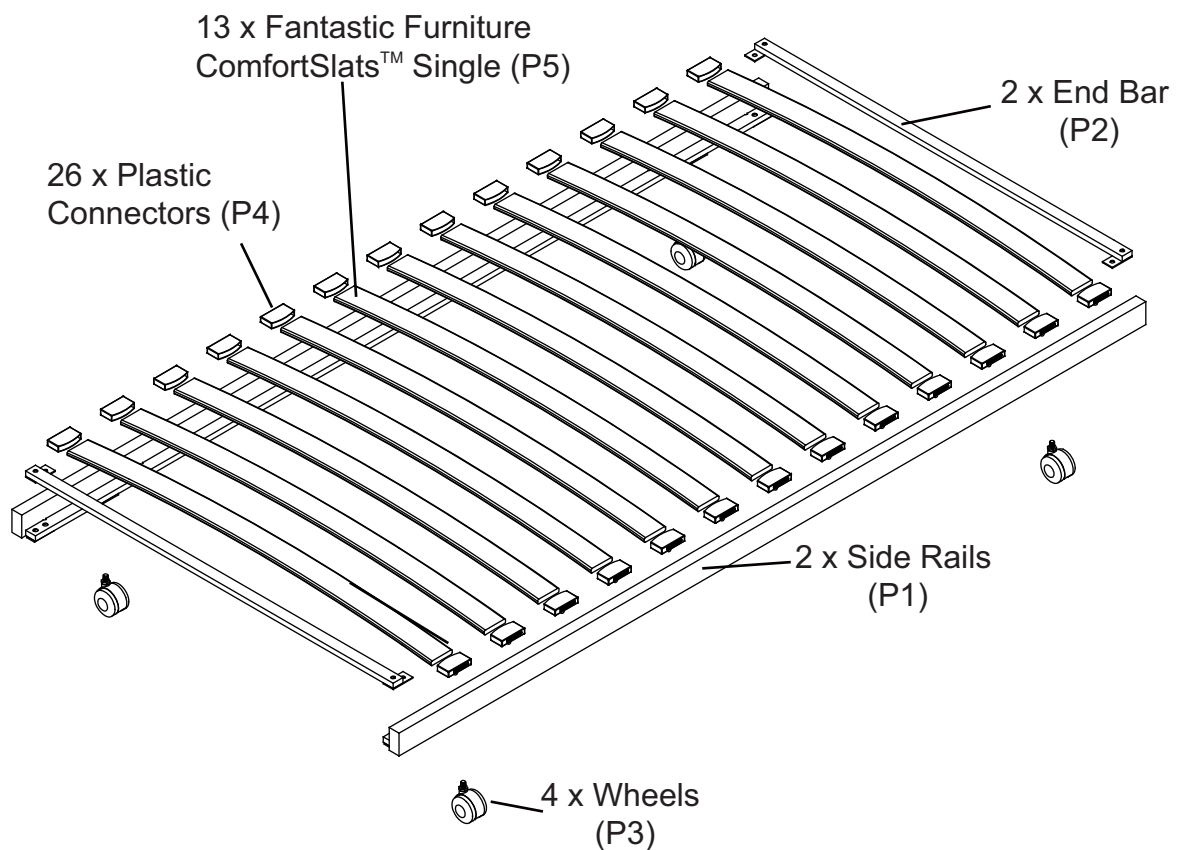

4 x Short Bolts  
(H1)



4 x Long Bolts  
(H2)



4 x Washers  
(H3)






1 x Allen Key




1 x Spanner


Please make sure you have all these parts before you start.

# Step 1

You will need:	
4 x Short Bolts (H1)	
4 x Long Bolts (H2)	
4 x Washers (H3)	

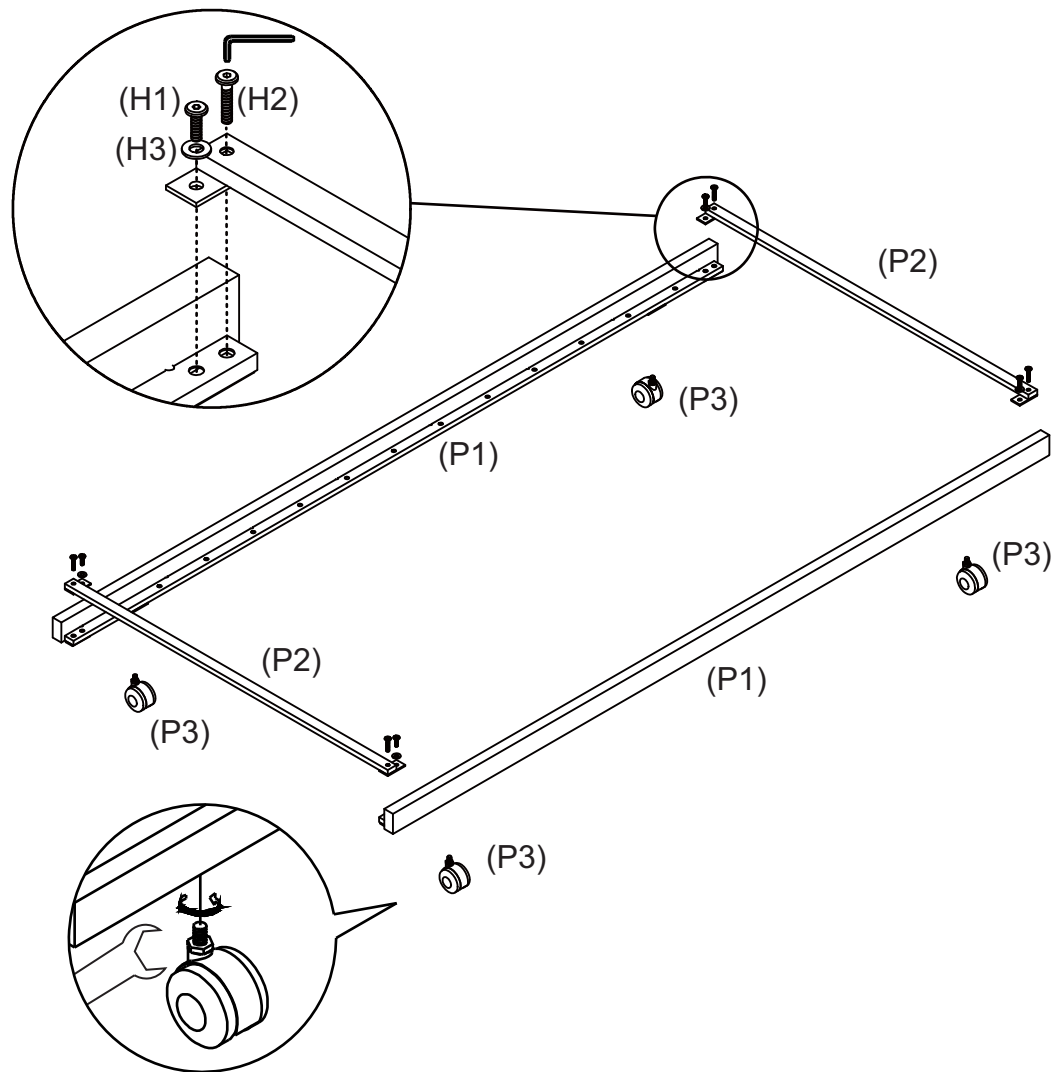



1 x Allen Key




1 x Spanner

Attach 2 x Side Rails (P1) to 2 x End Bar (P2) using 4 x Short Bolts (H1), 4 x Long Bolts (H2) and 4 x Washers (H3). Turn over and attach 4 x Wheels (P3) to Side Rails using spanner.


# Step 2

You will need:	
26 x Plastic Connectors (P4)	
13 x Fantastic Furniture ComfortSlats™ Single (P5)	

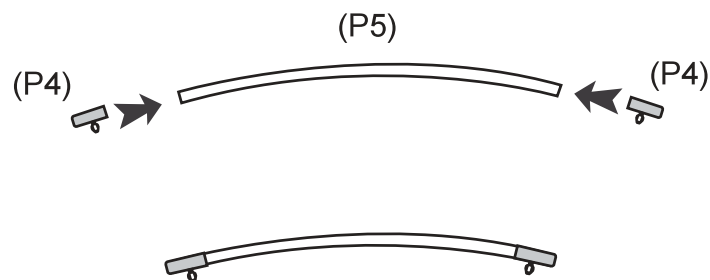


Push 26 x Plastic Connectors (P4) firmly onto 13 x Fantastic Furniture ComfortSlats™ Single (P5).

## Step 3a

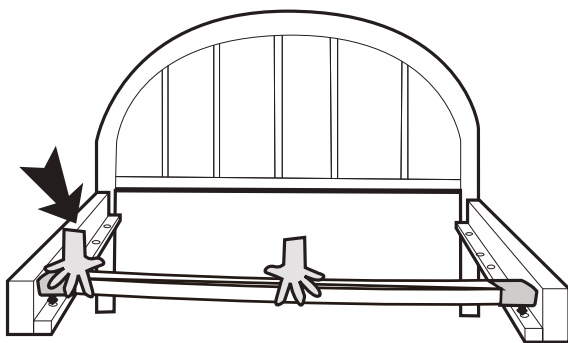


Place the slat in position then push down on the centre of the slat to flatten out the slat. Make sure the plastic prong lines up with the hole. Then push firmly.

## Step 3b

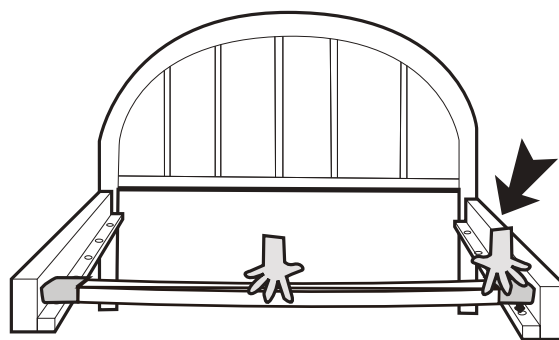

Repeat the same process for the other end of the slat.

## Step 4

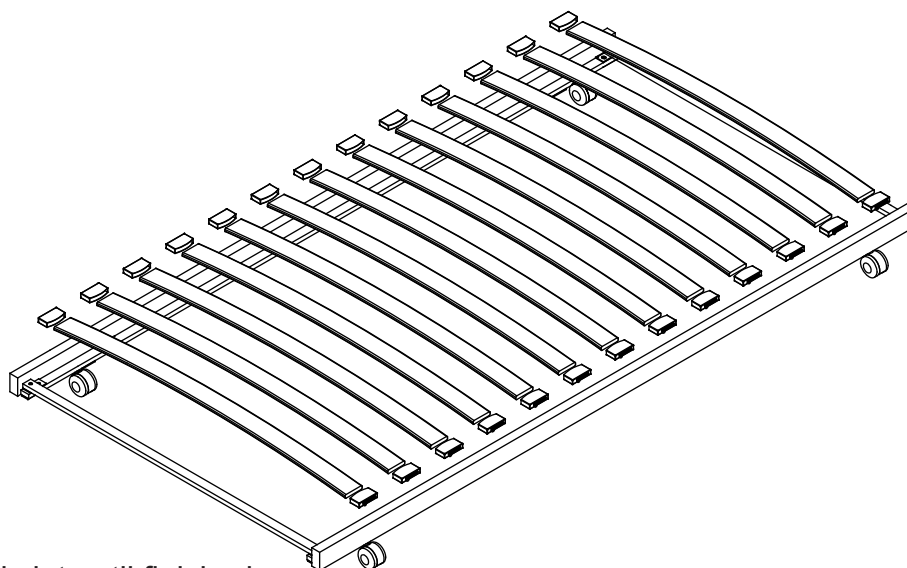


Repeat for every bed slat until finished.

## Step 5



1 x Allen Key

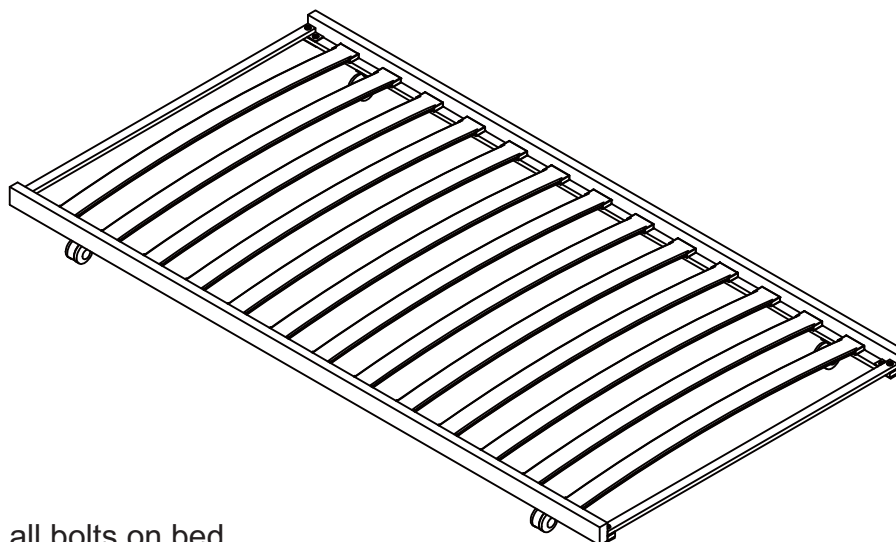

IMPORTANT: Fully tighten all bolts on bed.

**The job is now complete!**  
In the interest of our environment  
Please dispose of all packaging thoughtfully.