



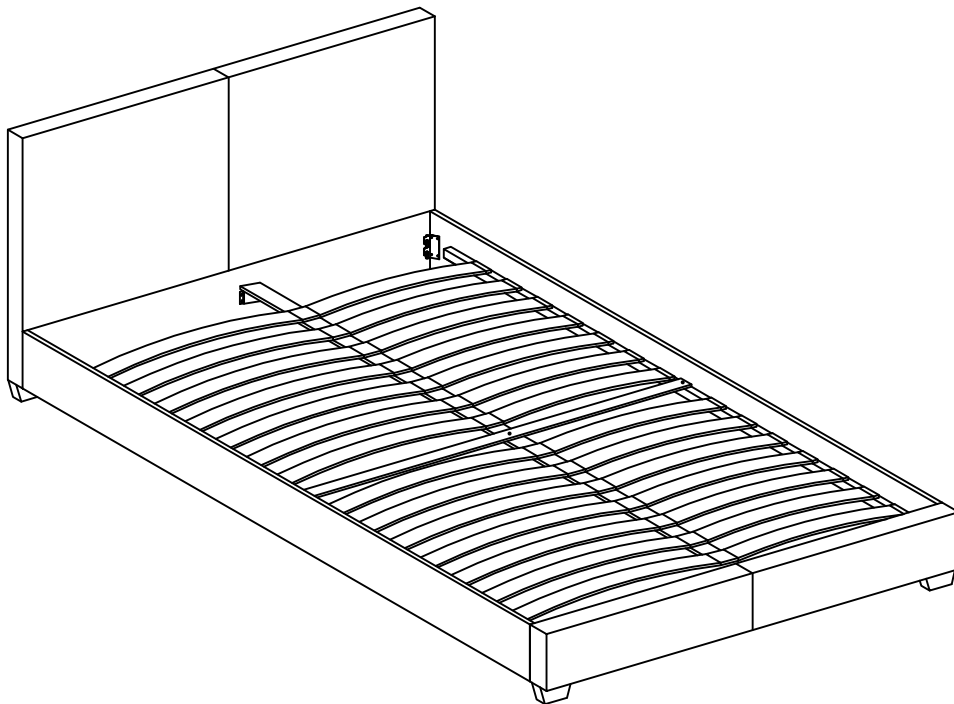

Version 1.1

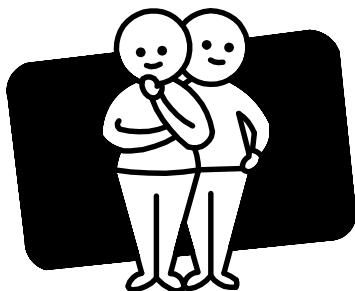

TWO PEOPLE



REQUIRED

BONDI

QUEEN BED

www.fantasticfurniture.com.au

www.fantasticfurniture.com.au



PAGE 1

Enjoy

Your purchase From
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools.
Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

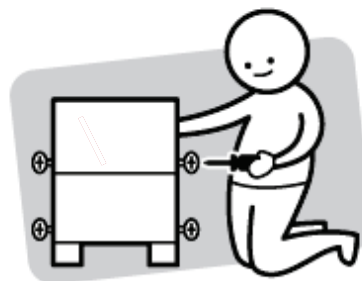

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.


What you need

to assemble the product




DO NOT USE



Other tools you need
Phillips head screwdriver

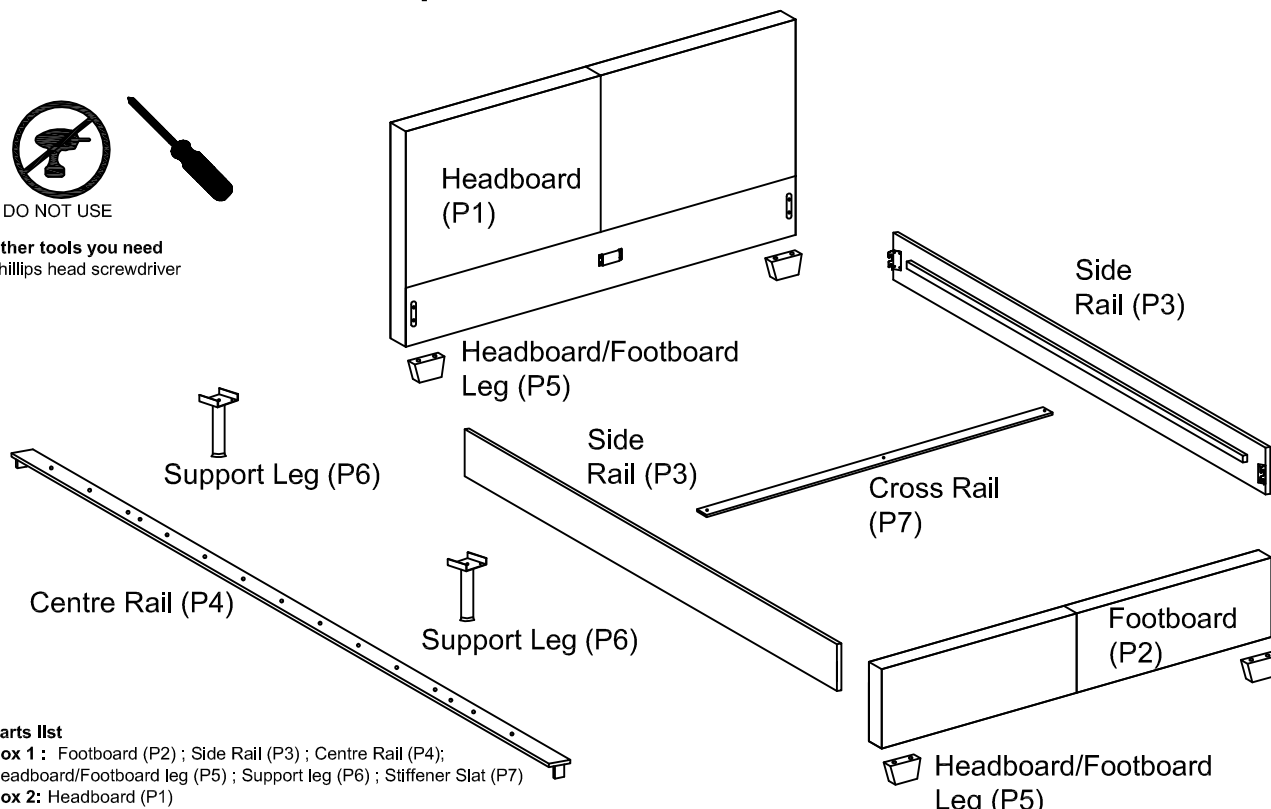


28 x End Connectors

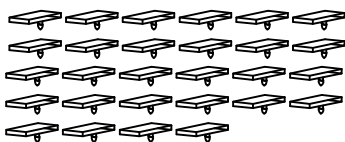

14 x Center Connectors

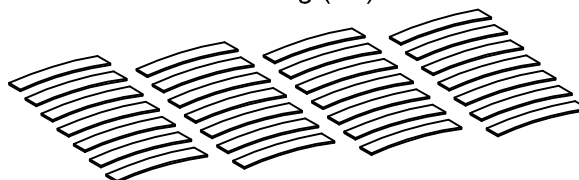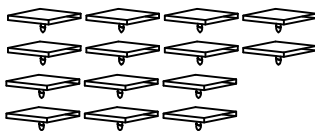

28 x Fantastic Furniture
Comfort Slat™ Queen



2 x Bolt
(H1)




1 x M5 x 70mm
(H2)




1 x M4 x 65mm
(H3)




4 x Tiny Screw 16 mm
(H4)



2 x Small Screw 25mm
(H5)




3 x Medium Screw 38 mm
(H6)



8 x Large Screw 50 mm
(H7)

Please make sure you have all these parts before you start

Step 1

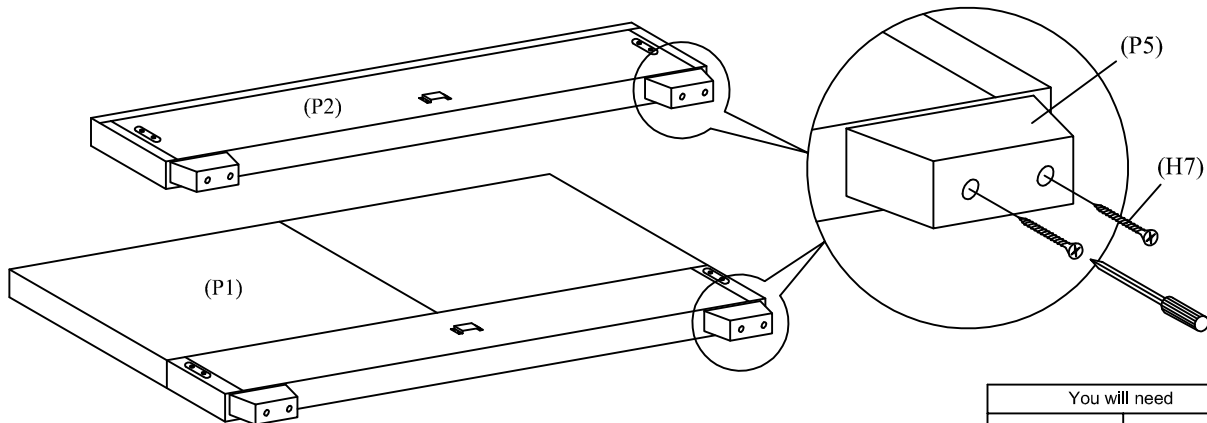


You will need	
8 x Large Screw 50mm (H7)	Phillips head screwdriver

Attach legs (P5) to the bottom of headboard (P1) and footboard (P2) with 8 x large screw (H7).


Step 2

TWO PEOPLE

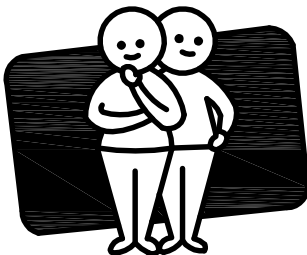


REQUIRED

You will need
1 x M4 x 70mm (H2)

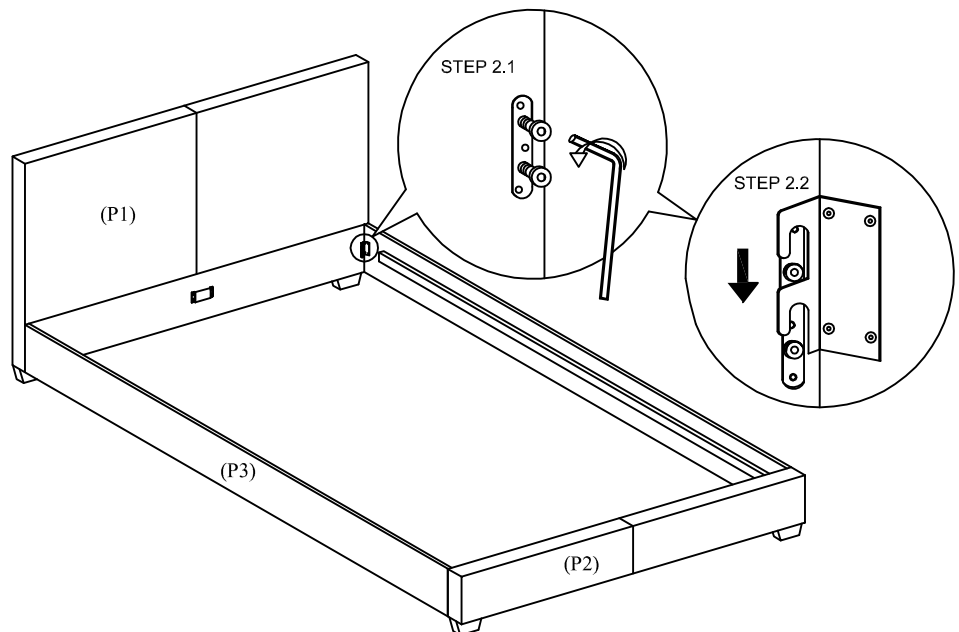


Loosen the bolts about 5mm by using Allen key (H2) as shown. Then attach side rail (P3) to headboard (P1) and footboard (P2) by slotting the bracket over the bolt as shown. No need to tighten bolts until step 6.

Step 3

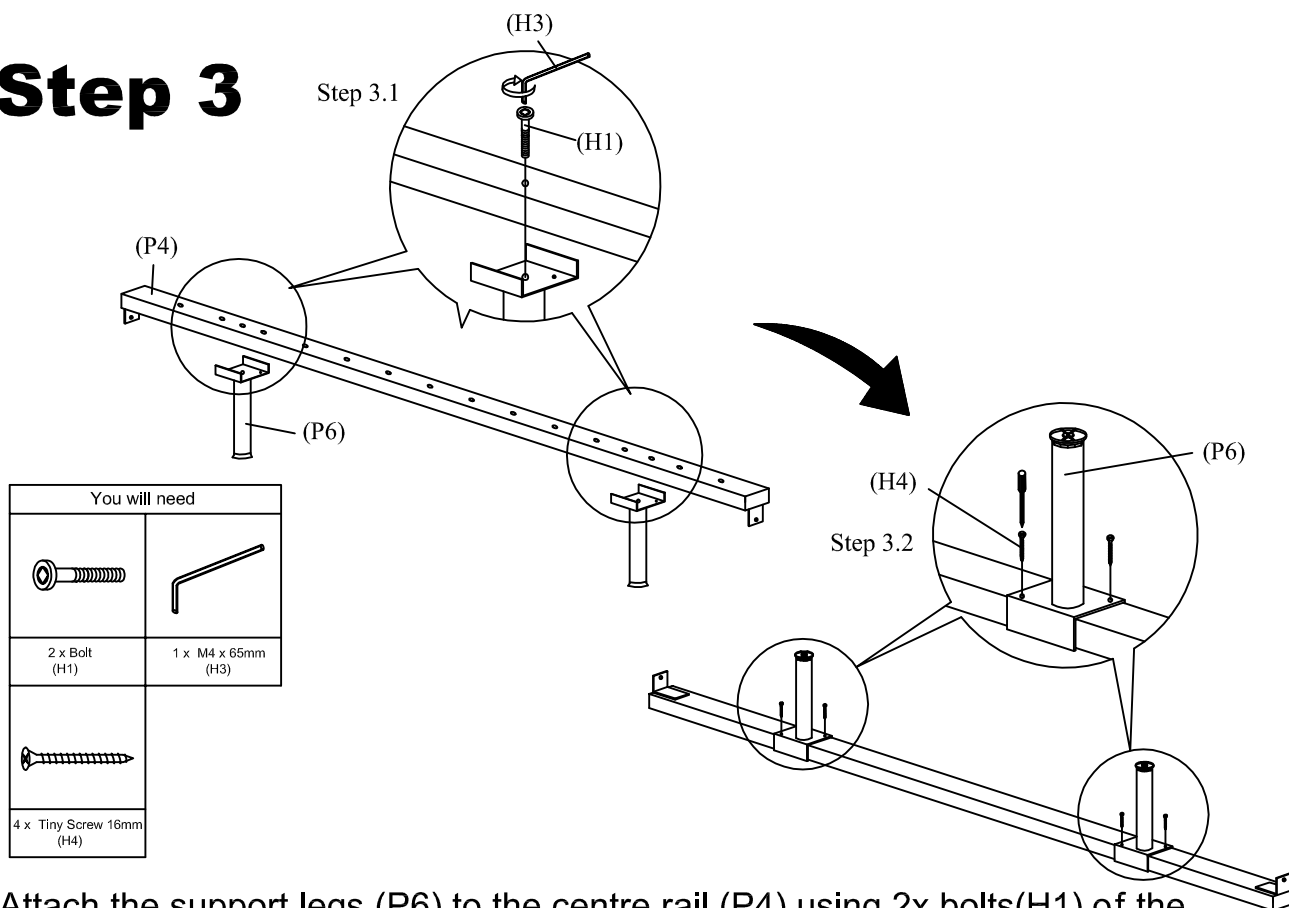

Attach the support legs (P6) to the centre rail (P4) using 2x bolts(H1) of the bed as shown.

Step 4

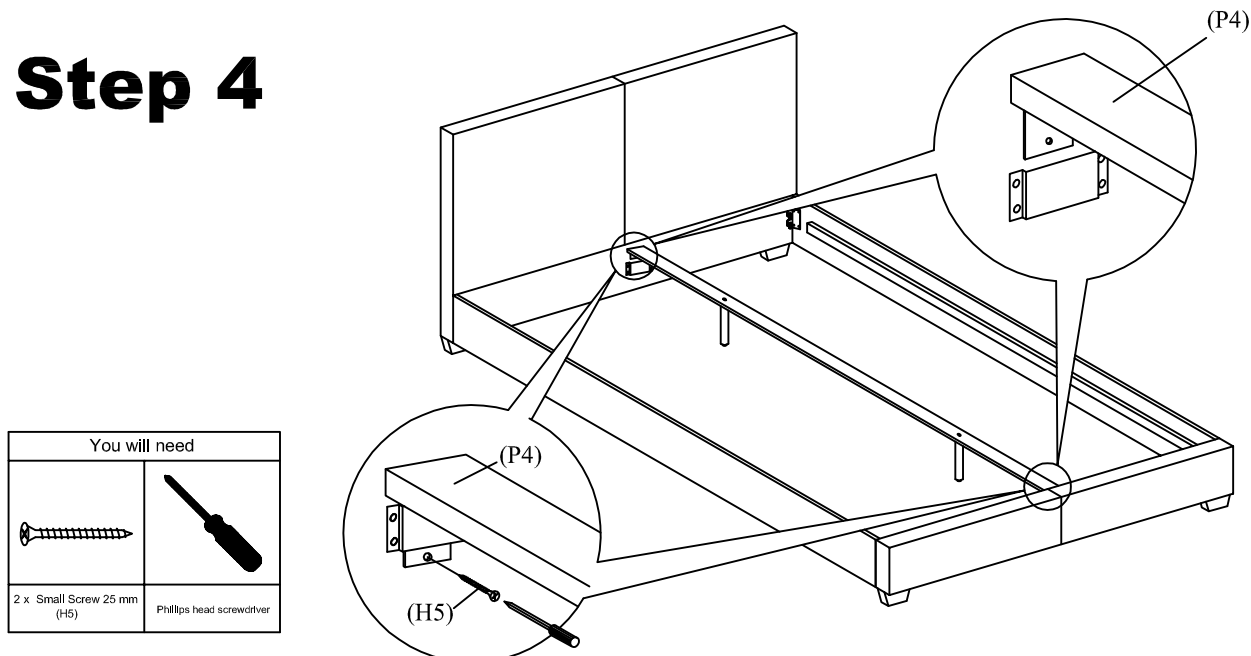





Slot the centre rail (P4) into the bracket on the headboard (P1) and footboard(P2). Rotate 3/4 screws (H5) using screw driver (not included) to the headboard (P1) and footboard (P2) . No need to tighten screws until step 6.

Step 5

1




You will need	
	
28 x End Connectors	14 x Center Connectors
	
28 x Fantastic Furniture Comfort Slat™ Queen	




Push 2 End Connectors, 2 Fantastic Furniture ComfortSlat™ Queen and a Centre Connector together.

2

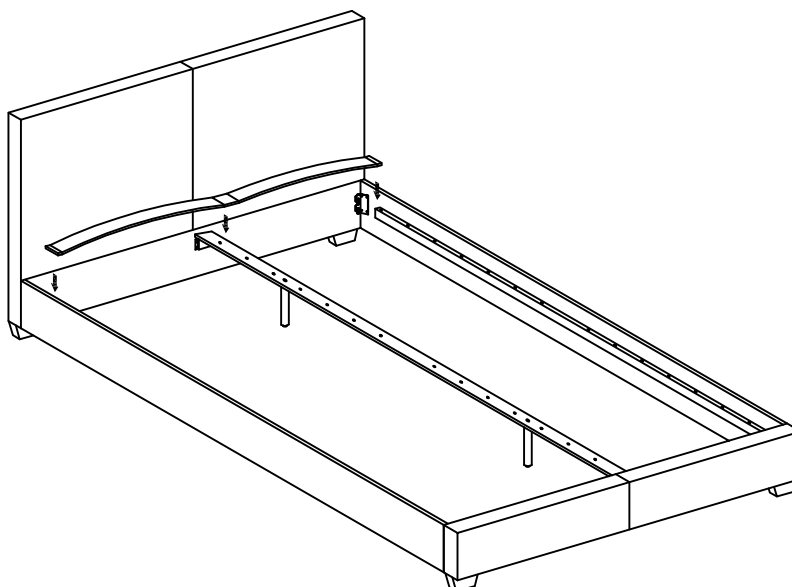


Insert the full slat into the side rail and centre rail one by one.

3

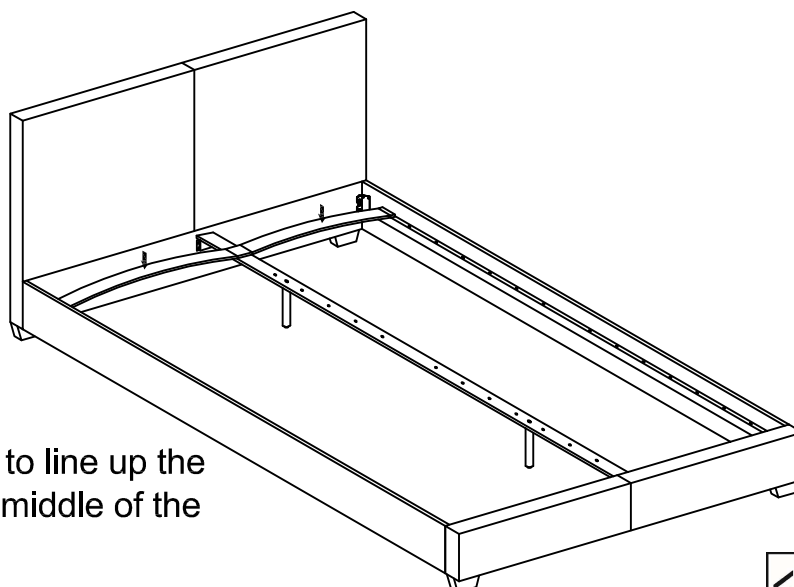


Sometimes it makes it easier to line up the hole if you press down in the middle of the slat to flatten it out.

4

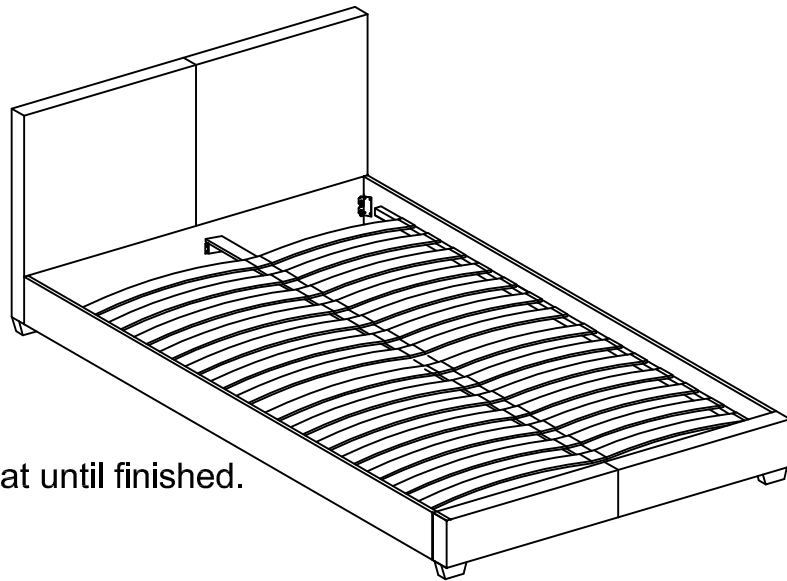




Repeat for every bed slat until finished.


Step 6

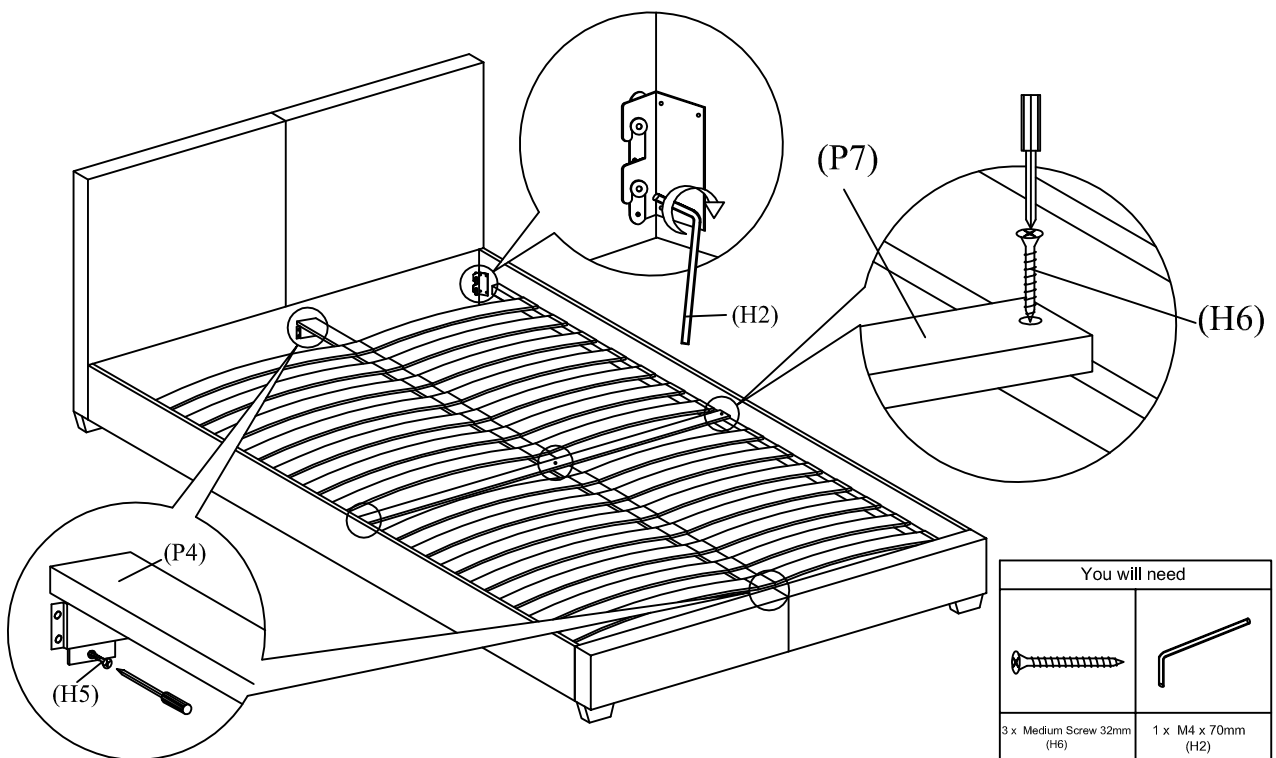

Make sure the bed frame is square, then attach the cross rail (P7) to the centre of side rails (P3) and centre rail (P4) using medium screw (H6). Now tighten all the bolts on the corner bracket and tighten screws on the headboard (P1) and footboard (P2).

You will need	
	
3 x Medium Screw 32mm (H6)	1 x M4 x 70mm (H2)
	
Phillips head screwdriver	

Step 7

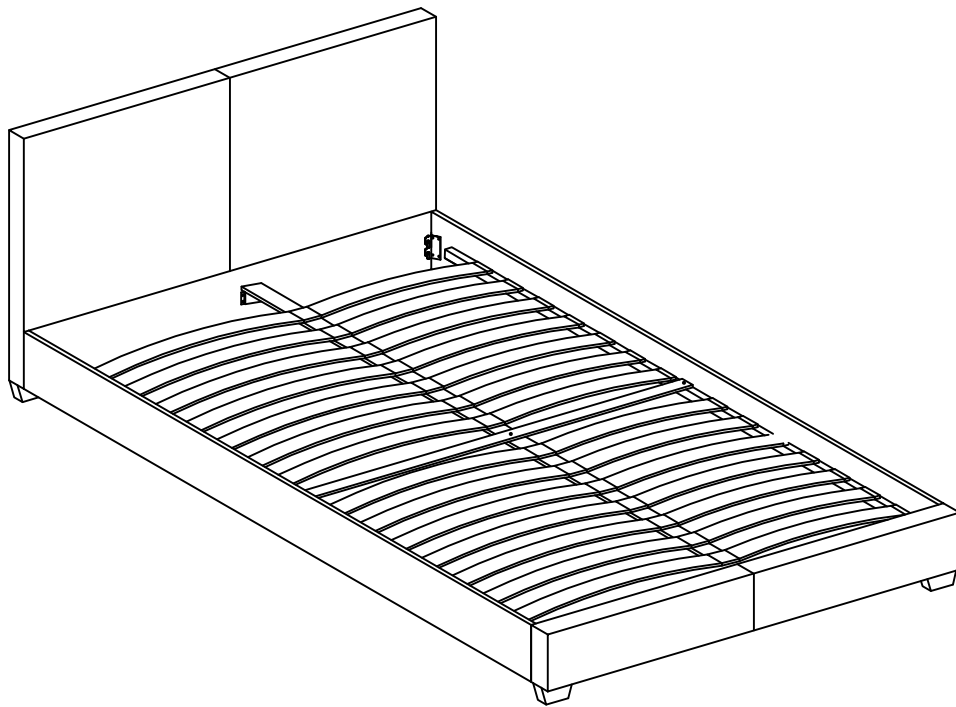

Job Complete

In the interest of our environment please dispose of all packaging thoughtfully.