


Version 1.0





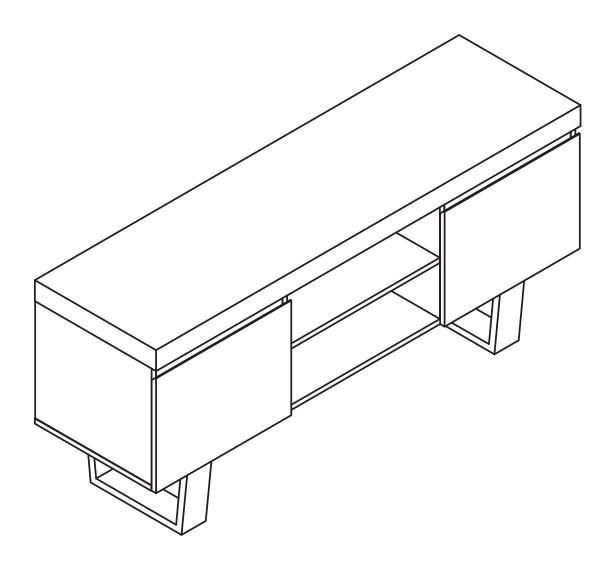

Secure it!

Reduce the risk of furniture tip-over accidents





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY OR DEATH.

To avoid any serious or fatal injury, a wall strap has been provided with this product to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

To reduce the risk of furniture tipover:

• Do not allow children to stand, climb or hang on furniture. It may topple and cause serious injury or death.




- Do not place toys or other child appealing items on top of this furniture, and place heaviest items towards the bottom of the furniture.
- Do not open more than one drawer at the time.
- Anchoring this product to a wall or other suitable surface is recommended. Check anchors regularly.
- · Always anchor your TV for safety.

Wall attachment guide



For plasterboard (without available wood stud)

Securing method:Self drilling plasterboard anchor.

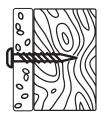

For plasterboard (with available wood stud)

Securing method: Screw inserted directly into stud.





For masonry wall

Securing method: Solid wall: Plug with screw Hollow wall: Spring toggle

Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture




Assembly Checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

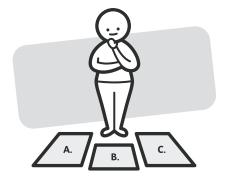

Identify and lay out all of the components before you begin assembly.

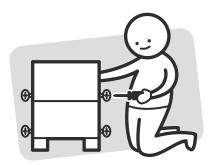

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product







Other tools you need: Phillips head screwdriver; Hammer


Parts list

Unit Top(P1)
Unit Bottom(P2)
Right Panel(P3)
Left Panel(P4)
M-Left Panel(P5)
M-Right Panel(P6)
Middle Shelf(P7)
2 x Support Rail(P8)
M-Back Panel(P9)
2 x Back Panel(P10)
Left Door(P11)
Right Door(P12)

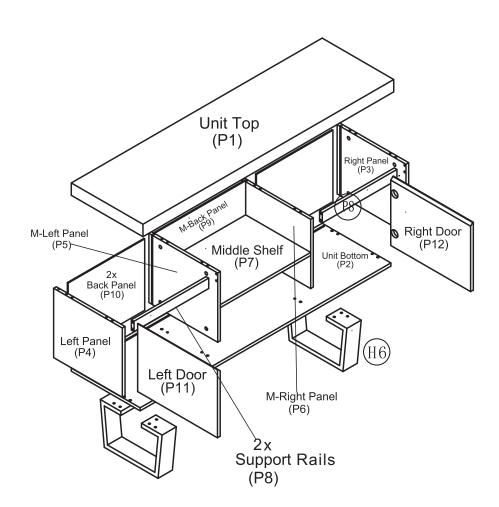


Hardware Pack

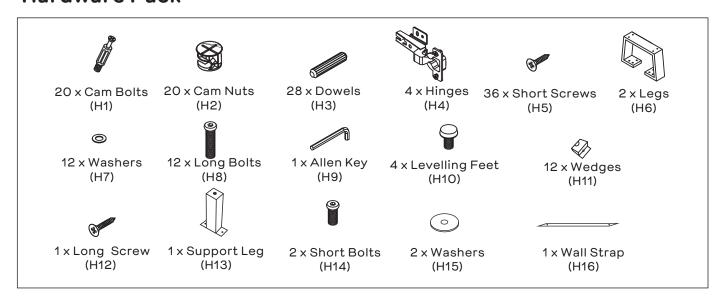

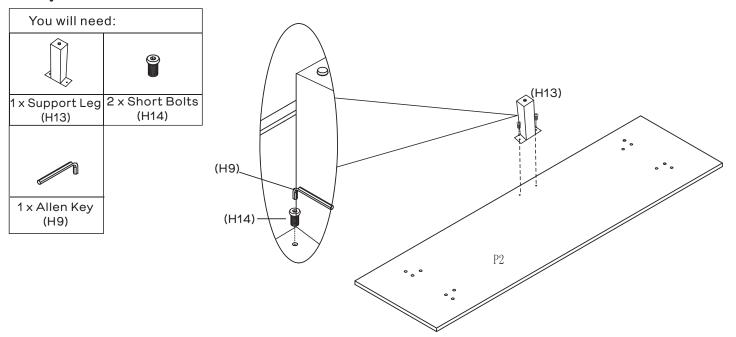


Using 2 x Short Bolts(H14) secure the Support Leg(H13) to the Unit Bottom(P2) by tightening with Allen Key(H9).

Step 2

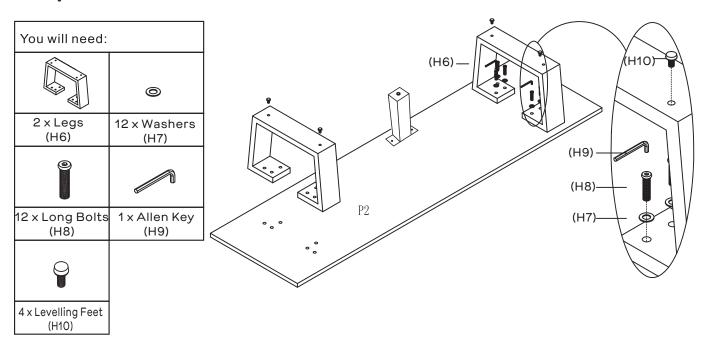


Using 6 x Washers(H7) and 6 x Long Bolts(H8) secure the Table Leg(H6) to the Unit Bottom(P2) by tightening with Allen Key(H9) Repeat the previous step to attach the second Table Leg(H6). Screw in 4 x Levelling Feet(H10) to the bottom of the Table Legs(H6) Ensure the Levelling Feet are screwed in firmly. If your flooring surface is uneven adjust the Levelling Feet accordingly.

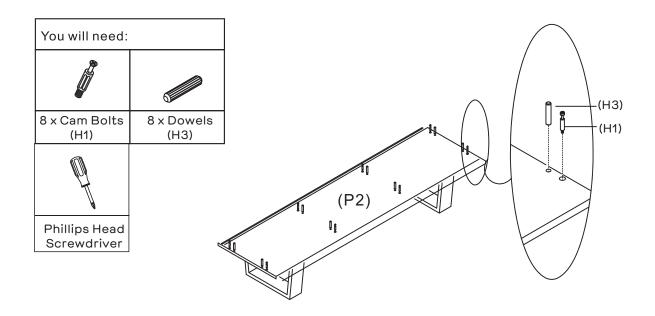

Insert 8 x Dowels(H3) into Unit Bottom(P2) and secure 8 x Cam Bolts(H1) into Unit Bottom(P2) by tightening with the Phillips Head Screwdriver.


Step 4

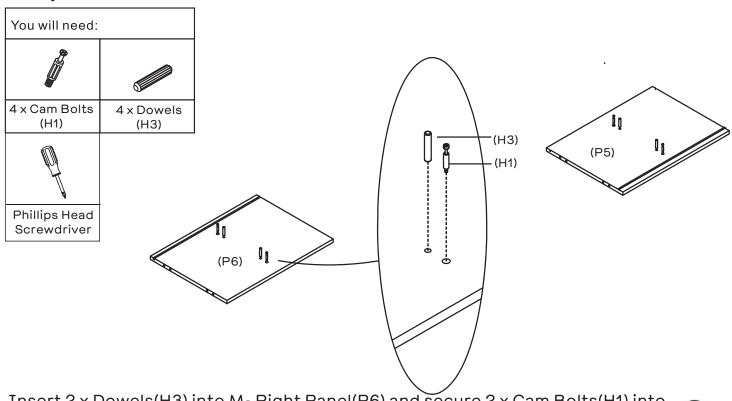

Insert 2 x Dowels(H3) into M- Right Panel(P6) and secure 2 x Cam Bolts(H1) into M-Right Panel(P6) by tightening with the Phillips Head Screwdriver. Repeat previous step for M-Left Panel(P5). fantasticfurniture.com.au


Fantastic Furniture

Page 7

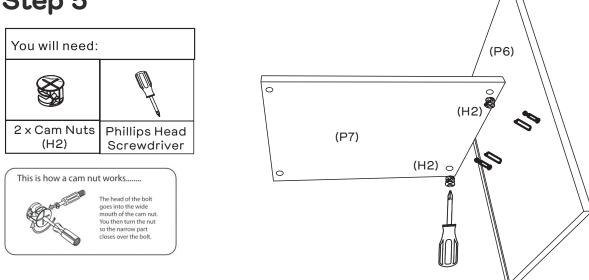


Insert 2 x Cam Nuts(H2) into Middle Shelf(P7) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Middle Shelf(P7) to M-Right Panel(P6) by tightening the Cam Nuts(H2) with the Phillips Head Screwdriver

Step 6

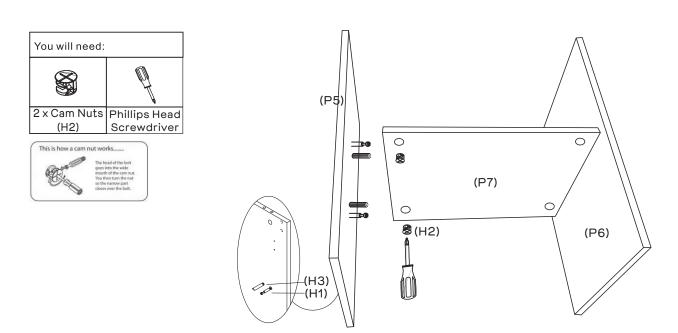


Insert 2 x Cam Nuts(H2) into Middle Shelf(P7) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Middle Shelf(P7) to M-Left Panel(P5) by tightening the Cam Nuts (H2) with the Phillips Head Screwdriver

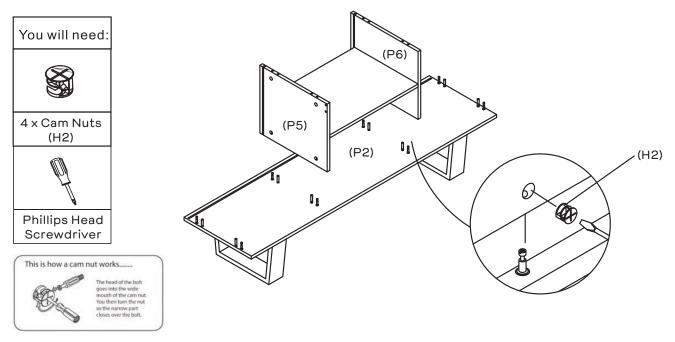


Insert 4 x Cam Nuts(H2) into M-Left Panel(P5) and M-Right Panel(P6). Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Unit Bottom(P2) to M-Left Panel(P5) and M-Right Panel(P6) by tightening the Cam Nuts(H2) with the Phillips Head Screwdriver

Step 8

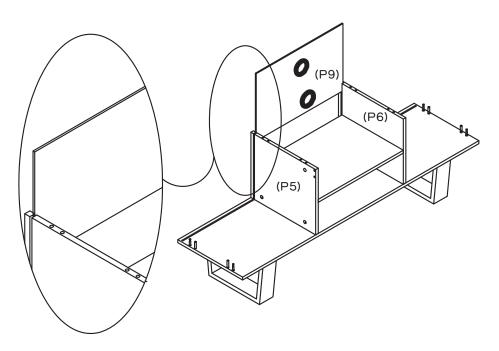


Slide M-Back Panel(P9) into the groove of M-Left Panel(P5) and M-Right Panel(P6) as shown.



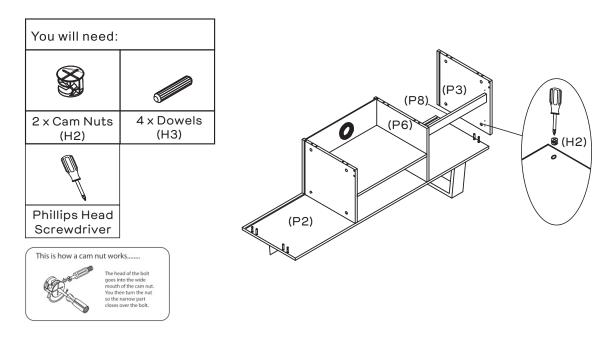


Insert 2 x Dowels(H3) into M-Right Panel(P6) and Support Rail(P8) Insert 2 x Dowels(H3) into Right Panel(P3) and Support Rail(P8) Insert 2 x Cam Nuts(H2) into Right Panel(P3). Rotate the cam nuts so the arrows point towards the incoming cam bolts. Attach Right Panel(P3) to Unit Bottom(P2) by tightening the Cam Nuts(H2) with the Phillips Head Screwdriver.

Step 10

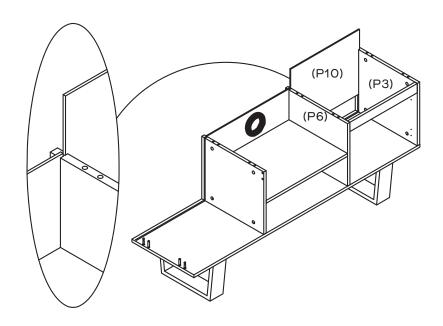


Slide one Back Panel(P10) into the groove of M-Right Panel(P6) and Right Panel(P3) as shown.



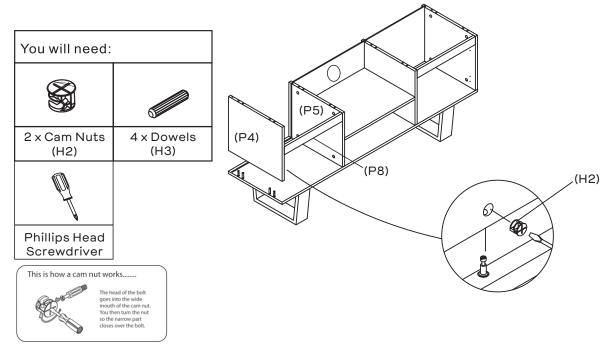


Insert 2 x Dowels(H3) into M-Left Panel(P5) and Support Rail(P8)
Insert 2 x Dowels(H3) into Left Panel(P4) and Support Rail(P8)
Insert 2 x Cam Nuts(H2) into left Panel(P4).Rotate the cam nuts so the arrows point towards the incoming cam bolts.
Attach Left Panel(P4) to Unit Bottom(P2) by tightening the Cam Nuts(H2) with the Phillips Head Screwdriver.


Step 12

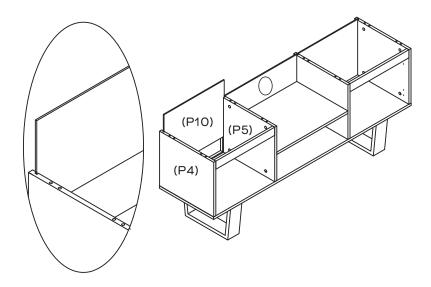

Slide another Back Panel(P10) into the groove of M-left Panel(P5) and left Panel(P4) as shown.

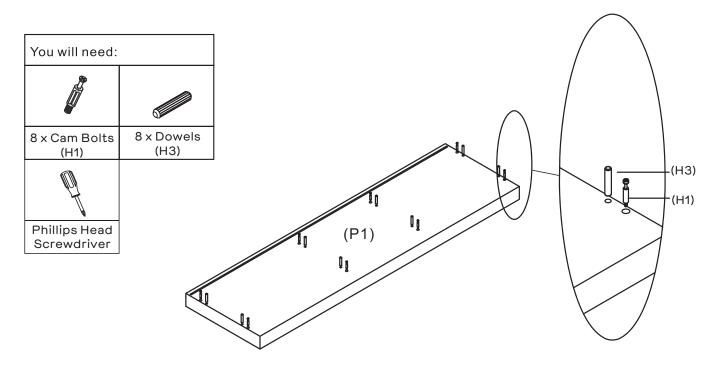



Insert 8 \times Dowels(H3) into Unit Top(P1) and secure 8 \times Cam Bolts(H1) into Unit Top(P1) by tightening with the Phillips Head Screwdriver.

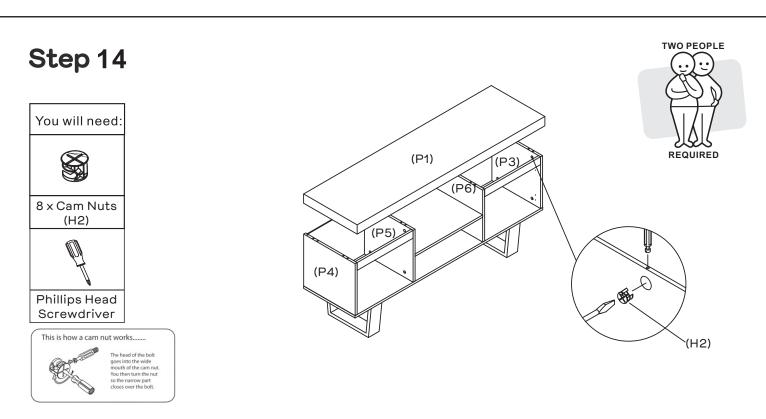

Insert 8 x Cam Nuts(H2) into Panel(P3&P4&P5&P6) as shown. Rotate the cam nuts so the arrows point towards the incoming cam bolts.


With assistance, attach Unit Top (P1) to Panel(P3&P4&P5&P6) by tightening the Cam Nuts(H2) with the Phillips Head Screwdriver

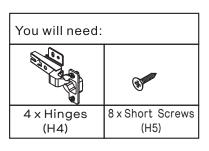

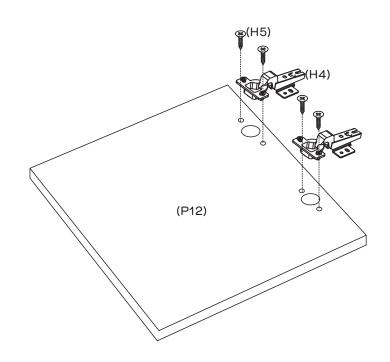


Using 4 x Short Screws(H5) to connect 2 x Hingers(H4) to Right Door(P12) Adjust the door then tighten all screws with a Phillips Head Screwdriver. Repeat previous step for Left Door(P11)

Step 16

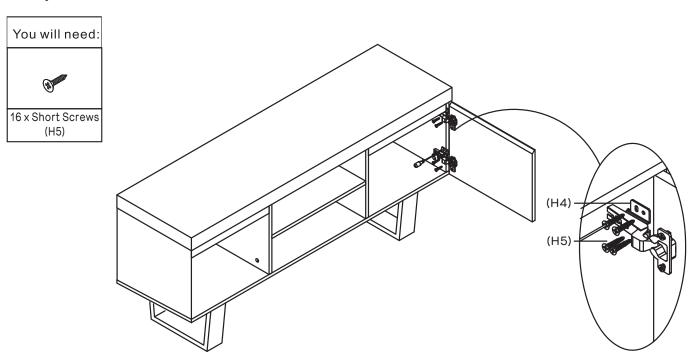


Using 8x Short Screws(H5) to connect Right Door(P12) to ENT Unit Adjust the door then tighten all screws with a Phillips Head Screwdriver. Repeat previous step for Left Door(P11)




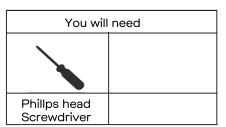

TO ADJUST YOU DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL)

STEP 17.1 Open the door.

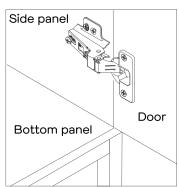


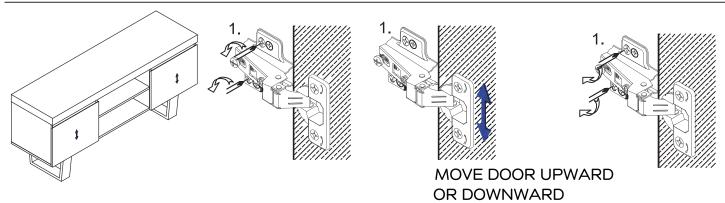


STEP 17.2 Adjust the door panels upward or downward

Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.


Tighten 2 screws in oval holes.Screw in round holes.

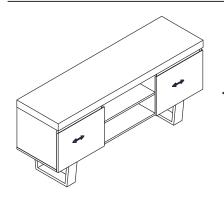


STEP 17.3 Adjust the flush between door panel and side panel

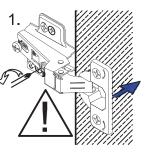


MOVE DOOR OUTWARD by turning this screw counter-clockwise

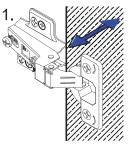


KEEP DOOR IN RIGHT POSITION

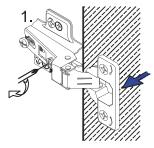


MOVE DOOR **OUTWARD** by turning this screw clockwise

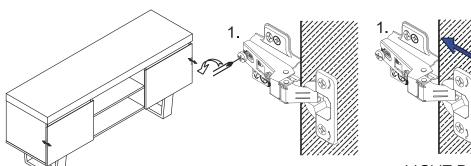

STEP 17.4 Adjust the gap between door panel and side panel

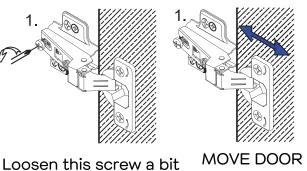


MOVE DOOR BACK OR FORTH

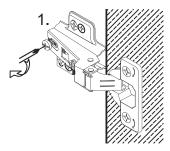


Re-tighten this screw



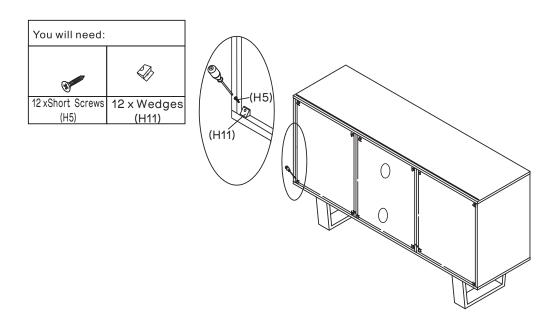

Insert 12 x Wedges(H11) into all corners of the back of the assembled unit as shown. Secure Wedges(H11) by tightening 12 x Short Screws(H5) with the Phillips Head Screwdriver.

Step 19

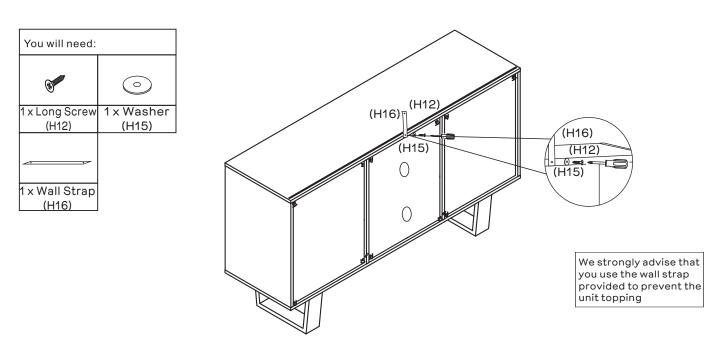

Use the Washer(H15) and Long Screw(H12) to connect the Wall Strap (H16) to the Middle of top Shelf (P1) using the Phillips head Screwdriver.







Screws and wall plugs are not provided please use appropriate fixtures for your wall.

Seek advice from a qualified trades person on how to attach this to your specific wall

With assistance, move furniture to its final position, then connect the end of Wall Strap (H17) to the wall Make sure it is firmly attached and a snug fit.

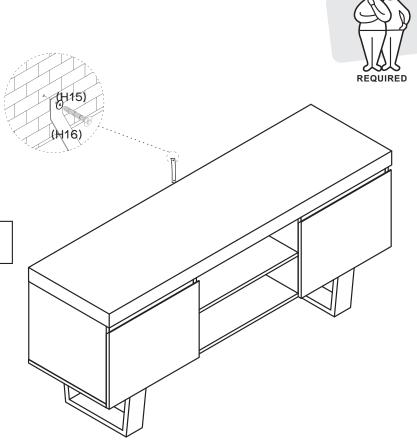

Step 21

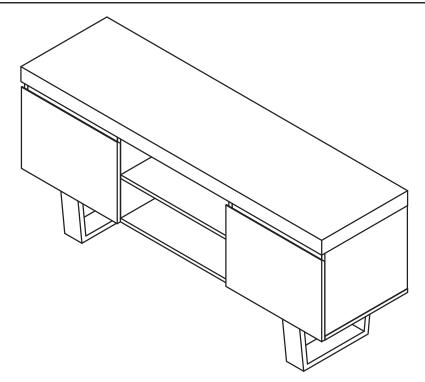

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

